

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bhagdaoe](#) /

› [Bhagdaoe Digital Camera for Kids B17 User Manual](#)

## Bhagdaoe B17

# Bhagdaoe Digital Camera for Kids B17 User Manual

Model: B17 | Brand: Bhagdaoe

## INTRODUCTION

This Bhagdaoe B17 Digital Camera is designed for young photographers, offering a user-friendly experience with advanced features. It captures high-quality photos and videos, making it an ideal tool for children, teenagers, and beginners to explore photography. The camera features a 56MP photo resolution, FHD 1080P video recording, 16X digital zoom, autofocus, and various creative filters.

## *Digital Camera for Kids*



*Image: The Bhagdaoe B17 Digital Camera, highlighting its 56MP resolution and autofocus capabilities.*

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x Bhagdaoe Digital Camera (Model B17)
- 1x Rechargeable Lithium-Ion Battery
- 1x 32GB TF Card
- 1x USB Cable (Type-C)
- 1x Lanyard
- 1x Storage Bag

- 1x User Manual



*Image: A visual representation of all items included in the camera's retail package.*

## CAMERA OVERVIEW

Familiarize yourself with the camera's buttons and ports:

*Image: A detailed diagram illustrating the location and function of each button and port on the camera.*

- **Power Button:** Turns the camera on or off.
- **Photo Button:** Press to capture a still image.
- **MIC Hole:** Microphone for audio recording during video.
- **Selfie Indicator Light:** Illuminates during self-timer mode.
- **LED Lights:** Built-in flash for low-light conditions.
- **T Button (Telephoto):** Zooms in.
- **W Button (Wide-angle):** Zooms out.
- **Up Key:** Navigation or specific function in menus.
- **OK Key:** Confirms selections or starts/stops video recording.
- **Right Key:** Navigation or specific function in menus.
- **Menu Keys:** Accesses camera settings and options.
- **Filter Shortcut Key:** Quickly applies creative filters.
- **Battery Cover Push and Twist:** Mechanism to open the battery compartment.
- **Left Key:** Navigation or specific function in menus.
- **Down Key:** Navigation or specific function in menus.
- **Hanging Rope Hole:** Attachment point for the lanyard.
- **Horn Hole:** Speaker for audio playback.
- **USB Port:** For charging and data transfer.


## SETUP

### 1. Battery and Memory Card Installation

Before first use, install the battery and the provided 32GB TF card.

1. Locate the battery cover on the bottom of the camera. Push and twist the cover to open it.

2. Insert the included Lithium-Ion battery into the compartment, ensuring the correct polarity (+/-) as indicated inside.
3. Insert the 32GB TF card into the designated slot next to the battery, with the metal contacts facing down.  
Push until it clicks into place.
4. Close the battery cover securely.

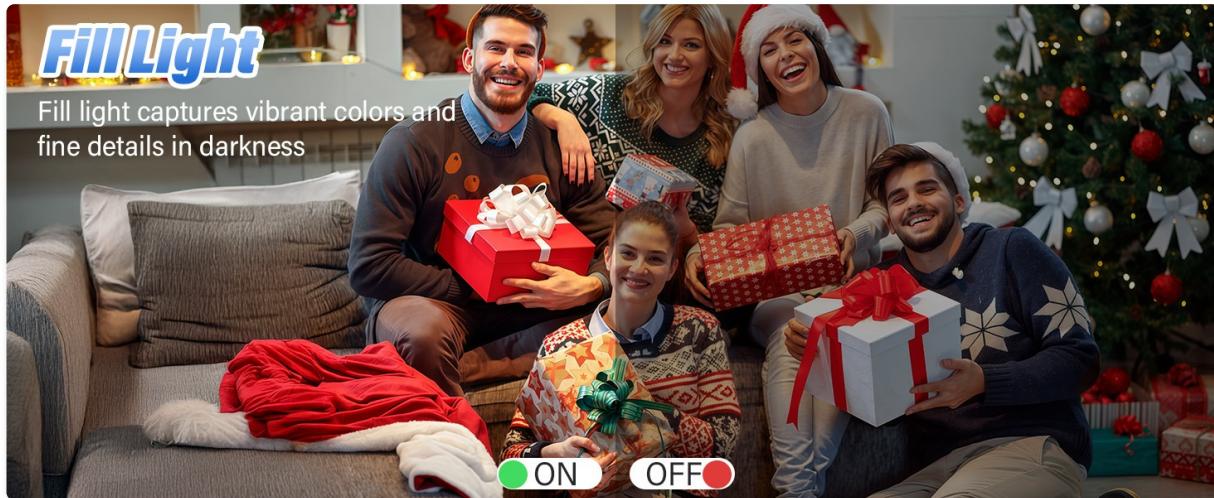

*Image: A step-by-step guide showing how to correctly open the battery cover, install the battery, insert the memory card, and close the cover.*

## 2. Charging the Camera

To charge the camera, connect it to a power source using the provided USB Type-C cable.

- Plug the small end of the USB cable into the camera's USB port.
- Plug the larger end into a USB wall adapter (not included) or a computer's USB port.
- The indicator light will show red during charging and turn off when fully charged.



*Image: The camera connected to a laptop via USB-C cable, illustrating its charging and data transfer capabilities.*

## OPERATING INSTRUCTIONS


### Power On/Off

Press and hold the **Power Button** to turn the camera on or off.

### Taking Photos

To capture a still image:

1. Aim the camera at your subject.
2. Half-press the **Photo Button** to activate autofocus. The camera will adjust focus for a clear image.
3. Fully press the **Photo Button** to take the picture.

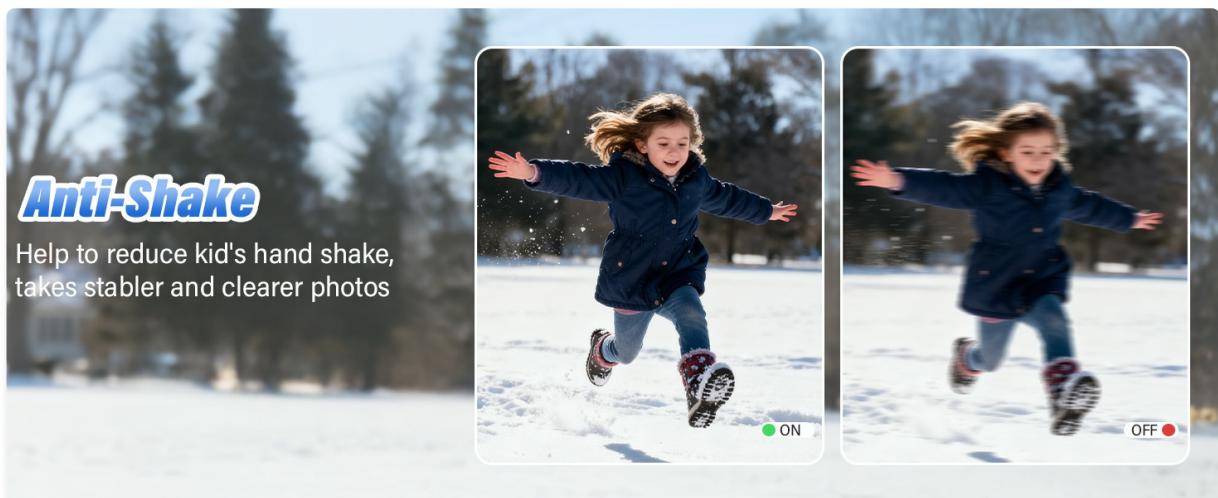

*Image: A visual comparison showing the effect of the autofocus function, achieving a sharp image.*

## Recording Videos

To record a video:

1. Switch the camera to video mode (if applicable, via the Menu or a dedicated button).
2. Press the **OK Key** to start recording. A red indicator will typically appear on the screen.
3. Press the **OK Key** again to stop recording.



## 16X Digital Zoom


Capture stunning panoramas or high-quality close-ups

*Image: A child using the camera to record video, demonstrating its 1080P Full HD video capability.*

## Zoom Function

Use the **T** and **W** buttons to adjust the 16X digital zoom.

- Press **T** to zoom in on distant subjects.
- Press **W** to zoom out for a wider view.

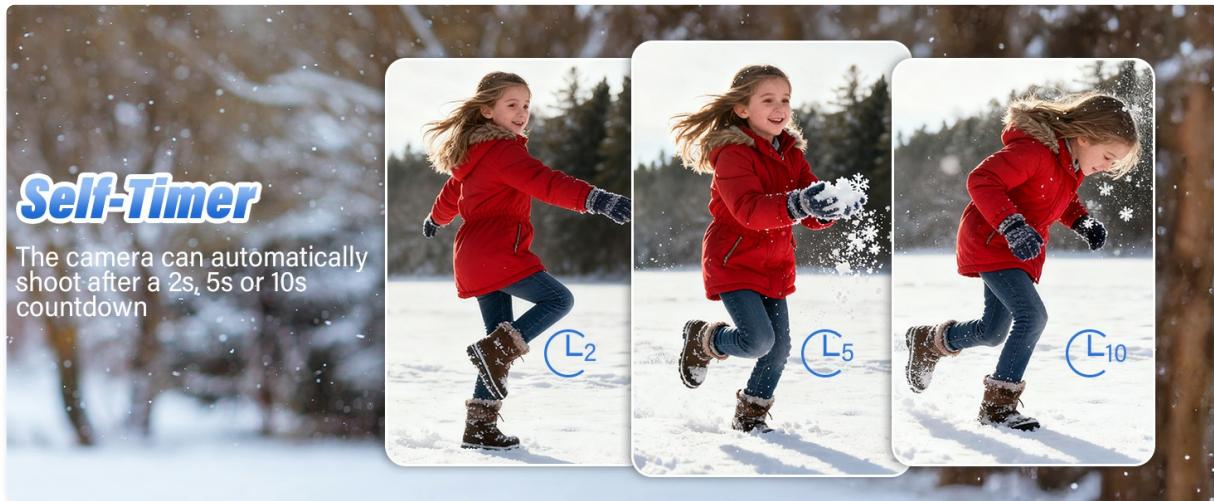

*Image: A series of images demonstrating the camera's 16X digital zoom, from wide to telephoto.*

## Special Features

- **Anti-Shake:** This feature helps to reduce blur caused by camera movement, resulting in clearer photos.



*Image: A comparison showing the difference between photos taken with and without the anti-shake function enabled.*

- **Self-Timer:** Set a delay of 2, 5, or 10 seconds before a photo is taken, allowing you to get into the shot.



*Image: A sequence of images demonstrating the 2, 5, and 10-second self-timer options.*

- **Continuous Shooting:** Capture a rapid sequence of three photos with a single press, ideal for action shots.




*Image: Three consecutive shots demonstrating the continuous shooting feature, capturing movement.*

- **Fill Light:** The built-in flash provides additional illumination for vibrant colors and fine details in dark environments.



*Image: A scene demonstrating the effect of the fill light, enhancing visibility and color in low-light conditions.*

- **Creative Filters & Photo Effects:** Apply 21 different filters and adjust tones to add flair and unique styles to your photos.

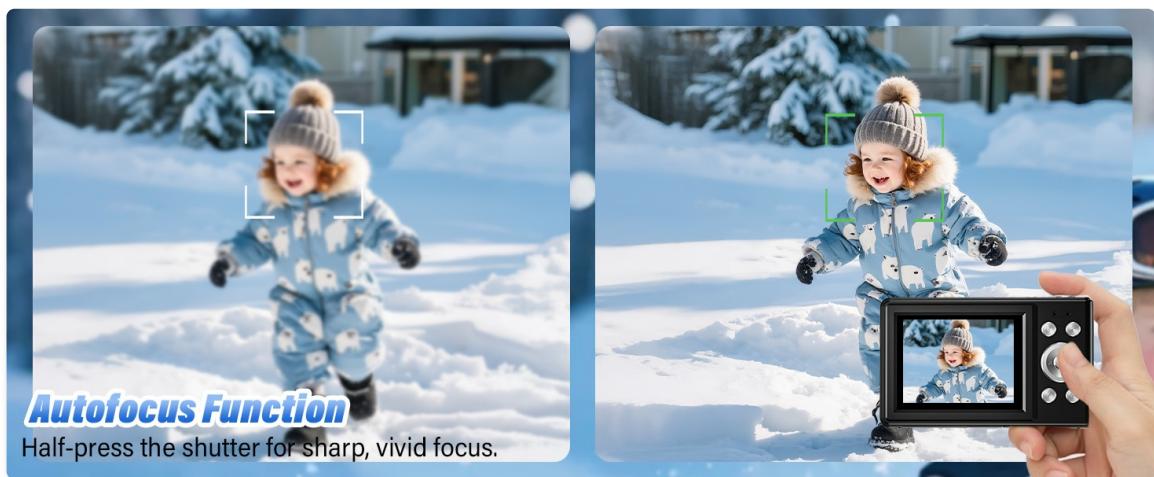

*Image: Examples of different filter effects, including normal, black and white, red, and retro.*

- **Face Detection:** The camera can detect faces in the frame to optimize focus and exposure.
- **Adjustable White Balance, ISO, and Metering:** Customize these settings via the menu for specific lighting conditions.

## Transferring Files

To transfer photos and videos to a computer:

1. Connect the camera to your computer using the provided USB Type-C cable.
2. Turn on the camera. It should appear as a removable disk or device on your computer.
3. Open the camera's folder and copy the desired files to your computer.

## HOW TO INSTALL THE BATTERY CORRECTLY



Note: Make sure the battery is inserted in the correct direction as reversed installation will prevent charging.

*Image: The camera connected to a laptop, illustrating the process of transferring media files.*

## MAINTENANCE

Proper care ensures the longevity and performance of your camera:

- **Cleaning the Lens and Screen:** Use a soft, lint-free cloth specifically designed for optics. Do not use abrasive materials or harsh chemicals.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid extreme temperatures. If the camera will not be used for an extended period, remove the battery.
- **Storage:** Keep the camera in its storage bag or a protective case to prevent scratches and dust accumulation. Avoid exposing the camera to moisture or direct sunlight for prolonged periods.

## TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Solution
Camera does not turn on.	Ensure the battery is correctly installed and fully charged. Try charging the camera for at least 30 minutes.
Photos are blurry.	Ensure the autofocus has locked onto the subject (half-press the photo button). Check if the lens is clean. Enable the Anti-Shake feature in settings.
Memory card error.	Ensure the TF card is inserted correctly. Try reformatting the card via the camera's menu (this will erase all data). Use only compatible TF cards.
Cannot transfer files to computer.	Ensure the USB cable is securely connected to both the camera and the computer. Verify the camera is powered on. Try a different USB port or cable.

If these solutions do not resolve the issue, please refer to the Warranty and Support section.

## SPECIFICATIONS

Key technical specifications for the Bhagdaoe B17 Digital Camera:

Feature	Detail
Model Name	B17
Photo Resolution	56 Megapixels (Max)
Video Resolution	FHD 1080P (30 FPS)
Digital Zoom	16x
Image Stabilization	Digital
Display Screen	2.4-inch LCD
Photo Sensor Technology	CMOS
Autofocus	Yes (Hybrid)
Memory Storage	Supports up to 32GB TF Card (included)
Battery Type	Lithium Ion
Connectivity	USB
Flash	Built-In (Fill Flash, On/Fill modes)
Special Features	Time-lapse, Face Detection, Self-Timer, Burst Mode, 21 Creative Filters, Anti-Shake
UPC	781434163188

## WARRANTY AND SUPPORT

**Warranty:** We offer a one-year satisfaction warranty with a hassle-free replacement policy. This warranty covers manufacturing defects and ensures your product functions as intended.

**Support:** For any camera issues, concerns, or warranty claims, please contact our support center. If a malfunction occurs within the warranty period, contact the store where you purchased the product or reach out to us directly via email.

**Support Email:** [mrstesunn@hotmail.com](mailto:mrstesunn@hotmail.com)

## PRODUCT VIDEO DEMONSTRATION

*Video: A demonstration of the Bhagdaoe B17 Digital Camera, showcasing its ease of use, 56MP photo capability, and 1080P video recording. The video highlights the camera's compact size and simple button layout, making it suitable for children and beginners.*