



Manuals.plus /

› **4 EVER WINNER /**

› 4 EVER WINNER Fireplace TV Stand with Sliding Barn Door, 23-inch Electric Fireplace, Model FTS0801 User Manual

4 EVER WINNER FTS0801

4 EVER WINNER Fireplace TV Stand with Sliding Barn Door

MODEL: FTS0801

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your 4 EVER WINNER Fireplace TV Stand, Model FTS0801. Please read all instructions carefully before assembly and use to ensure safe and proper functionality of the product.



Image: The 4 EVER WINNER Fireplace TV Stand, showcasing its off-white finish, wooden top, central electric fireplace, and sliding barn doors.

Key Features:

- **Classic Farmhouse Style:** Features X-shaped decorative cabinet doors and a classic wood grain finish, designed to complement various interior styles.
- **23-inch Electric Fireplace:** Utilizes LED technology with 3 flame brightness settings for a realistic burning flame effect. Includes a remote control for convenient operation.
- **Ample Storage Space:** A spacious desktop accommodates TVs up to 65 inches. Two cabinets with adjustable shelves provide storage for media devices, DVDs, and other items.
- **Stable and Sturdy Construction:** Constructed from MDF for stability and strength, supporting up to 200 pounds on the top surface.
- **Safety Features:** The electric fireplace includes overheat protection and an automatic shutdown timer for safe use.

SAFETY INFORMATION

Please adhere to the following safety guidelines to prevent injury or damage to the product.

General Safety:

- Keep children and pets away from the fireplace unit, especially when it is operating.
- Do not sit or stand on the TV stand.
- Ensure the TV stand is placed on a flat, stable surface to prevent tipping.
- Do not overload the shelves or the top surface beyond the specified weight capacity (200 lbs for the top).

Electrical Safety (Electric Fireplace):

- Plug the fireplace directly into a grounded 120V AC outlet. Do not use extension cords or power strips.
- Ensure the power cord is not pinched or routed under the unit or heavy objects.
- Do not operate the fireplace if the cord or plug is damaged.
- Keep combustible materials (furniture, curtains, bedding, paper, etc.) at least 3 feet (0.9 meters) from the front of the fireplace.
- Do not block the air vents of the fireplace.
- Unplug the fireplace before cleaning or performing any maintenance.

PACKAGE CONTENTS

The 4 EVER WINNER Fireplace TV Stand is typically delivered in two separate packages: one for the TV stand components and one for the electric fireplace insert. Please verify all parts are present before beginning assembly.



Image: Illustration depicting the delivery of the TV stand and electric fireplace in two separate packages.

Expected Components:

- TV Stand panels (top, bottom, sides, back, shelves, barn doors)
- Hardware pack (screws, dowels, cam locks, handles, sliding door rails)
- Electric Fireplace insert
- Remote control for fireplace
- Instruction manual

If any parts are missing or damaged, please contact 4 EVER WINNER customer support for assistance.

ASSEMBLY INSTRUCTIONS

Assembly is required for the TV stand. It is recommended to have two people for assembly. Follow the detailed instructions provided in the separate assembly guide included with your product. Do not use power tools, as this may strip screws or damage components.

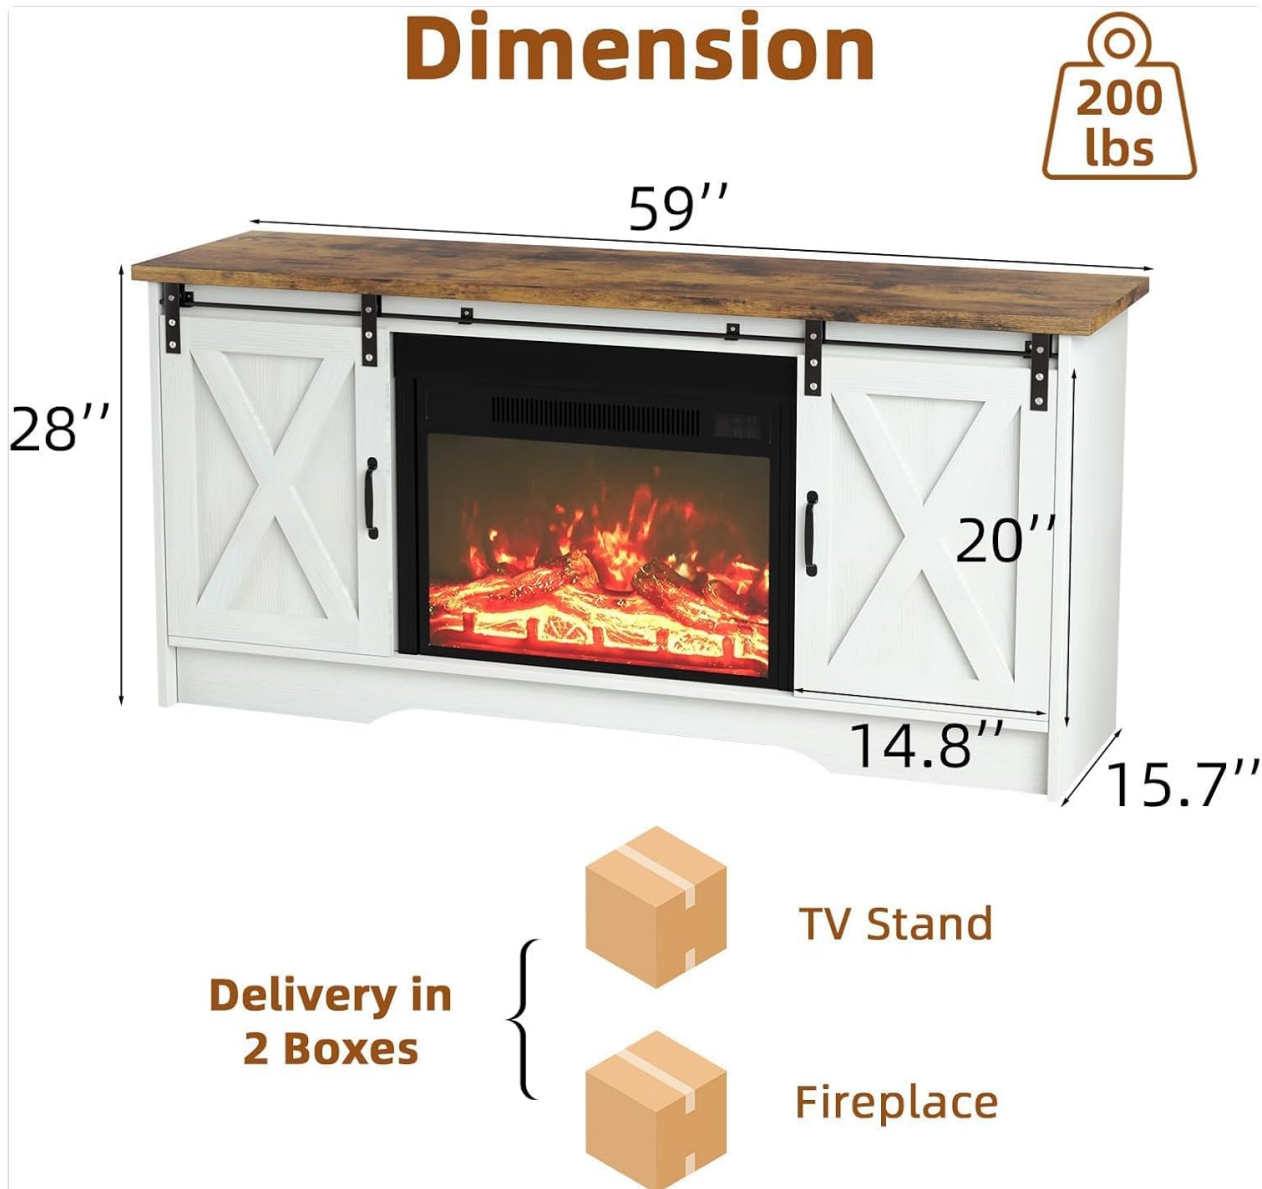


Image: Dimensional diagram of the TV stand, illustrating its width, height, depth, and maximum weight capacity.

General Assembly Steps:

1. Unpack all components and verify against the parts list.
2. Identify each panel and hardware piece.
3. Assemble the main frame of the TV stand according to the step-by-step diagrams.
4. Install the adjustable shelves into the side cabinets.
5. Attach the sliding barn door rails and hang the barn doors.
6. Carefully insert the electric fireplace into the central opening.
7. Ensure all connections are secure and the unit is stable.



Image: Detailed view of the sliding barn doors, highlighting the metal rails, X-shaped design, and the solid base construction.

OPERATING INSTRUCTIONS

Electric Fireplace Operation:

The electric fireplace can be controlled using the buttons on the unit or the included remote control.

23" ELECTRIC FIREPLACE



SETTING
0.5H - 6H



ON/OFF
Power Control



TEMPERATURE
Adjustable 62°F - 82°F



HEATER
1500w Engery




FLAME
Adjust 3 Level Light
Brightness



ENERGY SAVING
0.5H - 6H



Heating Vents

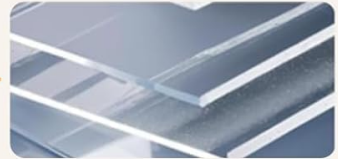

Tempered Glass Panel



3D Fire Flame



3 LEVEL BRIGGHTNESS SETTINGS



L1



L2



L3

Image: Overview of the 23-inch electric fireplace controls and remote, detailing settings for power, temperature, heater, flame brightness, and timer.

- **Power On/Off:** Press the power button on the unit or remote to turn the fireplace on or off.
- **Temperature Control:** Use the temperature buttons on the remote to adjust the heat output between 62°F and 82°F.
- **Flame Brightness:** Select from 3 levels of flame brightness (L1, L2, L3) using the flame button on the remote. The flame effect can be used independently of the heater.
- **Timer Function:** Set the automatic shutdown timer for intervals between 0.5 hours and 6 hours.



Image: Detailed view of the electric fireplace's realistic 3D flame effect, highlighting its adjustable brightness and the option to operate without heat.

Sliding Barn Door Operation:

The barn doors slide smoothly along the top rail, allowing you to cover either the fireplace or the side storage cabinets as desired. Gently push the doors to slide them open or closed.

Your browser does not support the video tag.

Video: A demonstration of the 4 EVER WINNER Fireplace TV Stand, showcasing its design and the functionality of the electric fireplace and sliding barn doors.

MAINTENANCE

TV Stand Care:

- Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- Periodically check all screws and connections to ensure they remain tight.
- Keep the unit away from direct sunlight and excessive moisture to prevent warping or discoloration.

Electric Fireplace Care:

- Ensure the fireplace is unplugged and cool before cleaning.
- Clean the exterior surfaces with a soft, damp cloth.
- Dust the air intake and exhaust vents regularly to maintain proper airflow.
- Do not attempt to service the internal components of the fireplace. Refer to qualified service personnel if repairs are needed.

TROUBLESHOOTING

If you encounter issues with your 4 EVER WINNER Fireplace TV Stand, refer to the following common solutions:

- **Fireplace not turning on:** Ensure the power cord is securely plugged into a functional outlet. Check if the circuit breaker has tripped.
- **No heat output:** Verify the heater function is activated and the temperature setting is above the ambient

room temperature. Ensure air vents are not blocked.

- **Remote control not working:** Check and replace the batteries in the remote. Ensure there are no obstructions between the remote and the fireplace sensor.
- **Unstable TV stand:** Recheck all assembly connections and tighten any loose screws. Ensure the unit is on a level surface.

For persistent issues or concerns not addressed here, please contact 4 EVER WINNER customer support.

SPECIFICATIONS



Image: The TV stand shown with different TV sizes to illustrate its capacity for screens up to 65 inches.

Feature	Detail
Brand	4 EVER WINNER
Model Number	FTS0801
Product Dimensions (L x W x H)	59 x 15.7 x 28 inches
Item Weight	95.9 pounds
Material	Engineered Wood
Color	Off White
Fireplace Size	23 inches
Max TV Size Supported	Up to 65 inches
Top Load Capacity	200 pounds

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation included with your purchase or visit the official 4 EVER WINNER website. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: 4 EVER WINNER