

Elevon B0FT82Q7YY

Elevon Universal Tabletop TV Stand Instruction Manual

Model: Universal Tabletop TV Stand (ASIN: B0FT82Q7YY)

1. INTRODUCTION

Thank you for choosing the Elevon Universal Tabletop TV Stand. This manual provides detailed instructions for the safe and correct assembly, operation, and maintenance of your TV stand. Please read this manual thoroughly before installation and retain it for future reference.

This stand is designed to support televisions ranging from 26 to 80 inches with VESA mounting patterns from 100x100 mm to 400x400 mm, and a maximum weight of 88 lbs (40 kg).

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 88 lbs (40 kg). Exceeding this limit may result in serious injury or property damage.
- **TV Size:** Ensure your TV's screen size is within the recommended range of 26-80 inches.
- **VESA Compatibility:** Verify your TV's VESA mounting pattern is compatible (100x100 mm to 400x400 mm).
- **Assembly:** Assemble the stand exactly as instructed. Incorrect assembly can lead to instability.
- **Placement:** Place the TV stand on a stable, level surface. Avoid placing it on uneven or vibrating surfaces.
- **Children and Pets:** Keep children and pets away from the assembly area. The stand features rounded glass edges for safety, but caution is always advised.
- **Tools:** Use appropriate tools for assembly. Do not overtighten screws.

3. PACKAGE CONTENTS

Please check to ensure all parts are present and undamaged before beginning assembly. If any parts are missing or damaged, contact Elevon customer support.



Image: All components of the Elevon Universal Tabletop TV Stand. This image displays the main stand structure, including the base, support column, and TV mounting bracket.

- TV Stand Base (Tempered Glass)
- Support Column (Steel)
- TV Mounting Bracket
- TV Mounting Arms (2x)
- Hardware Kit (various screws, washers, spacers, and cable clips)
- Assembly Tools (e.g., Allen wrench, if required)

4. ASSEMBLY INSTRUCTIONS

The Elevon Tabletop TV Stand is designed for quick and easy assembly, typically within 10 minutes, with no drilling required.

Step 1: Attach the Support Column to the Base

1. Carefully place the tempered glass base on a soft, clean surface to prevent scratches.
2. Align the steel support column with the pre-drilled holes on the base.
3. Secure the column to the base using the provided screws and an Allen wrench. Ensure it is tightened firmly for stability.

Pyramid Structure for Durable Support



Image: Detailed view of the stand's structural components, highlighting security locks, enhanced hooks for TV mounting, non-slip pads on the base, and the secure connection of the column to the base.

Step 2: Attach the TV Mounting Bracket to the Support Column

1. Align the TV mounting bracket with the desired height adjustment holes on the support column. The stand offers 6 levels of height adjustment.
2. Secure the bracket to the column using the provided screws. Ensure all screws are tightened securely.

Step 3: Attach Mounting Arms to Your TV

1. Lay your TV screen-down on a soft, clean surface.
2. Identify the VESA mounting holes on the back of your TV.

3. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's VESA pattern.
4. Attach the two TV mounting arms to the back of your TV, ensuring they are level and securely fastened. The arms should extend slightly above the top VESA holes.

10 -Minute Assembly



Image: A visual guide demonstrating how to attach the mounting arms to the rear of a television, indicating the quick 10-minute assembly process.

Step 4: Mount Your TV onto the Stand

1. With assistance, carefully lift your TV and hook the mounting arms onto the TV mounting bracket attached to the stand.
2. Ensure the TV is securely seated on the bracket. The enhanced hooks and security locks are designed to prevent accidental dislodgement.
3. Tighten any safety screws or locking mechanisms on the mounting arms to secure the TV in place.

5. OPERATING INSTRUCTIONS

Adjusting TV Height

The Elevon TV stand offers 6 levels of height adjustment to optimize your viewing experience and accommodate soundbars or other media devices. This adjustment can be made during assembly by selecting different holes on the support column, or with 3-level height adjustment available post-installation on the TV mounting arms.

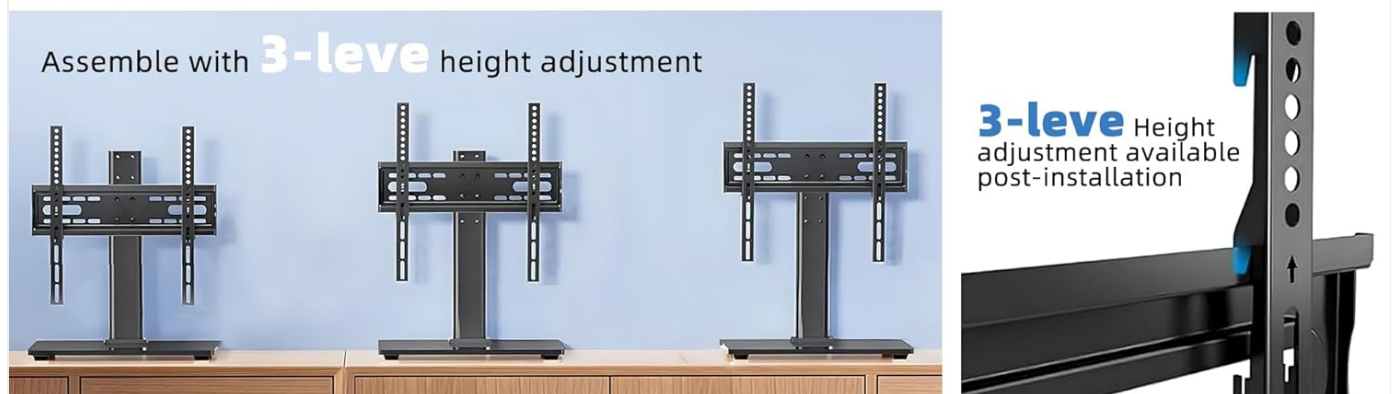


Image: An illustration detailing the 6-level height adjustment feature, showing the minimum (12.01 inches) and maximum (17.91 inches) heights from the base to the center of the TV. It also depicts the 3-level height adjustment possible after installation.

1. To adjust height post-installation, carefully lift the TV slightly to disengage the locking mechanism on the mounting arms.
2. Slide the TV up or down to the desired height level.
3. Ensure the locking mechanism re-engages securely at the new height.

Cable Management

Integrated cable clips are provided to help organize and conceal TV cables, contributing to a clean and tidy setup.

Clean Cable Management



Image: A close-up view demonstrating the effective use of integrated cable clips on the stand's central column to manage and hide television cables, promoting a neat appearance.

1. Gather all TV and media device cables.
2. Route the cables along the back of the support column.
3. Use the provided cable clips to secure the cables neatly to the column, preventing tangles and improving aesthetics.

6. MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, dry cloth. For glass surfaces, a mild glass cleaner can be used. Avoid abrasive cleaners or harsh chemicals.
- **Periodic Checks:** Periodically check all screws and connections to ensure they remain tight and secure. Retighten if necessary.
- **Stability:** Ensure the stand remains on a level surface. If moved, re-verify its stability before placing the TV back on it.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is wobbly or unstable.	Screws are not fully tightened; stand is on an uneven surface; TV weight exceeds capacity.	Ensure all assembly screws are securely tightened. Move the stand to a level surface. Verify TV weight is within 88 lbs (40 kg).
TV does not fit the mounting arms.	Incorrect VESA pattern or TV size.	Confirm your TV's VESA pattern is between 100x100 mm and 400x400 mm. Ensure TV size is between 26-80 inches.
Difficulty adjusting height.	Locking mechanism engaged or TV too heavy to lift alone.	Ensure the locking mechanism is disengaged. Seek assistance if the TV is heavy.

8. SPECIFICATIONS

Feature	Detail
Supported TV Sizes	26 - 80 inches
Maximum Weight Capacity	88 lbs (40 kg)
VESA Compatibility	100x100 mm to 400x400 mm
Height Adjustment	6 levels (during assembly), 3 levels (post-installation)
Base Material	8 mm Tempered Glass
Column Material	Heavy-gauge Steel
Product Weight	8.8 lbs (4 kg)
Package Dimensions	20 x 11 x 4 inches



13lbs
product weight




100x100mm	100x200mm	200x100mm
200x200mm	200x300mm	300x200mm
300x300mm	400x300mm	400x400mm

Image: An illustration indicating the compatible TV screen sizes (32-55 inches shown, but product supports 26-80 inches) and various VESA mounting patterns supported by the stand, such as 100x100mm, 200x200mm, 400x400mm.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support regarding your Elevon Universal Tabletop TV Stand, please contact the manufacturer directly through their official website or the retailer where the product was purchased. Please have your purchase receipt and product model (ASIN: B0FT82Q7YY) available when contacting support.
Manufacturer: Elevon



	<p>ELEVON Premium Water Flosser User Manual and Safety Guide</p> <p>Comprehensive guide to the ELEVON Premium Water Flosser, including safety precautions, usage instructions, and troubleshooting tips for model FC188.</p>
	<p>Futaba GYA573 6-Axis Flight Control System - Instruction Manual</p> <p>Comprehensive instruction manual for the Futaba GYA573 6-Axis Flight Control System, detailing its features, installation, setup, parameter settings, and operation for RC airplanes.</p>
	<p>RadioLink T8S 8-Channel Remote Controller User Manual</p> <p>Comprehensive user manual for the RadioLink T8S 8-channel remote controller, covering setup, firmware upgrades, mobile and computer parameter configuration, safety, and specifications.</p>