

[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy Holiday Living 6.5 Ft. Lighted Nativity Christmas Inflatable User Manual

Gemmy 884441

Gemmy Holiday Living 6.5 Ft. Lighted Nativity Christmas Inflatable User Manual

Model: 884441

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective setup, operation, and maintenance of your Gemmy Holiday Living 6.5 Ft. Lighted Nativity Christmas Inflatable. This product features the Holy Family on a golden base, a barnyard archway, and a blue backdrop with the Star of Bethlehem, designed for both indoor and outdoor Christmas decoration.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children around the inflatable.
- Ensure all electrical connections are dry and protected from weather when used outdoors.
- Do not operate if the product or power cord is damaged.
- Keep away from heat sources, open flames, and sharp objects.
- Use only the provided power adapter and components.
- Securely stake down the inflatable to prevent it from blowing away in windy conditions.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Gemmy Holiday Living 6.5 Ft. Lighted Nativity Christmas Inflatable
- Stakes (quantity as supplied)
- Tethers (quantity as supplied)
- Power Adapter with 5-ft electrical cord



Image: The product packaging box, showing the inflatable nativity scene and key features like LED lights and included stakes.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Position:** Choose a flat, clear area for placement, free from obstructions and sharp objects. Ensure the power cord can reach an outlet safely.
3. **Unfold:** Lay the inflatable flat on the ground.
4. **Secure:** Use the provided stakes and tethers to anchor the inflatable firmly to the ground. This prevents movement due to wind.
5. **Connect Power:** Plug the power adapter into a suitable outdoor-rated electrical outlet. Ensure the connection is secure and protected from moisture.



Image: The Gemmy Holiday Living 6.5 Ft. Lighted Nativity Christmas Inflatable fully inflated and illuminated, depicting Mary, Joseph, and baby Jesus in a manger under the Star of Bethlehem.



Image: The inflatable in a deflated state, showing the back view of the structure, which includes the fan housing and tether points.

OPERATING INSTRUCTIONS

1. **Inflation:** Once plugged in, the inflatable will self-inflate in seconds. Ensure the fan is not obstructed.
2. **Lighting:** The interior LED lights will illuminate automatically when the unit is powered on.
3. **Operation Duration:** This product is designed for temporary seasonal display. Avoid continuous operation for extended periods without breaks.
4. **Deflation:** To deflate, simply unplug the power adapter from the electrical outlet. The inflatable will deflate for easy storage.



Image: A close-up view of the two-prong electrical plug and a portion of the white power cord, essential for operating the inflatable's fan and lights.

MAINTENANCE

- **Cleaning:** Wipe the surface with a damp cloth if needed. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Ensure the inflatable is completely dry before folding and storing. Store in a cool, dry place away from direct sunlight and pests.
- **Inspection:** Before each use, inspect the inflatable, power cord, and fan for any signs of damage or wear.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Inflatable does not inflate.	• Not plugged in. • Power outlet not working. • Fan obstructed. • Zipper or opening not closed.	• Ensure power cord is securely plugged into a working outlet. • Check circuit breaker. • Clear any obstructions from the fan intake. • Ensure all zippers and openings are fully closed.
Lights are not working.	• No power to the unit. • Damaged LED lights.	• Verify the unit is powered on and inflating. • Contact customer support if lights remain off after confirming power.
Inflatable falls over or leans.	• Insufficient anchoring. • Strong winds.	• Ensure all stakes and tethers are securely fastened. • Consider additional anchoring in very windy conditions or temporarily deflate.

SPECIFICATIONS

- **Brand:** Gemmy
- **Model Number:** 884441
- **Product Dimensions (Inflated):** Approximately 57.9 inches (L) x 37 inches (W) x 78 inches (H) (6.5 Ft. H)
- **Material:** Nylon
- **Power Cord Length:** 5 feet
- **Special Feature:** Weather Resistant
- **Lighting:** Energy-efficient LED lights
- **UPC:** 191245844419

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Manufacturer contact details are typically found on the product packaging or the manufacturer's official website.

Manufacturer: Gemmy

Website: www.gemmy.com (Note: This is a generic link, please refer to your product packaging for specific support contact information.)