

Ninja FN103CO

Ninja Crispi 5-in-1 Portable Glass Air Fryer Cooking System FN103CO User Manual

Model: FN103CO

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your Ninja Crispi 5-in-1 Portable Glass Air Fryer Cooking System. Failure to follow these safeguards may result in property damage or personal injury.

- Always ensure the PowerPod is securely placed on the container before operation.
- Do not immerse the PowerPod in water or other liquids. Clean with a damp cloth only.
- Keep hands and face clear of the steam vent during operation.
- Use oven mitts when handling hot containers or accessories.
- Ensure adequate ventilation around the appliance during use.
- Do not operate the appliance if the power cord or plug is damaged.
- This appliance is for household use only.
- The glass containers are designed for thermal shock resistance but avoid extreme temperature changes.
- Always place the appliance on a heat-safe surface. The unit features fixed heat-safe feet for use on granite, laminate, quartz, butcher block, and marble.

PRODUCT OVERVIEW

The Ninja Crispi 5-in-1 Portable Glass Air Fryer Cooking System offers versatile cooking functions in a compact design. It includes the main PowerPod unit and a set of durable CleanCrisp glass containers with accessories.



Fixed heat protection

Cook and serve safely on granite, laminate, quartz, butcher block, marble, and more.

Figure 1: Complete Ninja Crispi 5-in-1 Portable Glass Air Fryer Cooking System, showing the PowerPod, various glass containers, lids, and crisper plates.

Components Included:

- **Ninja Crispi PowerPod:** The main heating and control unit.
- **4-Quart CleanCrisp Glass Container:** For larger batches.
- **6-Cup CleanCrisp Glass Container:** For smaller, personal-sized meals.
- **Crispi Container Adapter:** Allows the PowerPod to be used with the 4-Quart container.
- **Crisper Plates (2):** One for each glass container, designed for optimal air circulation.
- **Storage Lids (2):** For sealing and storing food in the glass containers.



Meet the Ninja CRISPi™ PowerPod™

The power of a full-sized, 1500-watt air fryer now
in the palm of your hand.*

*Based on wattage compared to AF100

Figure 2: The Ninja Crispi PowerPod securely placed on the 4-quart glass container, ready for cooking.



Complete cooking system

Ninja CRISPi™ PowerPod™,
big-batch 4-qt container, medium-batch 2.5-qt container,
small-batch 6-cup container, adapter, and storage lids.

Figure 3: The Ninja Crispi PowerPod placed on the 6-cup glass container, suitable for individual portions.

SETUP

Unpacking and Initial Cleaning:

1. Remove all packaging materials and promotional labels from the unit and accessories.
2. Wash the glass containers, crisper plates, and storage lids in warm, soapy water or in the dishwasher. Rinse thoroughly and dry completely.
3. Wipe the PowerPod unit with a clean, damp cloth. Do not immerse the PowerPod in water.

Assembly:

1. Place the desired CleanCrisp glass container on a stable, heat-safe surface.
2. Insert the appropriate crisper plate into the glass container.

3. If using the 4-Quart container, place the Crispi Container Adapter onto the container before attaching the PowerPod.



Switch to big-batch cooking

Switch from small-batch to big-batch cooking with the included Ninja CRISPi™ adapter.

Figure 4: The Crispi Container Adapter in place, allowing the PowerPod to be used with the larger 4-quart container.

4. Align the PowerPod with the container (or adapter) and lower it until it sits securely. Ensure it is level and stable.
5. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Ninja Crispi features a user-friendly control panel with 5 cooking functions.



Figure 5: The control panel of the Ninja Crispi PowerPod, displaying the various cooking modes and settings.

Control Panel Functions:

- **MODE Button:** Press to cycle through the 5 cooking functions: Recrisp, Bake, Air Fry, Max Crisp, Keep Warm.
- **Temperature/Time Buttons (+/-):** Use to adjust cooking temperature and time.
- **START Button:** Press to begin the selected cooking cycle.
- **Power Button:** Press to turn the unit on or off.



450°F max heat

Get the perfect crisp with up to 450°F high heat.

Figure 6: A close-up view of the control panel, highlighting the temperature display and adjustment buttons.

Cooking Modes:

Mode	Temperature Range	Description
Keep Warm	175°F	Keeps food warm before serving.
Recrisp	380-400°F	Revives leftovers with a crispy texture.
Bake	375-400°F	Provides gentle heat for baked treats.
Air Fry	400-425°F	Achieves food crispiness and crunch.
Max Crisp	425-450°F	Best for frozen favorites requiring maximum crispness.

General Operation:

1. Prepare your food and place it in the glass container with the crisper plate.
2. Place the PowerPod securely on the container.
3. Press the Power Button to turn on the unit.
4. Press the MODE button to select your desired cooking function.
5. Use the +/- buttons to adjust the cooking time and temperature as needed.
6. Press the START button to begin cooking.
7. The unit will automatically shut off when the cooking cycle is complete.
8. Carefully remove the PowerPod and then the cooked food using appropriate utensils.

CleanCrisp™ Glassware

DESIGNED FOR

NONTOXIC

Cooking & Storing

NO PFAS | NO PTFE



Thermal shock resistant
Go from frozen to crispy in minutes.

Figure 7: The Ninja Crispi unit demonstrating its fixed heat protection, allowing safe placement on various countertop materials.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Ninja Crispi system.

Cleaning the PowerPod:

- Always unplug the PowerPod and allow it to cool completely before cleaning.
- Wipe the exterior of the PowerPod with a clean, damp cloth.
- Do not use abrasive cleaners or scouring pads.
- Never immerse the PowerPod in water or any other liquid.

Cleaning Glass Containers and Accessories:

- The CleanCrisp glass containers, crisper plates, and storage lids are dishwasher safe.
- Alternatively, wash them in warm, soapy water using a non-abrasive sponge or cloth.
- Ensure all food residue is removed before storage.
- The handles on the glass containers are removable for easier cleaning.



The image features a Ninja CleanCrisp glass cooking surface, which is a black electric appliance with a clear glass top. Two glass containers are shown on the surface: a smaller one in the foreground containing a piece of salmon and broccoli, and a larger one in the background containing roasted chicken. A green and white shield-shaped logo is positioned in the upper left corner of the image. The logo contains the word "NINJA" in a stylized font, followed by the text "COOKING SURFACE MADE 100% PFAS FREE". The background is a plain, light-colored wall, and the surface the appliance sits on is reflective.

**Glass cooking surface
made 100% PFAS free**

Cook with peace of mind.

Figure 8: The CleanCrisp glass container, emphasizing its 100% PFAS-free cooking surface for safe food preparation.

Storage:

- The PowerPod and CleanCrisp glassware are designed to nest together for compact, mess-free storage.
- Use the provided storage lids to seal containers for refrigeration or freezing.



Nesting storage

Ninja CRISPi™ PowerPod™ and TempWare™ glassware nest together for easy, mess-free storage in your cabinets.

Figure 9: The Ninja Crispi PowerPod and glass containers nested together for efficient storage in a kitchen cabinet.



Take meals on the go

The small-batch TempWare™ container comes with a snap-lock, leak-resistant lid for easy, mess-free transport.

Figure 10: A small CleanCrisp container with its leak-proof lid, demonstrating its suitability for transporting meals.

TROUBLESHOOTING

If you encounter issues with your Ninja Crispi, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; PowerPod not seated correctly.	Ensure power cord is securely plugged into a working outlet. Verify PowerPod is properly aligned and seated on the container.
Food is not cooking evenly.	Overcrowding; incorrect temperature/time.	Do not overcrowd the container. Cook in smaller batches if necessary. Adjust temperature and time according to recipe or food type. Shake or flip food halfway through cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Too much moisture; insufficient cooking time/temperature.	Pat food dry before cooking. Ensure crisper plate is used. Increase cooking time or temperature, or use Max Crisp mode for frozen items.
Smoke coming from unit.	Excess oil/grease; food residue.	Ensure crisper plate is clean. Remove excess oil from food. Clean the container and PowerPod thoroughly after each use.

SPECIFICATIONS

Feature	Detail
Model Name	Ninja FN103CO
Product Dimensions	13.38"D x 11.96"W x 13.58"H
Capacity	4 Quarts (main container) / 6 Cups (small container)
Output Wattage	1500 Watts
Voltage	120 Volts
Control Method	Touch
Min Temperature Setting	175 Degrees Fahrenheit (Keep Warm)
Max Temperature Setting	450 Degrees Fahrenheit
Special Features	Automatic Shut-Off, Programmable, Temperature Control, Timer
Material	Metal (PowerPod), Glass (Containers)
Dishwasher Safe Parts	Containers, crisper plates, adapter, and lids
Item Weight	14.5 Pounds

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Ninja website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question