

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Crosley](#) /

› [Crosley CR3505A-MT Cruiser Portable CD Player User Manual](#)

## Crosley CR3505A-MT

# Crosley CR3505A-MT Cruiser Portable CD Player User Manual

Model: CR3505A-MT

## INTRODUCTION

Thank you for purchasing the Crosley CR3505A-MT Cruiser Portable CD Player. This device combines classic design with modern audio capabilities, offering CD playback, Bluetooth connectivity, FM radio, and an auxiliary input. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your product.

## SAFETY INFORMATION

- Read all instructions before using the product.
- Keep this manual for future reference.
- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel.
- Dispose of the product responsibly according to local regulations.

## PACKAGE CONTENTS

- Crosley CR3505A-MT Portable CD Player
- USB-C Cable
- User Manual

## PRODUCT OVERVIEW

### Top Panel Controls

The top panel features the CD compartment, a decorative tonearm-inspired power switch, and various control

buttons for playback and mode selection.



Image: Top view of the Crosley CR3505A-MT CD player with lid open, highlighting the CD compartment, tonearm-inspired switch, and control buttons.

- **Tonearm-inspired Switch:** Functions as the power switch and can initiate CD playback.
- **Repeat Button:** Repeats the current track or album.
- **Stop Button:** Stops CD playback.
- **Previous Track Button:** Skips to the beginning of the current track or the previous track.
- **Next Track Button:** Skips to the next track.
- **Play/Pause/Bluetooth Pairing Button:** Plays or pauses CD playback. In Bluetooth mode, press and hold to initiate pairing.
- **Volume/Mode Knob:** Rotate to adjust volume. Press to cycle through modes (CD, Bluetooth, FM Radio, Aux).

## Rear Panel Connections

The rear panel provides essential connection ports for headphones, auxiliary input, and power.

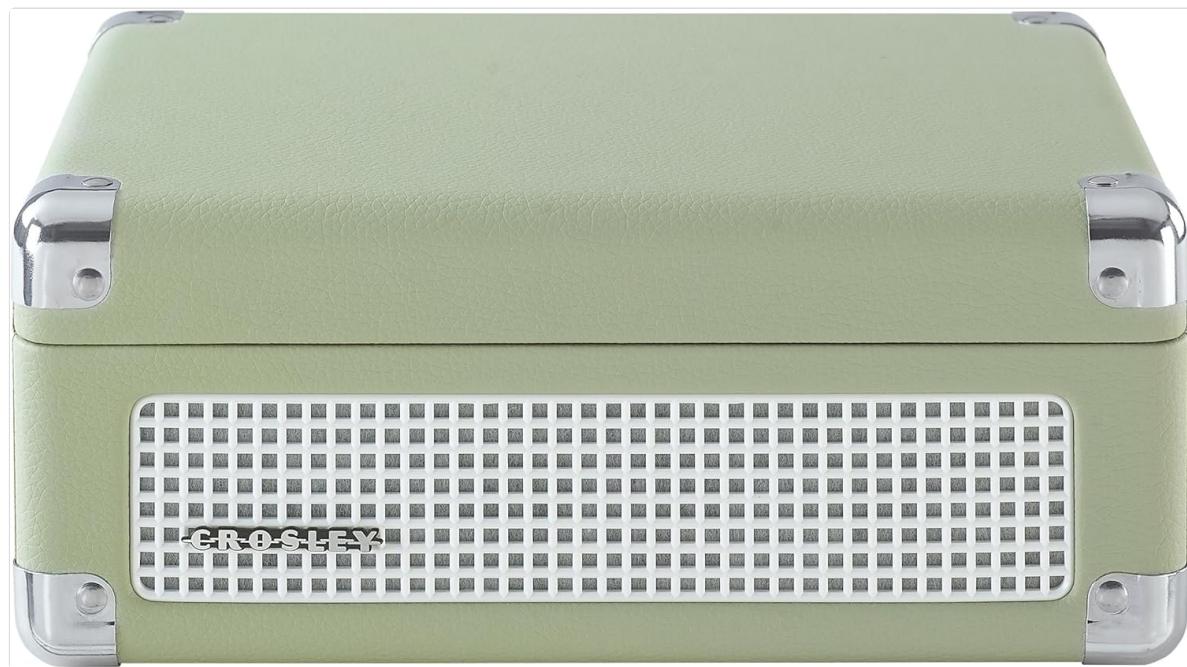


Image: Rear view of the Crosley CR3505A-MT CD player, detailing the headphone jack, auxiliary input port, and DC 5V USB-C power input.

- **Headphone Jack:** Connect 3.5mm headphones for private listening.
- **Aux In:** Connect external audio devices using a 3.5mm audio cable.
- **DC 5V (USB-C):** Power input for charging the internal battery or operating the unit.

## SETUP

### Powering On and Charging

1. Connect the provided USB-C cable to the DC 5V port on the rear of the unit.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a powered USB port.
3. The internal rechargeable lithium battery charges in approximately 3.5 hours. A full charge provides up to 4 hours of playback at 50% volume.
4. To power on the unit, move the tonearm-inspired switch to the right or press the Volume/Mode knob.

## OPERATING INSTRUCTIONS

### CD Playback

1. Open the lid of the CD player.
2. Gently place a CD onto the spindle in the CD compartment, ensuring it is seated correctly.
3. Close the lid.
4. Press the Volume/Mode knob repeatedly until the unit announces "CD" or the CD indicator light illuminates.
5. Move the tonearm-inspired switch to the right to begin playback. Alternatively, press the Play/Pause button.
6. Use the Previous Track and Next Track buttons to navigate between songs.

7. Press the Repeat button to repeat the current track or the entire album.
8. Press the Stop button to stop playback.



Image: The Crosley CR3505A-MT CD player with a CD inserted, ready for playback, showcasing its open design.

## Bluetooth Mode

The unit can connect wirelessly to Bluetooth speakers and headphones, or receive audio from a Bluetooth-enabled device.

1. Press the Volume/Mode knob repeatedly until the unit announces "Bluetooth" or the Bluetooth indicator light flashes blue.
2. On your external Bluetooth device (e.g., smartphone, tablet), enable Bluetooth and search for "Crosley CR3505A-MT".
3. Select the device to pair. Once connected, the Bluetooth indicator light will turn solid blue.
4. You can now stream audio from your device to the CD player's speakers.
5. To connect the CD player to external Bluetooth speakers/headphones, ensure the CD player is in Bluetooth mode and press and hold the Play/Pause/Bluetooth Pairing button until the indicator light flashes rapidly. Then, put your external Bluetooth device into pairing mode.

## FM Radio

1. Press the Volume/Mode knob repeatedly until the unit announces "FM Radio" or the FM indicator light

illuminates.

2. The unit will automatically scan for available FM stations.
3. Use the Previous Track and Next Track buttons to manually tune to different frequencies.

## Auxiliary Input

1. Connect a 3.5mm audio cable (not included) from your external audio device to the Aux In port on the rear of the CD player.
2. Press the Volume/Mode knob repeatedly until the unit announces "Auxiliary" or the Aux indicator light illuminates.
3. Play audio from your external device. The sound will be output through the CD player's speakers.

## MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches.
- **Storage:** When not in use, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Solution
Unit does not power on.	Ensure the USB-C cable is securely connected and the power source is active. Check if the internal battery needs charging.
CD does not play.	Verify the CD is inserted correctly and is clean/undamaged. Ensure the unit is in CD mode. Move the tonearm-inspired switch to the play position.
Bluetooth device cannot pair.	Ensure the CD player is in Bluetooth pairing mode (flashing blue light). Make sure your external device's Bluetooth is enabled and within range. Try restarting both devices.
Poor FM radio reception.	Adjust the unit's position to improve reception. FM radio tuning is manual and may require fine-tuning.
No sound.	Check the volume level on both the CD player and any connected external devices. Ensure the correct mode is selected. If using headphones, ensure they are fully plugged in.

## SPECIFICATIONS

- **Model:** CR3505A-MT
- **Dimensions:** 6.75 x 8.75 x 3.75 inches
- **Weight:** 2.54 pounds
- **Connectivity:** Bluetooth, Aux In
- **Power:** Rechargeable Lithium Battery, DC 5V (USB-C)
- **Battery Life:** Up to 4 hours at 50% volume (after 3.5 hours charge)
- **Included Components:** CD Player, USB-C Cable

## WARRANTY AND SUPPORT

Crosley products are designed in the USA and come with USA-based customer support. For warranty information or technical assistance, please refer to the official Crosley website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

**Online Support:** [www.crosleyradio.com/support](http://www.crosleyradio.com/support)

© 2025 Crosley. All rights reserved.