

[Manuals.plus](#) /

> [Camp Snap](#) /

> Camp Snap CS-V105 Digital Camera User Manual

Camp Snap CS-V105

Camp Snap CS-V105 Digital Camera User Manual

Model: CS-V105

INTRODUCTION

The Camp Snap CS-V105 is a screen-free digital camera designed for capturing moments without digital distractions. Its durable construction and simple controls make it ideal for outdoor adventures, travel, and everyday photography. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your camera.



Image: Front view of the Camp Snap CS-V105 Digital Camera, showcasing its olive green textured finish and black body with the Camp Snap logo.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- Camp Snap CS-V105 Digital Camera
- User Manual
- Micro SD Card (pre-installed or included separately)
- USB-C to USB-C Cable

SETUP

1. Charging the Camera

The camera features an internal, rechargeable battery. Before first use, fully charge the camera using the provided USB-C cable. Connect one end of the USB-C cable to the camera's USB-C port (located on the side) and the other end to a compatible USB power adapter or computer.

2. Inserting the Micro SD Card

The camera requires a Micro SD card for storing photos. A Micro SD card is included. Locate the Micro SD card slot (usually next to the USB-C port) and gently insert the card until it clicks into place. Ensure the card is inserted in the correct orientation.



Image: Side view of the Camp Snap CS-V105 Digital Camera, highlighting the USB-C port and Micro SD card slot.

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on the camera, press and hold the shutter button (the green button on top) for a few seconds. The camera will emit a sound, indicating it is ready. To power off, press and hold the shutter button again until the camera powers down.

2. Taking Photos

Point the camera at your subject using the optical viewfinder. Press the shutter button firmly to capture a photo. The camera will make a shutter sound, and the photo will be saved to the Micro SD card.



Image: Top view of the Camp Snap CS-V105 Digital Camera, highlighting the green shutter button.

3. Flash Control

The camera features a built-in flash. On the back of the camera, locate the flash switch. Slide the switch to select between "OFF", "ON", or "Flash" (auto flash) modes. Use the flash in low-light conditions.

SCREEN-FREE AND DIGITAL



Image: Back view of the Camp Snap CS-V105 Digital Camera, showing the flash ON/OFF switch and the small digital counter.

4. Setting Date and Time / Volume Control

On the side of the camera, there are small buttons labeled "MODE", "UP", and "DOWN". These buttons are used to set the date and time, and to control the volume of camera sounds. Refer to the on-screen prompts (if any, or through connected device) or experiment with combinations to adjust these settings.



**CAPTEUR DE 8 MP
RECHARGEABLE ET RÉUTILISABLE
BATTERIE INTERNE INCLUSE
JUSQU'À 500 PHOTOS PAR CHARGE
CARTE MICRO SD INCLUSE
CÂBLE USB-C VERS USB-C INCLUS**



CLASSIQUE



VINTAGE



NOIR ET BLANC

**FILTRES INTERCHANGEABLES AU
STYLE PELLICULE VINTAGE**

Image: Side view of the Camp Snap CS-V105 Digital Camera, indicating the location of the date, time, and volume control buttons.

5. Applying Photo Filters

The camera supports interchangeable vintage film-style filters, allowing you to capture images with different aesthetic effects such as Classic, Vintage, and Black & White. These filters are applied during the capture process or can be selected via camera settings (refer to specific model instructions for filter selection method).



Image: The Camp Snap CS-V105 Digital Camera shown alongside examples of photos taken with Classic, Vintage, and Black & White film-style filters.

6. Transferring Photos

To transfer photos to a computer, connect the camera using the provided USB-C cable. The camera will appear as a removable storage device. You can then copy the JPEG image files from the Micro SD card to your computer.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, especially if it will not be used for an extended period.
- **Water Resistance:** The camera is **not water-resistant**. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Camera does not power on:

Ensure the battery is charged. Connect the camera to a power source using the USB-C cable and try again.

Photos are not saving:

Check if a Micro SD card is properly inserted and has sufficient free space. Reformat the card if necessary (this will erase all data).

Flash is not working:

Verify that the flash switch on the back of the camera is set to "ON" or "Flash" mode.

Cannot transfer photos to computer:

Ensure the USB-C cable is securely connected to both the camera and the computer. Try a different USB port or cable. The camera should appear as a removable drive.

SPECIFICATIONS

Brand	Camp Snap
Model Name	Campsnap Digital Camera (CS-V105)
Special Features	Compact, Screen-free Design, Digital
Item Dimensions (LxWxH)	14.5 x 9.6 x 4 cm (5.7 x 3.8 x 1.6 inches)
Compatible Devices	Standalone
Max Shutter Speed	1/60 seconds
Exposure Control Type	Automatic
ISO Range	100-6400
Image Stabilization	Digital
Video Capture Resolution	2.7K
Still Image Resolution	8 MP
Shooting Modes	Automatic
Water Resistance Level	Not water-resistant
File Format	JPEG (Images), MP4 (Video)
Media Type	Internal Memory, SD Card (Micro SD)
Viewfinder Type	Optical
Color	Olive Green

WARRANTY INFORMATION

For detailed warranty information, please refer to the documentation included with your purchase or visit the official Camp Snap website. Warranty terms and conditions may vary by region.

SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please visit the official Camp Snap support page or contact their customer service. Contact details can typically be found on the product packaging or the manufacturer's website.

