

[manuals.plus](#) /

› [SJCAM](#) /

› [SJCAM C300W 4K Dual Touchscreen Action Camera User Manual](#)

SJCAM C300W

SJCAM C300W 4K Dual Touchscreen Action Camera User Manual

Model: C300W | Brand: SJCAM

1. INTRODUCTION

This manual provides detailed instructions for the SJCAM C300W 4K Dual Touchscreen Action Camera. Please read this guide thoroughly before using your device to ensure proper operation and maintenance. The SJCAM C300W is a compact, high-performance action camera designed to capture your adventures in stunning 4K resolution with the convenience of dual touchscreens.



Figure 1: SJCAM C300W 4K Dual Touchscreen Action Camera with included accessories.

2. WHAT'S INCLUDED

Verify that all the following items are present in your package:

- SJCAM C300 4K Dual Touchscreen Action Camera (White)
- 64GB Extreme Pro microSDXC Memory Card
- USB-C Adapter
- Deluxe Cleaning Kit
- Memory Card Wallet
- Memory Card Reader

Long Battery Life

2800mah+1000mah



Figure 2: All components included in the SJCAM C300W bundle.

3. PRODUCT OVERVIEW

The SJCAM C300W features a compact design with dual touchscreens for versatile operation. The main camera unit is detachable from the larger battery stick, offering flexibility in usage scenarios.

3.1 Key Features

- 4K Ultra HD Recording:** Capture video at 30 frames per second.
- Dual Touchscreens:** Front and rear 1.3-inch displays for easy framing and control.
- Modular Battery System:** Main unit (1000mAh) and battery stick (2700mAh) for extended recording times.
- 6-Axis EIS:** Electronic Image Stabilization for smooth footage.
- Waterproof Design:** IP65 rating, with optional waterproof housing for deeper dives.
- Wi-Fi Connectivity:** Connect to the SJCAM Zone app for remote control and live streaming.

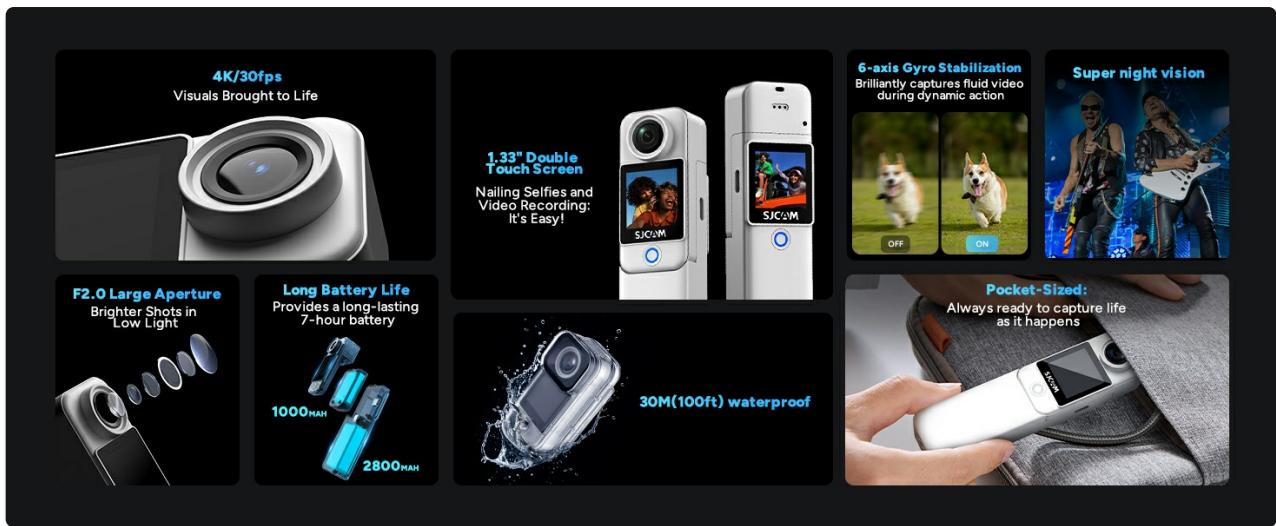


Figure 3: Overview of key features of the SJCAM C300W.

3.2 Physical Components

- **Camera Lens:** Front-facing lens with 154° FOV.
- **Dual Touchscreens:** 1.3-inch screens on both front and rear.
- **Power/Record Button:** Located on the main unit.
- **USB Type-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** Supports cards up to 128GB.
- **Microphone:** Integrated for audio recording.

C300 Parameter

Indicator light:
On/Off

Brightness adjustment:
Support

Screen Off (Screen Savers):
30s/1,3,5min

Auto Power Off:
3/5/10min

Light source frequency:
50/60 Hz

C300 Pocket/C300:
1.94oz/3.77oz



Figure 4: The SJCAM C300W in its waterproof housing for underwater use.

4. SETUP

4.1 Battery Installation and Charging

1. Ensure the main camera unit is securely attached to the battery stick.
2. Connect the provided USB Type-C cable to the camera's port and a power source.
3. The charging indicator light will illuminate. Charging is complete when the light turns off.

4.2 MicroSD Card Installation

1. Locate the microSD card slot on the side of the camera unit.
2. Insert the 64GB Extreme Pro microSDXC Memory Card with the gold contacts facing the back of the camera until it clicks into place.
3. To remove, gently push the card until it springs out.

4.3 Powering On/Off

- **Power On:** Press and hold the Power/Record button for a few seconds until the screen illuminates.
- **Power Off:** Press and hold the Power/Record button for a few seconds until the screen turns off.

4.4 SJCAM Zone App Installation & Connection

1. Download the

Related Documents - C300W

 SJCAM EMPOWER YOUR DREAMS	<p>SJCAM C300 & C300 POCKET User Guide</p> <p>Comprehensive user guide for the SJCAM C300 and C300 POCKET action cameras, covering setup, features, video and photo settings, and troubleshooting.</p>
 SJCAM EMPOWER YOUR DREAMS	<p>SJCAM C300 and C300 Pocket User Manual</p> <p>User manual for the SJCAM C300 and C300 Pocket action cameras, covering setup, features, and operation. Includes specifications, diagrams, and troubleshooting.</p>
 SJCAM EMPOWER YOUR DREAMS	<p>SJ10 PRO Dual Screen Action Camera User Manual</p> <p>User manual for the SJCAM SJ10 PRO Dual Screen Action Camera, detailing its features, operating instructions, safety guidelines, and specifications. Learn about video recording, photo taking, playback, remote control, and WiFi connection.</p>
 SJCAM EMPOWER YOUR DREAMS	<p>SJCAM SJ8 Dual Screen Action Camera User Manual and Guide</p> <p>Official user manual for the SJCAM SJ8 Dual Screen Action Camera. Learn about safety, features, specifications, operation, accessories, and installation for your SJ8 camera.</p>
 SJCAM EMPOWER YOUR DREAMS	<p>SJCAM SJ20 Dual Lens Action Camera User Manual</p> <p>Explore the SJCAM SJ20 Dual Lens Action Camera with this comprehensive user manual. Learn about setup, operation, features, safety guidelines, and accessories for your SJ20 camera.</p>
 SJCAM EMPOWER YOUR DREAMS	<p>SJCAM C100 Series Action Camera User Manual</p> <p>Comprehensive user manual for the SJCAM C100 Series action camera, covering operating instructions, functional operations, camera accessories, status indicators, model comparison, and Wi-Fi connectivity.</p>

