

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ingenuity](#) /

› [Ingenuity 3Dquickclose CS+ Stroller Instruction Manual](#)

Ingenuity 17419-090

Ingenuity 3Dquickclose CS+ Stroller Instruction Manual

Model: 17419-090

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the restraint system.
- Never leave child unattended.
- Avoid serious injury from falling or sliding out.
- Do not carry more than one child in the stroller.
- Do not overload the storage basket or accessory pockets.
- Ensure all locking devices are engaged before use.
- Do not use the stroller if any parts are broken or missing.
- Maximum weight capacity for the child is 22.5 kg (49.6 lbs).
- Maximum weight capacity for the storage basket is 4.5 kg (10 lbs).
- Keep children away from moving parts during adjustment.
- This product is not suitable for running or skating.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Ingenuity 3Dquickclose CS+ Stroller Frame
- Removable Bumper Bar
- Storage Basket
- 5-Point Safety Harness (pre-installed)
- Rain Cover
- Oversize Canopy (pre-installed)

SETUP

1. Unfolding the Stroller

1. Place the folded stroller on a flat surface.
2. Release any locking latches that secure the stroller in its folded position.
3. Lift the handlebar firmly until the stroller frame fully extends and locks into place. Listen for an audible click.
4. Ensure all frame locks are securely engaged before placing a child in the stroller.



Image: Side view of the Ingenuity 3Dquickclose CS+ Stroller, showing its full size when unfolded.

2. Attaching the Bumper Bar

1. Locate the attachment points on both sides of the stroller frame near the seat.
2. Align the bumper bar with these points and push until it clicks securely into place.
3. To remove, press the release buttons on each side and pull the bumper bar away.





Image: Front view of the stroller, highlighting the attached bumper bar and the 5-point harness.

OPERATING INSTRUCTIONS

1. General Use

The Ingenuity 3Dquickclose CS+ Stroller is designed for daily use and travel, providing comfort and safety for your child.





Image: A woman pushing the stroller with a child, demonstrating typical use.

2. Folding the Stroller (3Dquickclose Technology)

The 3Dquickclose technology allows for a rapid, one-handed fold.

1. Ensure the child is removed from the stroller.
2. Locate the quick-close mechanism (usually a handle or button) on the handlebar.
3. Activate the mechanism and push the handlebar forward or downward, allowing the stroller to collapse.
4. Secure the stroller with the auto-lock latch if present.



Image: A person folding the stroller, showcasing its compact design when collapsed.

3. Adjusting the Seat Recline

The seat can be fully reclined for newborns and adjusted as your child grows.

1. Locate the recline adjustment mechanism, typically a lever or strap behind the seat.
2. To recline, squeeze the lever or loosen the strap and gently push the seat back.
3. To raise, pull the seat forward while adjusting the mechanism until the desired position is reached.
4. Ensure the seat is securely locked in place before use.



Image: Close-up of a hand adjusting the seat recline, showing the mechanism for different positions.

4. Securing Your Child with the 5-Point Harness

Always use the 5-point safety harness to secure your child.

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their waist.
3. Insert the two buckle prongs into the center buckle until they click.
4. Adjust the straps to ensure a snug fit, leaving no more than one finger's width between the strap and your child.
5. To release, press the button on the center buckle.



Image: Close-up of the 5-point harness buckle being fastened, ensuring child safety.

5. Using the Oversize Canopy and Storage

The stroller features an extra-large adjustable canopy with a window and a visor for sun protection, along with ample storage.

- **Canopy:** Extend or retract the canopy as needed for sun and wind protection. Use the peek-a-boo window to check on your child.
- **Storage Basket:** The large basket located under the seat provides space for essentials. Do not exceed the maximum weight capacity of 4.5 kg (10 lbs).
- **Accessory Pocket:** A convenient pocket is located on the canopy for small items like a phone or keys.



Image: Close-up of the canopy's accessory pocket, demonstrating its use for small personal items.

6. Attaching the Rain Cover

The included rain cover provides protection from wet weather.

1. Unfold the rain cover.
2. Drape it over the stroller, ensuring it covers the entire seating area and canopy.
3. Secure the cover using any attached fasteners or elastic edges to prevent it from blowing off.



Image: The stroller with its transparent rain cover installed, ready for inclement weather.

7. Car Seat Compatibility

The Ingenuity 3Dquickclose CS+ Stroller is compatible with various car seats from brands such as Britax, Maxi Cosi, and Nuna. Car seat adapters are sold separately.

Refer to the car seat manufacturer's instructions for proper installation and use with the stroller.

MAINTENANCE

Cleaning Instructions

- Fabric:** Wipe fabric surfaces with a damp cloth and mild soap. Air dry. Do not bleach.
- Frame:** Wipe the metal and plastic parts of the frame with a soft, damp cloth. Dry thoroughly.
- Wheels:** Periodically clean wheels and axles of dirt and debris. Lubricate moving parts with a silicone-based lubricant if necessary.
- Rain Cover:** Wipe clean with a damp cloth. Ensure it is completely dry before folding and storing to prevent mildew.

Storage

Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures to prevent damage to materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller does not fold or unfold easily.	Locking mechanisms are not fully disengaged or engaged. Debris in moving parts.	Ensure all locks are released before folding/unfolding. Check for obstructions and clear them. Lubricate moving parts if necessary.
Wheels are stiff or squeaky.	Dirt or debris in wheel axles. Lack of lubrication.	Clean wheels and axles thoroughly. Apply a silicone-based lubricant to moving parts.
Harness is difficult to buckle or unbuckle.	Buckle prongs are misaligned or dirty.	Ensure prongs are clean and aligned correctly before inserting. Do not force the buckle.

SPECIFICATIONS

Model Number	17419-090
Product Dimensions (Unfolded)	92 x 52.07 x 104.78 cm (36.2 x 20.5 x 41.25 inches)
Folded Dimensions	<92 cm x 52 cm x 105 cm
Product Weight	8.64 kg (19.05 lbs)
Maximum Child Weight	22.5 kg (49.6 lbs)
Material Composition	55% Fabric, 25% Plastic, 20% Metal
Harness Type	5-Point
Wheel Type	4 Wheels
Car Seat Compatible	Yes (adapters sold separately)

WARRANTY INFORMATION

Ingenuity products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Ingenuity website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, replacement parts, or to view additional product information, please contact Ingenuity customer service or visit our official store.

Online Store: [Ingenuity Official Store on Amazon](#)

© 2025 Ingenuity. All rights reserved.