

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Best Choice Products](#) /

› [Best Choice Products 36-inch Pre-Lit Artificial Fir Christmas Wreath with Red Lighted Bow \(Model SKY8225\)](#)

Best Choice Products SKY8225

Best Choice Products 36-inch Pre-Lit Artificial Fir Christmas Wreath

Model: SKY8225

Brand: Best Choice Products

INTRODUCTION

Thank you for choosing the Best Choice Products 36-inch Pre-Lit Artificial Fir Christmas Wreath. This manual provides essential information for the safe and proper setup, operation, and maintenance of your new holiday decoration. Please read all instructions carefully before assembly and retain this manual for future reference. This artificial fir wreath is designed to bring festive cheer to your home, featuring 150 warm white LED lights and 300 PVC tips for a full appearance. It includes an optional pre-lit red bow for an enhanced display. The wreath is suitable for both indoor and outdoor use, constructed with flame-retardant PVC and a water-resistant power cord.

SETUP

1. Unboxing and Parts Identification

Carefully remove all components from the packaging. Verify that all listed parts are present. The 36-inch wreath typically arrives as a single piece, eliminating the need for section assembly. For larger wreaths (48in, 60in), multiple sections may be present, requiring connection.



Figure 1: The Best Choice Products 36-inch Pre-Lit Artificial Fir Christmas Wreath with its optional red lighted bow. This image displays the fully assembled and fluffed wreath, showcasing its warm white LED lights and lush green foliage.

2. Fluffing the Wreath

Upon removal from the box, the wreath branches will be compressed. To achieve a full and natural appearance, gently spread and shape each branch tip. Work from the center outwards, ensuring even distribution of the foliage to cover any bare spots. This process may take 5-15 minutes for a 36-inch wreath.

Video 1: Unboxing and initial fluffing of a 36-inch LED Christmas Wreath. This video demonstrates how the wreath appears directly out of the box and the initial steps to expand its branches for a fuller look.

3. Attaching the Red Lighted Bow (Optional)

The included red lighted bow is optional. To attach it, locate the wire ties or attachment points on the back of the bow. Position the bow on the wreath as desired and secure it firmly using the provided ties or by twisting the bow's integrated wires around the wreath's frame. Ensure the bow's power cord is accessible for connection.

Video 2: Instructions on how to attach a bow to a Christmas wreath. This video provides a visual guide for securely fastening the decorative bow to your wreath, ensuring it is positioned correctly.

4. Power Connection

Locate the power cord extending from the wreath. If using the lighted bow, connect its power cord to the designated connector on the wreath's main power cord. Plug the main power cord into a standard electrical outlet.

The wreath features a water-resistant power cord and adapter, making it suitable for outdoor use.

3 Feet Tall with Lighted Bow

The perfect indoor/outdoor accessory—
hundreds of branch tips on a durable metal
frame combine with a festive lighted bow



Lighted Bow



Over Fireplace



Home Exterior



Figure 2: A 36-inch wreath with a lighted bow, illustrating the connection points for the power supply. This image highlights the integration of the bow's lighting with the main wreath's power system.

OPERATING INSTRUCTIONS

1. Turning Lights On/Off

Once plugged in, the LED lights on the wreath and bow (if attached) should illuminate. If your model includes a remote control, use it to power the lights on or off. Otherwise, unplugging the wreath will turn off the lights.

2. Light Modes and Timer Function

Some models may feature multiple lighting modes (e.g., steady, flashing, fading) and a built-in timer function. Refer to any included remote control or integrated controller for specific instructions on cycling through modes or activating the timer. The timer function typically allows the lights to operate for a set duration (e.g., 8 hours on, 16 hours off) before automatically repeating the cycle.

Video 3: Demonstration of various lighting effects and timer functions on a lighted holiday wreath. This video showcases different light patterns and the convenience of a timer for automated operation.

MAINTENANCE

1. Cleaning

To clean your wreath, gently wipe the branches with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the PVC tips or the LED lights. Ensure the wreath is unplugged before cleaning.

2. Storage

When not in use, store the wreath in its original packaging or a suitable storage container to protect it from dust and damage. Store in a cool, dry place away from direct sunlight and extreme temperatures. If the wreath was assembled from multiple sections, it can be disassembled for more compact storage.

Indoor or Outdoor Use

Pre-Strung Lights
 Warm LED lights spread the glow of the season

Weather-Resistant Materials
 Perfect for outdoor holiday displays

Flame Retardant PVC Tips
 Helps protect your home from accidental power surges



Figure 3: Key features of the wreath, including pre-strung lights, weather-resistant materials, and flame-retardant PVC tips. This image highlights the durability and safety aspects of the product for both indoor and outdoor environments.

TROUBLESHOOTING

- **Lights Not Working:**

Ensure the power cord is securely plugged into a functional electrical outlet. Check all connections between the wreath and the bow (if applicable). Inspect for any loose or damaged bulbs. If individual bulbs are replaceable, replace any faulty ones.

- **Wreath Appears Sparse:**

The branches may have become compressed during storage or shipping. Refer to the "Fluffing the Wreath" section in Setup to reshape and spread the branch tips for a fuller appearance.

- **Bow Lights Not Working:**

Verify that the bow's power cord is correctly connected to the wreath's power system. Check for any loose connections or damaged wires within the bow itself.

SPECIFICATIONS

Brand	Best Choice Products
Model Number	SKY8225
Dimensions	36" Diameter x 10" Height
Item Weight	6.5 Pounds
Material	Polyvinyl Chloride (PVC)
Color	Green Spruce
Light Type	LED (Warm White)
Wreath Light Count	150 LED Lights
Bow Light Count	35 LED Lights (for 36in bow)
PVC Tips	300 Tips
Mounting Type	Wall Mount
Indoor/Outdoor Use	Indoor/Outdoor (with water-resistant cord)

Product Dimensions

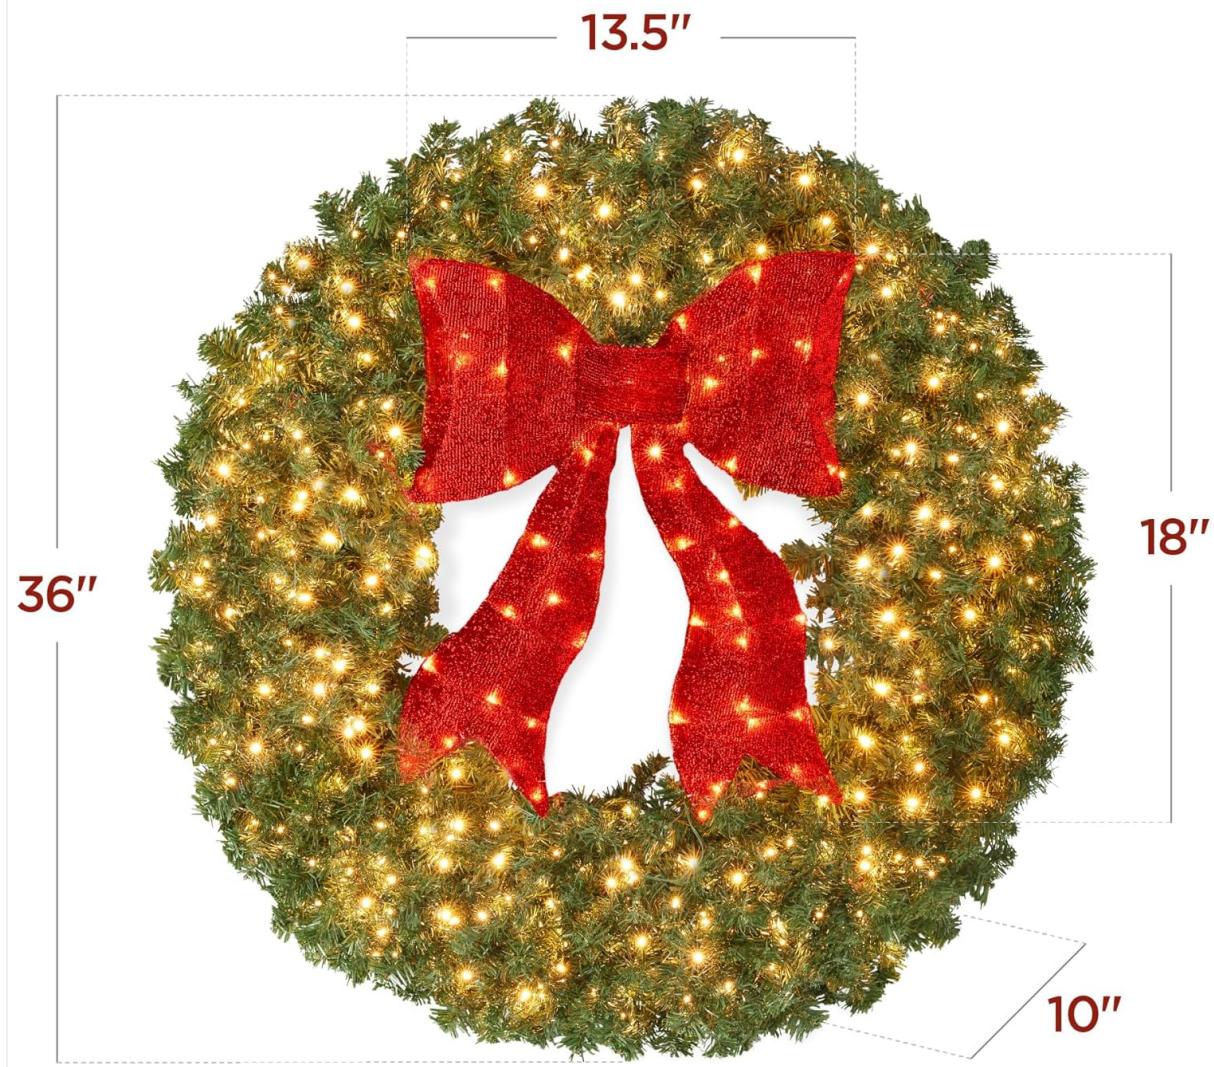


Figure 4: A diagram illustrating the overall dimensions of the 36-inch wreath, including its diameter and depth. This provides a clear visual reference for product sizing.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your product packaging or visit the official Best Choice Products website. Keep your purchase receipt for any warranty claims.