

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Protmex](#) /

› [Protmex Cordless Car Buffer Polisher Instruction Manual - Model 1](#)

Protmex 1

Protmex Cordless Car Buffer Polisher - Model 1 Instruction Manual

Brand: Protmex | Model: 1

INTRODUCTION

Thank you for choosing the Protmex Cordless Car Buffer Polisher. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new tool. Please read this manual thoroughly before use and keep it for future reference.

WHAT'S IN THE BOX

Your Protmex Cordless Car Buffer Polisher kit includes the following components:

- 1 x Eccentric Polisher
- 2 x 21V 4000mAh Lithium-Ion Batteries
- 1 x Battery Charger
- 3 x Sponge Polishing Pads (Flat)
- 3 x Wave Sponge Polishing Pads
- 2 x Wool Polishing Discs
- 2 x Cloth Covers
- 2 x Non-woven Covers
- 4 x Sandpaper
- 1 x Apron
- 1 x Pair of Gloves
- 1 x Storage Bag

WHAT YOU WILL GET FROM PACKAGE



All components included in the Protmex Cordless Car Buffer Polisher kit.

Official video showcasing the contents of the Protmex Cordless Car Buffer Polisher kit.

PRODUCT FEATURES

- **Powerful 8-Speed Control:** Features 8 adjustable speed levels ranging from 2800 to 6000 RPM. Speeds 1-3 are ideal for waxing and polishing, 4-6 for polishing and cleaning, and 7-8 for tackling stubborn defects and oxidation.
- **Long-Lasting Cordless Operation:** Equipped with 2 x 21V 4000mAh battery packs, providing approximately 90 to 120 minutes of continuous operation. The wireless design offers greater working freedom.
- **Upgraded Touchscreen Display:** Easy-to-use touchscreen for flexible speed adjustment. The LED digital display shows the current gear status, and gear modes can be switched freely.
- **Enhanced Eccentric Orbital Design:** Utilizes an upgraded 9mm double-acting orbital eccentric shaft design and a premium pure copper motor for strong power, high polishing efficiency, and low noise.
- **Versatile Applications:** Suitable for car polishing, waxing, and buffing, as well as for furniture, ceramics, wood, and metal.



8 Variable Speeds for various applications.

RECHARGEABLE LI-ION BATTERY WITH FAST CHARGE

Friendly User Feedback



2* 21V 4000mAh(Including 10 Batteries)
4.0AH large capacity battery 1 to 2 hours fast charging

Rechargeable Li-ion Battery with Fast Charge.

SETUP

1. Battery Installation


1. Ensure the polisher is turned off.
2. Align the battery pack with the battery slot at the base of the polisher handle.
3. Slide the battery into the slot until it clicks securely into place.
4. To remove the battery, press the release button on the battery pack and slide it out.

2. Attaching Polishing Pads/Discs

1. Ensure the polisher is turned off and the battery is removed for safety.
2. Align the desired polishing pad (sponge, wave sponge, wool, cloth cover, non-woven cover, or sandpaper) with the Velcro backing plate on the polisher.
3. Press firmly to secure the pad to the backing plate. The Velcro ensures a strong attachment.
4. To remove, simply peel the pad off the backing plate.

9MM ORBITAL BUFFER

Eccentric Polisher Has A Larger Contact Surface,
Which Helps The Wax To Be Evenly Distributed

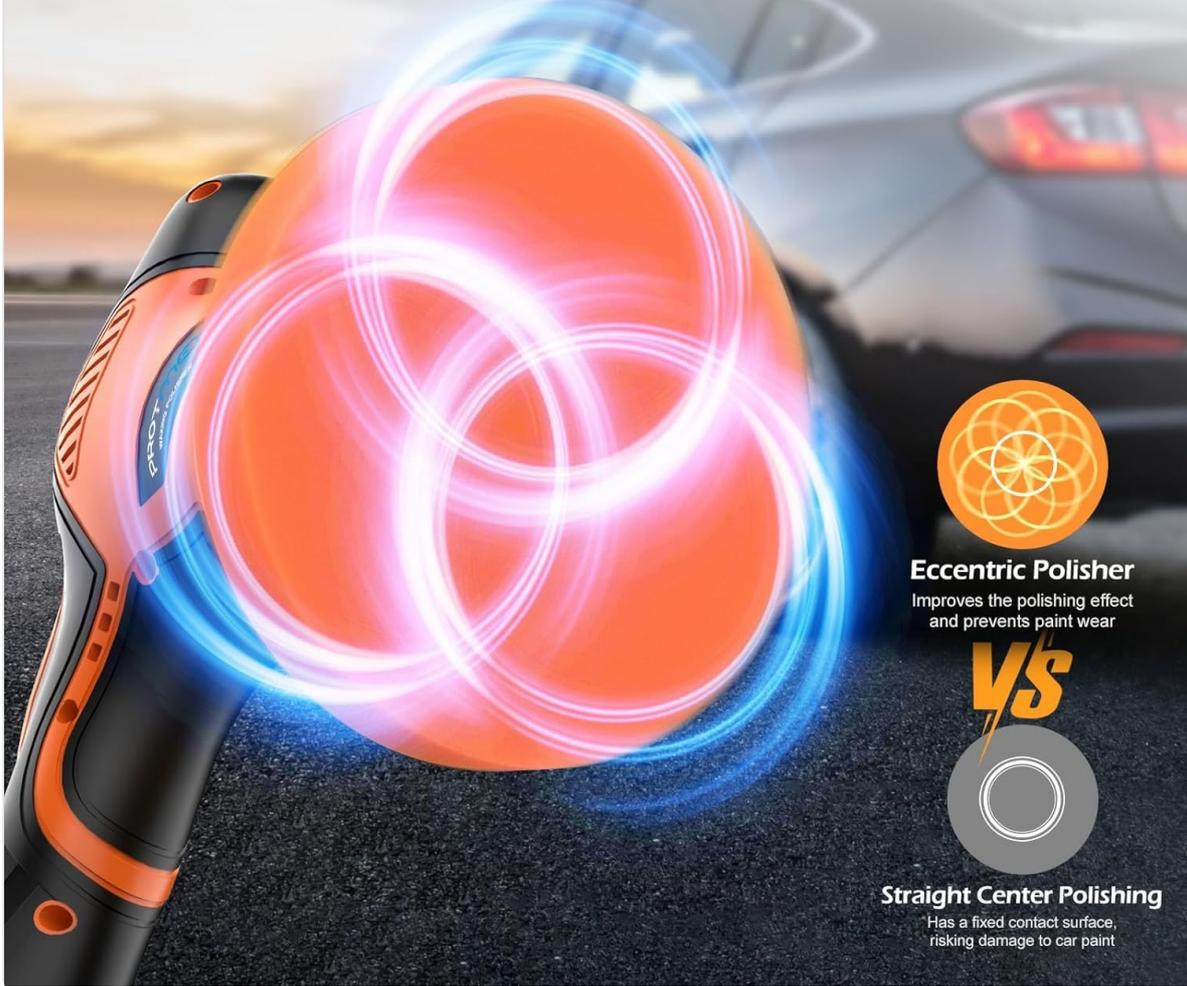

Battery attached to the polisher.

OPERATION

1. Powering On/Off

- To turn on the polisher, press and hold the power button (usually marked with a power symbol) on the touchscreen display for 3-5 seconds.
- To turn off the polisher, press and hold the power button again for 3-5 seconds.

2. Adjusting Speed

- Once powered on, use the '+' and '-' buttons on the touchscreen display to adjust the speed level (1-8).
- The LED digital display will show the current speed setting.

3. Recommended Speed Settings

- **Speed 1-3 (Low):** Ideal for waxing, buffing, and light polishing.
- **Speed 4-6 (Medium):** Suitable for general polishing, cleaning, and swirl removal.
- **Speed 7-8 (High):** Best for tackling stubborn defects, heavy oxidation, and paint correction.



Touchscreen display for easy speed control.

Official video demonstrating the polisher's operation and features.

MAINTENANCE

- **Cleaning Pads:** After each use, remove the polishing pads and clean them thoroughly with water and a mild detergent. Allow them to air dry completely before storing.
- **Tool Cleaning:** Wipe down the polisher body with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the polisher and its accessories in the provided storage bag in a cool, dry place, away from direct sunlight and moisture. Ensure batteries are fully charged before long-term storage.

TROUBLESHOOTING

- **Polisher not turning on:** Ensure the battery is fully charged and properly installed. The power button requires a long press (3-5 seconds) to activate.
- **Inconsistent speed or power:** Check battery charge level. If the issue persists, ensure the polishing pad is correctly attached and not obstructed.
- **Excessive vibration:** Ensure the polishing pad is evenly attached and not damaged. Replace worn or damaged pads.
- **Battery not charging:** Verify the charger is properly connected to both the battery and a working power outlet. The charger indicator light should show charging status.

SPECIFICATIONS

Brand	Protmex
Model Number	1
Power Source	Battery Powered
Battery Voltage	21V
Battery Capacity	4000mAh (2 included)

Speed Range	2800 - 6000 RPM
Variable Speeds	8 Levels
Polishing Disc Size	6 inches
Orbital Design	9mm Double-Acting Eccentric
Item Weight	6.93 pounds
Material	Metal

WARRANTY & SUPPORT

Protmex offers customer support for this product. For any inquiries or assistance, please refer to the contact information provided with your purchase or visit the official Protmex website. A limited warranty is provided with this product; please consult the warranty details included in your package for specific terms and conditions.