

[manuals.plus](#) /

› [Skechers](#) /

› [Skechers SR2147 Glenhaven Digital Watch User Manual](#)

Skechers SR2147



Skechers SR2147 Glenhaven Digital Watch User Manual

Model: SR2147

1. INTRODUCTION

Thank you for choosing the Skechers SR2147 Glenhaven Digital Watch. This watch combines a robust design with essential digital functions, including a chronograph, calendar, 12/24-hour time format, daily alarm with chime, and an EL backlight. This manual will guide you through the setup, operation, and maintenance of your new timepiece.

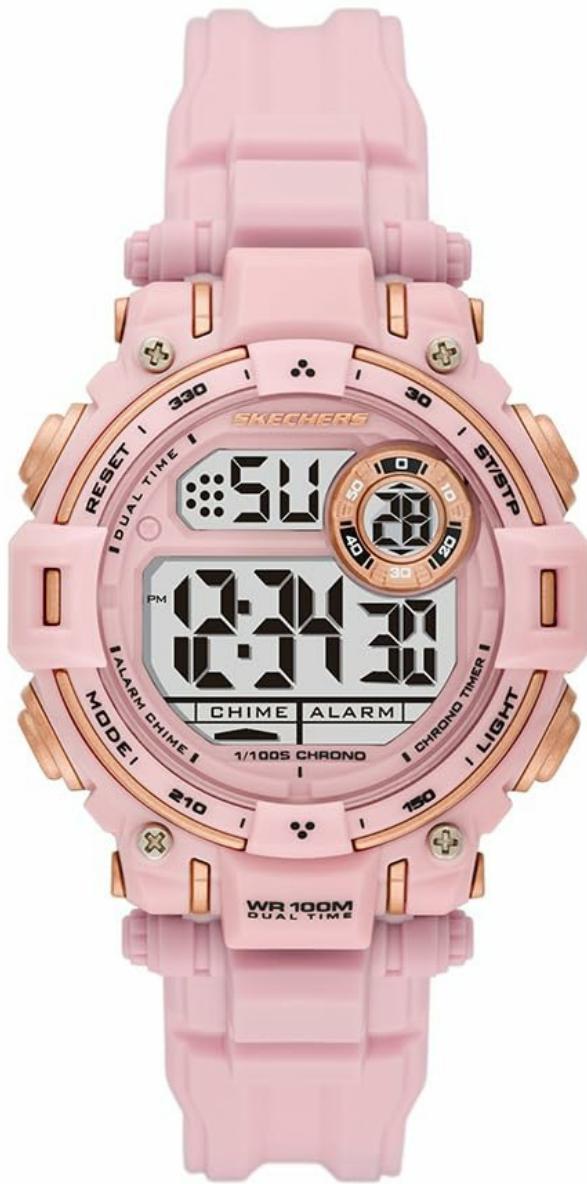


Figure 1: Front view of the Skechers SR2147 Glenhaven Digital Watch.

2. SETUP

2.1 Initial Activation

Your watch may arrive in a power-saving mode. If the display is blank, press any button to activate it. If a plastic battery tab is present, gently remove it from the side of the watch to allow the battery to make contact.

2.2 Setting Time and Date



Figure 2: Side view of the watch, highlighting the MODE and RESET buttons.

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **RESET** button to select the digit or setting you wish to adjust (e.g., hours, minutes, year, month, day).
3. Use the **START/STOP** button (often located on the opposite side or top right) to increase the value. Hold to advance rapidly.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode and return to the normal time display.

2.3 Wearing the Watch

Adjust the polyurethane strap to fit comfortably around your wrist. The buckle clasp ensures a secure fit.



Figure 3: The Skechers SR2147 watch comfortably worn on a wrist.



Figure 4: Close-up of the watch's buckle clasp for secure fastening.

3. OPERATING INSTRUCTIONS

3.1 Mode Navigation

Press the **MODE** button to cycle through the different functions: Time Display → Chronograph → Alarm → Time Setting.

3.2 Chronograph (Stopwatch)

1. From the Time Display, press **MODE** until 'CHRONO' or 'STW' appears.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause.
4. Press **RESET** to clear the stopwatch to zero.

3.3 Daily Alarm

1. From the Time Display, press **MODE** until 'ALARM' or 'ALM' appears.
2. Press **RESET** to select hours or minutes.
3. Use the **START/STOP** button to adjust the alarm time.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate the alarm, typically press **START/STOP** while in the alarm display mode. An alarm icon will appear/disappear.

3.4 EL Backlight

Press the **LIGHT** button (usually on the top left) to illuminate the display for a few seconds in low-light conditions.

3.5 12/24-Hour Format

While in time setting mode, use the **RESET** or **START/STOP** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

4. MAINTENANCE

4.1 Cleaning

Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then rinse with clean water and dry thoroughly. Avoid harsh chemicals.

4.2 Water Resistance

This watch is water-resistant up to 100 meters (10 ATM). This means it is suitable for swimming and snorkeling, but not for high-impact water sports or scuba diving. Do not operate buttons underwater.

4.3 Battery Replacement

When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

5. TROUBLESHOOTING

- **Display is blank:** Check if the battery tab has been removed. If not, the battery may be depleted. Replace the battery.
- **Time is incorrect:** Refer to Section 2.2 to reset the time and date. Ensure the 12/24-hour format is set correctly.
- **Alarm does not sound:** Ensure the alarm is activated (check for the alarm icon on the display). Verify the alarm time is set correctly.
- **Buttons are unresponsive:** The watch may be in a locked mode (unlikely for this model) or the battery is very low. Try replacing the battery. If issues persist, contact customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	SR2147

Brand	Skechers
Display Type	Digital
Movement Type	Quartz
Power Source	Battery
Case Material	Polycarbonate
Band Material	Polyurethane
Crystal Material	Mineral Glass
Case Diameter	40 mm
Case Thickness	14 mm
Band Width	20 mm
Band Length	19 cm
Water Resistance	100 Meters (10 ATM)
Weight	50 Grams
UPC	796483670648

7. WARRANTY AND SUPPORT

7.1 Limited Warranty

This Skechers watch is covered by a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. The warranty typically covers manufacturing defects but does not cover normal wear and tear, battery life, or damage caused by improper use or accidents.

7.2 Customer Support

For further assistance, troubleshooting, or warranty claims, please contact Skechers customer support or the retailer from whom you purchased the watch. Keep your proof of purchase for warranty validation.



Figure 5: The Skechers watch product box, containing the watch and documentation.

© 2023 Skechers. All rights reserved.