

manuals.plus /

› **INTEMPO** /

› **Intempo Noise Cancelling Earbuds Model EE7562 User Manual**

INTEMPO EE7562

Intempo Noise Cancelling Earbuds Model EE7562 User Manual

Model: EE7562 | Brand: INTEMPO

INTRODUCTION

Thank you for choosing the Intempo Noise Cancelling Earbuds. This manual provides essential information for the safe and efficient use of your new wireless earbuds. Please read it thoroughly before use and retain it for future reference.

These wireless earbuds feature Bluetooth connectivity, active noise cancellation, and intuitive touch controls, offering up to 22 hours of playback time.



Figure 1: Intempo Noise Cancelling Earbuds in their closed green charging case.

PACKAGE CONTENTS

- Intempo Noise Cancelling Earbuds (Left and Right)
- Charging Case
- Additional Ear Tips (various sizes)
- Type-C Charging Cable
- User Manual

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case. Place the earbuds into the charging case. Connect the supplied Type-C charging cable to the charging port on the case and the other end to a USB power source (e.g., computer, wall adapter).

- The indicator light on the case will show charging status.
- A full charge typically takes approximately 1.5 hours.



Figure 2: USB-C charging port located on the charging case.

2. Pairing with a Bluetooth Device

1. Ensure the earbuds are charged. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light (if present).
2. On your device (e.g., smartphone, tablet), go to the Bluetooth settings.
3. Search for available devices and select "Intempo EE7562" (or similar name) from the list.
4. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or solid LED light).
5. The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled on the device.



Figure 3: Earbuds inside the open charging case, ready for pairing.

OPERATING INSTRUCTIONS

Wearing the Earbuds

Select the ear tips that provide the best fit and seal for optimal sound quality and noise cancellation. Gently insert the earbuds into your ears and twist slightly to secure them.



Figure 4: Individual earbuds with ear tips.

Touch Controls

The earbuds feature intuitive touch controls on their outer surface. Specific functions may vary slightly, but common controls include:

- **Play/Pause:** Single tap on either earbud.

- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold on either earbud during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud.
- **Active Noise Cancellation (ANC) / Transparency Mode:** Press and hold on either earbud for 2 seconds to cycle through modes.

Active Noise Cancellation (ANC)

The active noise cancellation feature reduces ambient noise, allowing for a more immersive audio experience. To activate or deactivate ANC, use the touch control as described above. When ANC is active, you may notice a reduction in background sounds.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Ear Tips:** Remove and clean ear tips periodically to prevent wax buildup. They can be gently washed with water and mild soap, then thoroughly dried before reattaching.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** These earbuds are not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing.	<ul style="list-style-type: none"> • Ensure earbuds are charged. • Turn off and on Bluetooth on your device. • Forget "Intempo EE7562" from your device's Bluetooth list and try pairing again. • Place earbuds back in the case, close, then reopen to reset pairing mode.
No sound or low volume.	<ul style="list-style-type: none"> • Check volume levels on both earbuds and your connected device. • Ensure earbuds are properly seated in your ears. • Reconnect the earbuds to your device.
Active Noise Cancellation not working.	<ul style="list-style-type: none"> • Ensure ANC is activated via touch control. • Check for proper fit of ear tips to ensure a good seal.

Problem	Solution
Earbuds not charging.	<ul style="list-style-type: none">• Ensure the charging cable is securely connected to both the case and the power source.• Try a different USB port or power adapter.• Clean the charging contacts on the earbuds and inside the case.

SPECIFICATIONS

Feature	Detail
Model Number	EE7562
Brand	INTEMPO
Connectivity Technology	Wireless (Bluetooth)
Form Factor	In Ear
Active Noise Cancellation	Yes
Playback Time	Up to 22 hours (with charging case)
Charging Time	Approx. 1.5 hours
Battery Type	Lithium Ion
Charging Port	Type-C
Compatible Devices	Android (and other Bluetooth-enabled devices)
Material	Plastic, metal, PCB
Item Weight	0.05 Kilograms (50g)
Product Dimensions	6.5 x 2 x 5 cm

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official INTEMPO website. Specific warranty terms may vary by region and retailer.

Manufacturer: Intempo