

[Manuals.plus](#) /

› [Panana](#) /

› Panana 8L Dual Zone Air Fryer (Model PL-05) Instruction Manual

Panana PL-05

Panana 8L Dual Zone Air Fryer

Model: PL-05

INTRODUCTION

Thank you for choosing the Panana 8L Dual Zone Air Fryer. This appliance is designed to provide a versatile and efficient cooking experience, allowing you to prepare a variety of meals with less oil. Featuring two independent 4L baskets, it offers 6-in-1 functionality including air frying, roasting, baking, dehydrating, defrosting, and reheating. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances, to allow adequate air circulation.
- Do not immerse the main unit, cord, or plug in water or any other liquid to prevent electrical shock.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged. Contact customer support for assistance.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not block the air intake or outlet vents during operation.
- Exercise extreme caution when removing hot accessories or disposing of hot grease.
- Do not use attachments not recommended by the manufacturer, as they may cause injuries.
- This appliance is for household use only. Do not use outdoors.
- The exterior surfaces may become hot during use. Avoid touching hot surfaces directly. Use handles or oven mitts.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Panana Dual Zone Air Fryer:

- Main Unit with Control Panel

- 2 x 4L Non-stick Drawers (Baskets)
- 2 x Non-stick Preservation Trays (Crisper Plates)
- Internal Metal Cavity Body



Image: Overview of the Panana 8L Dual Zone Air Fryer components, including the main body, two 4L non-stick drawers, and two non-stick preservation trays.

BEFORE FIRST USE (SETUP)

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean Components:** Wash the non-stick drawers and preservation trays with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a dry, level, heat-resistant surface. Ensure there is at least 15 cm (6 inches) of clear space around the back and sides, and above the appliance for proper ventilation.
4. **First Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C (400°F) to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal and will dissipate.

CONTROL PANEL OVERVIEW

The air fryer features an intuitive touch control panel. The display shows time, temperature, and selected functions for each basket.

DUAL ZONE TECHNOLOGY

Different programs, times and temperatures in each zone - both finish at the same time!

temperature range:

40-210°C

Fahrenheit degree:

104-410°F



Independent
partition



One pot
with two flavors



Uniform
heating



Image: The control panel of the Panana 8L Dual Zone Air Fryer, highlighting the various cooking functions and dual zone display.

- **POWER Button:** Turns the appliance on/off.
- **TEMP/TIME Buttons:** Adjust temperature and cooking time.
- **Basket Select (1/2):** Choose which basket to program.
- **Pre-set Functions:** Dedicated buttons for Air Fry, Roast, Bake, Dehydrate, Defrost, Reheat.
- **MEAL Button:** Activates the Smart Sync Cook function.
- **DUAL Button:** Activates independent dual zone cooking.
- **START/STOP Button:** Starts or pauses the cooking cycle.

OPERATING INSTRUCTIONS

Basic Operation

1. Plug the air fryer into a grounded electrical outlet.
2. Press the POWER button to turn on the display.
3. Place food into the desired basket(s) with the crisper plate inserted. Do not overfill.
4. Select Basket 1 or 2.
5. Choose a pre-set function or manually set the temperature (40°C - 210°C / 104°F - 410°F) and time using the TEMP/TIME buttons.
6. Press START/STOP to begin cooking.

6-in-1 Cooking Functions

The air fryer offers six versatile cooking functions:

- **Air Fry:** For crispy results with little to no oil.
- **Roast:** Ideal for meats and vegetables.

- **Bake:** Perfect for cakes, pastries, and other baked goods.
- **Dehydrate:** For drying fruits, vegetables, or making jerky.
- **Defrost:** Gently thaws frozen foods.
- **Reheat:** Warms up leftovers quickly and efficiently.



Image: The dual zone technology allows for independent programming of temperature and time in each basket, with a temperature range of 40-210°C (104-410°F).

Dual Zone Cooking

The Panana Air Fryer features two independent cooking zones, allowing you to cook two different foods at different temperatures and times simultaneously.

- **Independent Cooking:** Select Basket 1, set its program, then select Basket 2 and set its program. Press START/STOP. Both baskets will operate independently.
- **Smart Sync Cook (MEAL Function):** This feature ensures two different foods, cooked with different settings in each basket, finish at the same time. Program Basket 1, then program Basket 2. Press the MEAL button, then START/STOP. The air fryer will intelligently adjust the cooking start times to synchronize the finish.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Baskets and Trays:** The non-stick drawers and preservation trays are designed for easy cleaning. They can be washed by hand with warm, soapy water and a non-abrasive sponge. While some parts are indicated as dishwasher safe, hand washing is recommended to prolong the non-stick coating.
3. **Clean Interior Cavity:** Wipe the internal metal cavity with a damp cloth or sponge. For stubborn food residue, use a mild detergent. Avoid abrasive cleaners or scouring pads.
4. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive materials.

5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

EASY TO CLEAN

Non-stick, dishwasher safe parts



Cold plate spray non stick oil



Metal inner cavity



Independent partition



Image: Illustration of cleaning the non-stick crisper plates and the internal metal cavity of the air fryer.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Baskets are overcrowded; insufficient shaking/flipping.	Do not overcrowd baskets. Shake or flip food halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the baskets and crisper plates thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture in food; not enough oil (for certain foods); incorrect temperature/time.	Pat food dry before air frying. Lightly spray with oil if desired. Adjust temperature and time as needed.
Display shows an error code.	Internal malfunction.	Unplug the air fryer, wait 10 minutes, then plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

- **Model Number:** PL-05
- **Capacity:** 8 Liters (2 x 4L independent baskets)
- **Power:** 2400 Watts

- **Voltage:** [Not specified in JSON, placeholder if needed]
- **Temperature Range:** 40°C - 210°C (104°F - 410°F)
- **Control Method:** Touch
- **Product Dimensions (L x W x H):** Approximately 37.1 cm x 35.1 cm x 31.2 cm (14.6 x 13.8 x 12.3 inches)
- **Material:** Polypropylene (PP) exterior, Metal internal cavity
- **Oil-Free Frying Technology:** Rapid Air Circulation
- **UPC:** 710917642483
- **Country of Origin:** China

Six major cooking functions

- Air Fry
- Roast
- Bake
- Dehydrate
- Defrost
- Reheat



Grilled French fries



Baking egg tarts



Heating chicken wings



Image: Detailed product dimensions of the Panana 8L Dual Zone Air Fryer.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Panana customer service. Keep your purchase receipt as proof of purchase.