

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RETROSUN](#) /

› [RETROSUN MR25GA AKB76046603 Magic Remote Control User Manual](#)

RETROSUN MR25GA AKB76046603

RETROSUN MR25GA AKB76046603 Magic Remote Control User Manual

Model: MR25GA AKB76046603

INTRODUCTION

This manual provides instructions for the RETROSUN MR25GA AKB76046603 Magic Remote Control. This remote is designed as a replacement for original LG Magic Remote controls and offers similar functionality, including AI, pointer, and voice control features. Please read this manual carefully before use to ensure proper operation and to maximize your viewing experience.



Image: Front and back view of the RETROSUN MR25GA AKB76046603 Magic Remote Control, showcasing its ergonomic design and button layout.

COMPATIBILITY

The RETROSUN MR25GA AKB76046603 Magic Remote Control is compatible with the following 2025 LG TV series:

- LG C5 Series
- LG B5 Series
- LG G5 Series
- LG M5 Series

For specific compatible TV models, please refer to the detailed list below:



Image: A visual representation of the remote control alongside various LG TV models (C5, B5, G5/M5 series) indicating compatibility.

Note: This remote is not compatible with LG Roku TVs.

SETUP AND PAIRING

1. Battery Installation

The remote control requires two (2) AA batteries (not included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

Magic/Air mouse Function

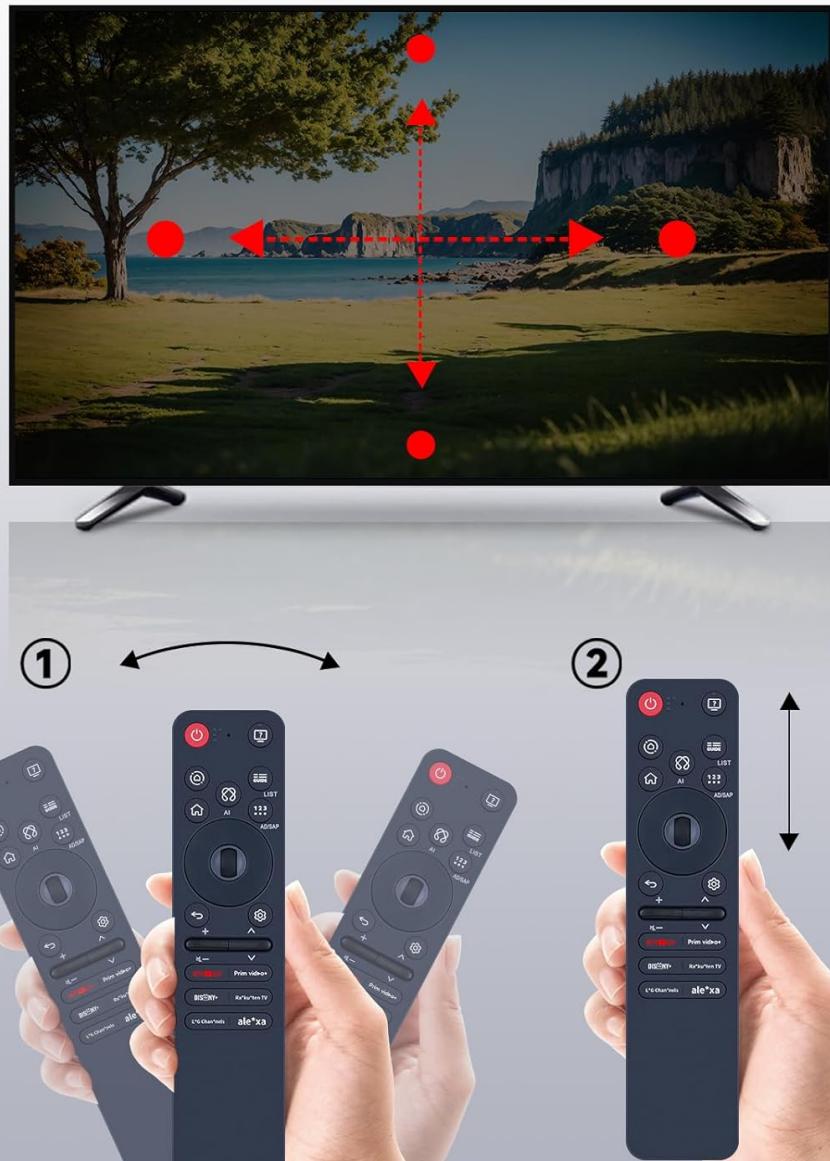


Image: Close-up view of the remote control's battery compartment, showing where to insert two AA batteries.

2. Registering (Pairing) the Magic Remote

To enable the Magic Remote's full functionality, including the pointer and voice control, it must be paired with your LG TV.

1. Ensure your TV is turned on.
2. Point the Magic Remote at your TV screen.
3. Press the **[Wheel (OK)]** button (the scroll wheel in the center of the directional pad) on the remote control.

The remote should now be registered with your TV. If registration fails, turn the TV off and then back on, and repeat the pairing steps.



How To Register Magic Remote

First put 2ps AA batteries into the magic remote and turn the TV on and then point the magic remote at your TV and press the “Wheel (OK)” on the remote control. (Note: if the TV fails to register the Magic remote, try again after turning the TV off and back on)

How To Deregister Magic Remote

First press and hold the " HOME " and "BACK" buttons at the same time for 5 seconds, to unpair the Magic Remote with your TV. and then Press and Hold "GUIDE" button for more than 5 seconds to disconnect and re-register the Magic Remote at the same time.

Image: A diagram illustrating the steps to register the Magic Remote, highlighting the Wheel (OK) button.

OPERATING THE REMOTE CONTROL

Key Functions

The RETROSUN Magic Remote provides intuitive control over your LG TV. Below are the primary functions:

- **Power Button ()**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly input channel numbers.
- **Volume Up/Down (+ / -)**: Adjusts the TV volume.
- **Channel Up/Down (▲ / ▼)**: Changes TV channels.
- **Mute Button ()**: Mutes or unmutes the TV sound.

- **Home Button (△)**: Accesses the TV's Home screen or Smart TV menu.
- **Back Button (↶)**: Returns to the previous screen or menu.
- **Settings Button (⚙)**: Opens the TV's settings menu.
- **Directional Pad & Wheel (OK)**: Navigate menus. The wheel also functions as an OK>Select button and for scrolling.

Magic Remote Features

- **Pointer Function**: Move the remote to control an on-screen cursor, similar to a computer mouse. This allows for quick selection of items.
- **Voice Control (AI)**: Press the dedicated AI button to activate voice commands for searching content, controlling TV functions, or asking questions.



Image: A visual guide demonstrating the Magic/Air mouse function, showing how moving the remote translates to cursor movement on the TV screen.

Shortcut Buttons for Streaming Services

The remote includes dedicated shortcut buttons for quick access to popular streaming applications:

- Netflix
- Prime Video
- Disney+
- Rakuten TV
- LG Channels
- Alexa (for voice assistant functionality)



Image: The remote control with six shortcut buttons prominently highlighted, each corresponding to a popular streaming service or voice assistant.

CARE AND MAINTENANCE

- Keep the remote control dry. Moisture can damage the internal circuits.
- Do not expose the remote to extreme temperatures.
- Avoid dropping or subjecting the remote to strong impacts.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Remove batteries if the remote control will not be used for an extended period to prevent battery leakage.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and not depleted. Replace with new AA batteries if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote and the TV's sensor.
- **Re-register Remote:** If the remote stops responding or the pointer function is erratic, try re-registering it (see "Registering the Magic Remote" section).

Deregistering (Unpairing) the Magic Remote

If you need to unpair the remote from your TV, follow these steps:

1. Press and hold the **[HOME]** button and the **[RETURN]** button simultaneously for 5 seconds. This will unpair the Magic Remote from your TV.
2. To disconnect and immediately re-register the Magic Remote, press and hold the **[GUIDE]** button for more than 5 seconds.

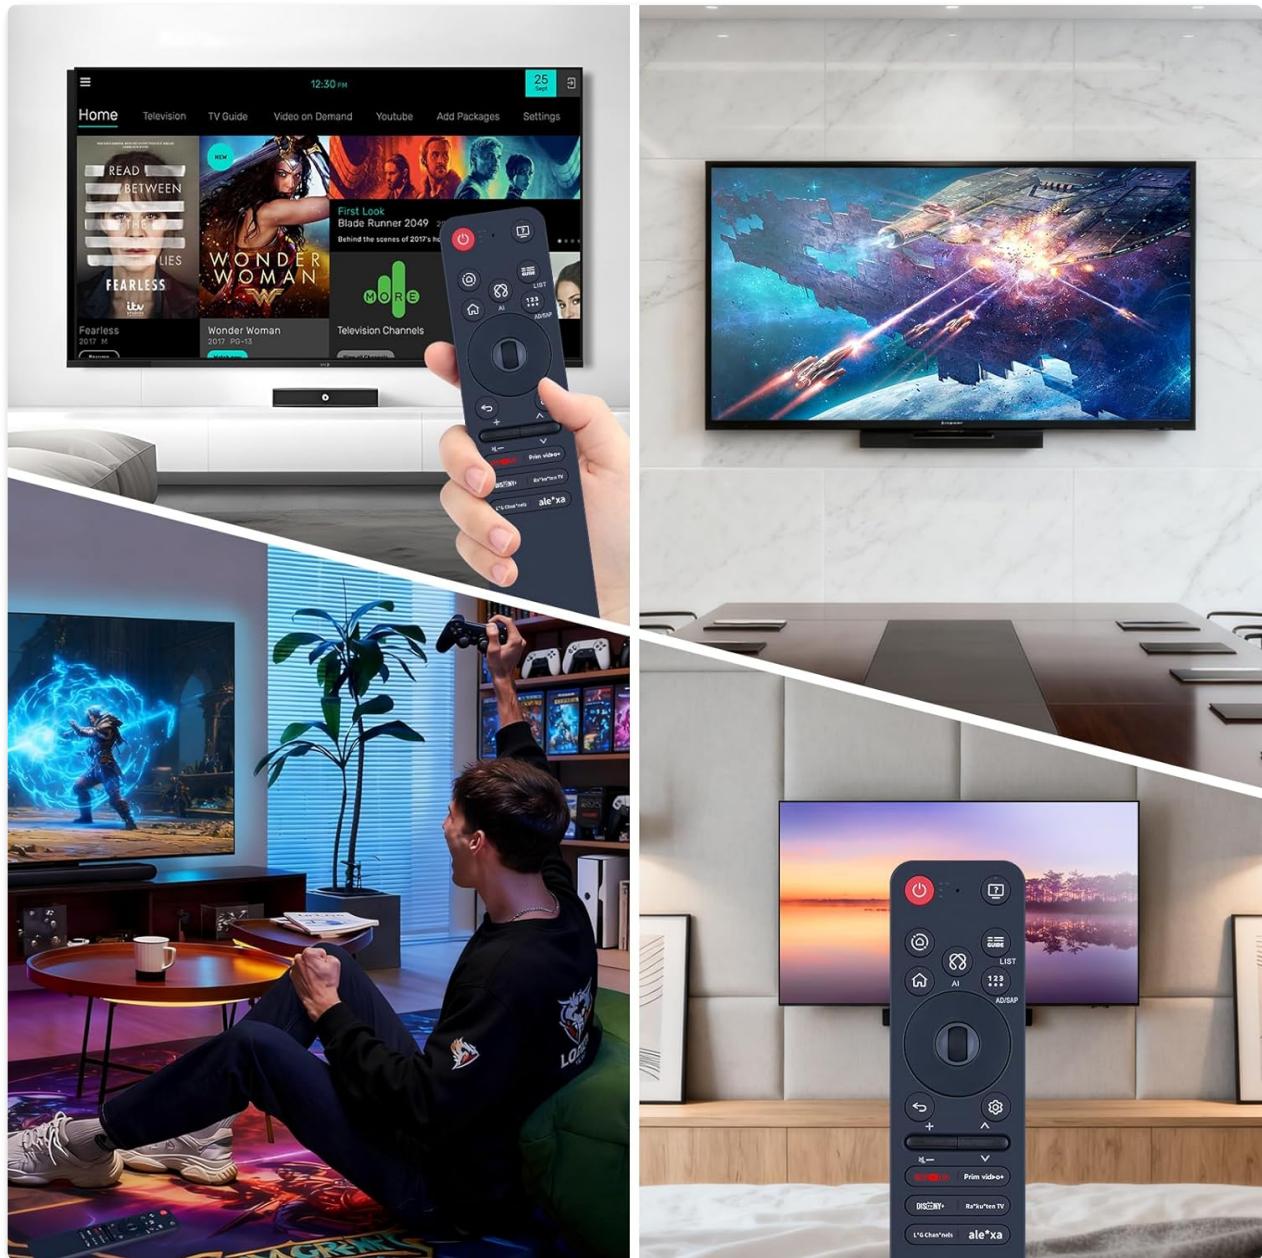


Image: A diagram illustrating the steps to deregister the Magic Remote, highlighting the HOME, RETURN, and GUIDE buttons.

SPECIFICATIONS

Model Number	MR25GA AKB76046603
Brand	RETROSUN
Compatible Devices	2025 LG C5, B5, G5, M5 Series Televisions
Power Source	2 x AA Batteries (not included)
Special Features	Ergonomic design, Voice Search (AI), Pointer Function, Dedicated Streaming Buttons
Color	Black
Item Weight	2.46 ounces (approx. 70 grams)
Package Dimensions	6.89 x 1.65 x 0.59 inches (approx. 17.5 x 4.2 x 1.5 cm)

SUPPORT AND WARRANTY

For any questions, technical assistance, or support regarding your RETROSUN Magic Remote Control, please contact the seller through the Amazon platform's messaging tools. The seller aims to respond to inquiries within 12 hours.

Information regarding specific warranty terms is not provided in this manual. Please refer to your purchase documentation or contact the seller for warranty details.

© 2025 RETROSUN. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.