

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hotpoint ARISTON](#) /
- › [Hotpoint Ariston HA6IA14BN7A0 Built-in Dishwasher User Manual](#)

Hotpoint ARISTON HA6IA14BN7A0

Hotpoint Ariston HA6IA14BN7A0 Built-in Dishwasher User Manual

Model: HA6IA14BN7A0

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Hotpoint Ariston HA6IA14BN7A0 built-in dishwasher. Please read these instructions carefully before installation, operation, or maintenance to ensure optimal performance and longevity of your appliance. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- **Electrical Safety:** Ensure the dishwasher is properly grounded. Do not use extension cords or adapters. Disconnect power before servicing.
- **Water Connection:** Connect the dishwasher to a cold water supply using new hose sets. Do not reuse old hose sets.
- **Child Safety:** Keep children away from the dishwasher, especially when it is operating. Detergents are corrosive.
- **Loading:** Load sharp items (knives, forks) with the handles up to prevent injury.
- **Flammable Materials:** Do not store or use flammable materials near the dishwasher.
- **Door:** Do not sit, stand, or place heavy objects on the dishwasher door when it is open.

3. WHAT'S IN THE BOX

Upon unpacking, verify that all components are present:

- Hotpoint Ariston HA6IA14BN7A0 Built-in Dishwasher Unit
- Cutlery Basket
- Cup Rack
- User Manual (this document)
- Installation Kit (hoses, mounting brackets, screws)

4. SETUP AND INSTALLATION

The Hotpoint Ariston HA6IA14BN7A0 is designed for built-in installation. Professional installation is recommended.

4.1. Site Preparation

Ensure the installation area meets the required dimensions. The dishwasher requires a dedicated electrical outlet, a cold water supply connection, and a drain connection.

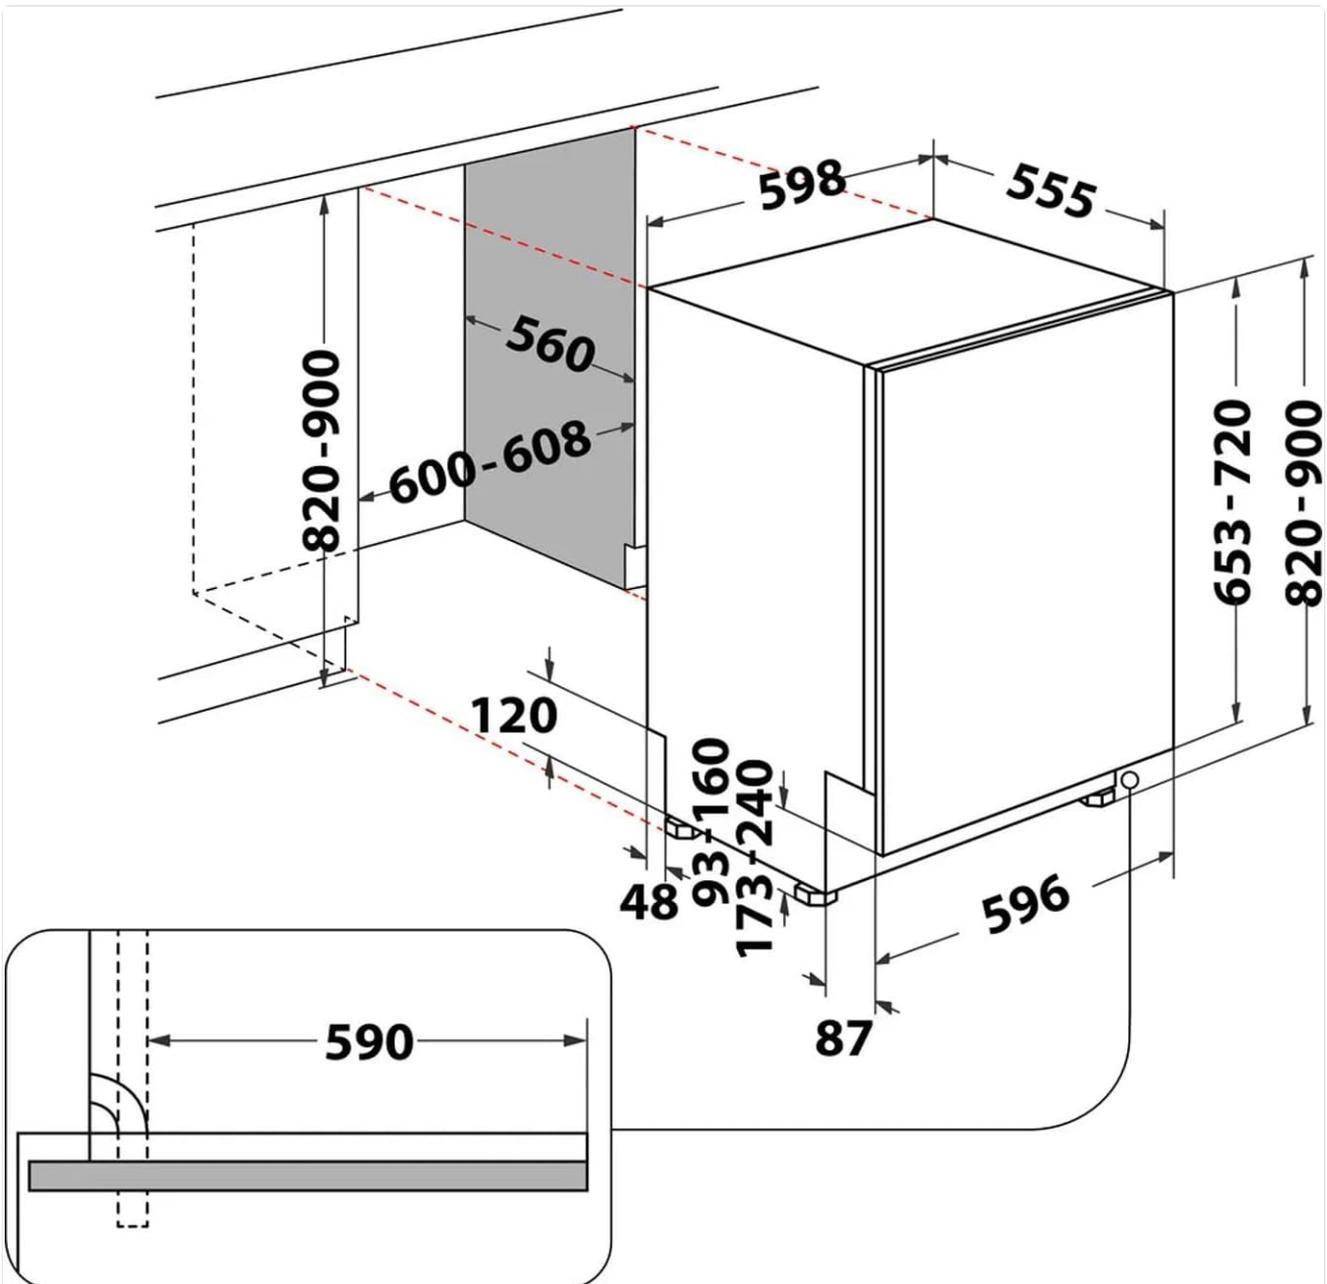


Figure 1: Dimensional drawing for installation. Refer to these measurements for cabinet cutout and clearances.

4.2. Installation Steps

1. **Positioning:** Carefully slide the dishwasher into the prepared cabinet opening.
2. **Leveling:** Adjust the leveling feet to ensure the dishwasher is stable and level.
3. **Water Connection:** Connect the water inlet hose to the cold water supply. Ensure connections are tight to

prevent leaks.

4. **Drain Connection:** Connect the drain hose to the sink drain or a dedicated drain pipe. Ensure proper air gap or high loop to prevent backflow.
5. **Electrical Connection:** Plug the dishwasher into a grounded electrical outlet.
6. **Securing:** Secure the dishwasher to the cabinet using the provided mounting brackets.

5. OPERATING INSTRUCTIONS

Your Hotpoint Ariston HA6IA14BN7A0 dishwasher features button controls and 6 wash cycles for various dishwashing needs.

5.1. Loading the Dishwasher

Proper loading ensures optimal cleaning performance and prevents damage to dishes.



Figure 2: Dishwasher interior with racks. Load dishes to allow water circulation.

- **Lower Rack:** Place larger items like plates, bowls, pots, and pans.
- **Upper Rack:** Ideal for glasses, cups, and smaller plates. Utilize the cup rack for additional capacity.
- **Cutlery Basket:** Place forks and spoons with handles up, knives with handles down for safety.
- Avoid overcrowding to ensure water and detergent reach all surfaces.



Figure 3: Racks extended for easy loading and unloading.

5.2. Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser securely.
- Fill the rinse aid dispenser with rinse aid until the indicator shows full. Rinse aid helps with drying and prevents spots.

5.3. Selecting a Wash Cycle

Use the control panel buttons to select one of the 6 available wash cycles. Common cycles include:

- **Normal:** For daily use with normally soiled dishes.
- **Intensive:** For heavily soiled pots, pans, and dishes.
- **Eco:** Energy-saving cycle for normally soiled dishes.
- **Quick Wash:** For lightly soiled dishes that need a fast wash.

5.4. Starting the Dishwasher

1. Close the dishwasher door firmly until it latches.
2. Press the Start button. The cycle will begin.

6. MAINTENANCE

Regular maintenance ensures your dishwasher operates efficiently and extends its lifespan.

6.1. Cleaning the Filters

- Locate the filter assembly at the bottom of the dishwasher tub.
- Twist and remove the coarse filter and fine filter.
- Rinse them under running water to remove food particles. Use a brush if necessary.
- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

6.2. Cleaning the Spray Arms

Periodically check the spray arm nozzles for blockages. If blocked, remove the spray arms and clean the nozzles with a thin wire or toothpick.

6.3. Exterior Cleaning

Wipe the exterior surfaces, including the stainless steel finish, with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner specifically designed for stainless steel.

6.4. Interior Cleaning

Run a dishwasher cleaning cycle with a specialized dishwasher cleaner every few months to remove grease and limescale buildup.

7. TROUBLESHOOTING

Before contacting service, refer to the following common issues and solutions:

| Problem | Possible Cause | Solution |
|---------------------------|--|--|
| Dishwasher does not start | Power cord unplugged, door not closed properly, circuit breaker tripped. | Check power connection, ensure door is latched, reset circuit breaker. |
| Dishes are not clean | Improper loading, clogged spray arms, insufficient detergent, incorrect cycle. | Reload dishes, clean spray arms, add more detergent, select appropriate cycle. |
| Water remains in the tub | Clogged drain filter, kinked drain hose, drain pump issue. | Clean drain filter, straighten drain hose. If problem persists, contact service. |
| Dishwasher leaks | Loose hose connections, damaged door seal, excessive suds. | Check hose connections, inspect door seal for damage, use less detergent. |

8. SPECIFICATIONS

| Feature | Specification |
|---------------------------|---|
| Brand | Hotpoint ARISTON |
| Model Name | HA6IA14BN7A0 |
| Installation Type | Built-in (Incorporato) |
| Color | Inox (Stainless Steel) |
| Control Type | Button |
| Material | Stainless Steel |
| Included Components | Cutlery Basket, Cup Rack |
| Number of Settings/Cycles | 6 |
| Recommended Uses | Daily dishes, glasses, pots, pans, and other kitchen utensils |
| BEE Star Rating | Yes |

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Hotpoint Ariston website. For technical support, service requests, or to order spare parts, please contact Hotpoint Ariston customer service or your authorized dealer. Have your model number (HA6IA14BN7A0) and serial number ready when contacting support.