

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Camp Snap](#) /

› Camp Snap V105 Digital Camera User Manual

## Camp Snap CS-V105

# Camp Snap V105 Digital Camera User Manual

Model: CS-V105 | Brand: Camp Snap

## 1. INTRODUCTION

The Camp Snap V105 is a compact, screen-free digital camera designed for simplicity and capturing authentic moments. It features an 8-megapixel sensor, three built-in flash modes, and a rechargeable battery, making it both eco-friendly and easy to use. This manual provides essential information for setting up, operating, and maintaining your camera.



Figure 1: Front view of the Camp Snap V105 Digital Camera.

## 2. SETUP

### 2.1. Charging the Camera

Before first use, fully charge your Camp Snap V105 camera. Connect the included USB cable to the USB-C port on the side of the camera and to a compatible USB power source (e.g., computer, wall adapter). The camera supports PD fast charging, requiring a charging device outputting between 0.73W and 2.96W. A small indicator light will show charging status.

## 2.2. MicroSD Card

Your camera comes with a 4GB microSD card pre-installed. This card stores approximately 500 images. Ensure the card is properly seated in its slot before use. To remove or insert the card, gently push it until it clicks into place.



Figure 2: Bottom view showing the USB-C port and microSD card slot.

## 3. OPERATING INSTRUCTIONS

---

### 3.1. Powering On/Off

To power on the camera, locate the power button on the top of the device and press it. To power off, press and hold the power button until the camera shuts down.

**SIMPLE TO USE  
JUST POINT  
AND SHOOT**



*Figure 3: Top view with the power/shutter button.*

### **3.2. Taking a Photo**

The Camp Snap V105 is a point-and-shoot camera. Simply aim the camera at your subject and press the power/shutter button on the top of the camera to capture an image. There is no screen for previewing photos; images are stored directly to the microSD card.

### **3.3. Flash Modes**

The camera features a flash switch on the back. You can select between three modes **OFF** (flash disabled), **ON** (flash always fires), and **AUTO** (camera determines when to use flash based on lighting conditions).



Figure 4: Back view with flash switch and photo counter.

### 3.4. Transferring Photos

To transfer photos, connect the camera to a computer or external storage device using the provided USB cable. The camera will appear as a removable drive, allowing you to access and copy your image files.

## 4. MAINTENANCE

---

### 4.1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

### 4.2. Battery Care

- Avoid exposing the camera to extreme temperatures.
- Charge the battery regularly, even if not in frequent use, to maintain battery health.

### 4.3. Storage

Store the camera in a cool, dry place away from direct sunlight and moisture when not in use.

## 5. TROUBLESHOOTING

---

### 5.1. Camera Not Turning On

- Ensure the battery is sufficiently charged. Connect the camera to a power source and allow it to charge for at least 30 minutes.
- Verify the power button is pressed firmly.

### 5.2. Photos Not Saving

- Check if the microSD card is correctly inserted and not full.
- Try reformatting the microSD card (note: this will erase all data on the card).

### 5.3. Flash Not Working

- Ensure the flash switch on the back of the camera is set to **ON** or **AUTO**.
- If set to **AUTO**, ensure lighting conditions are dark enough for the flash to activate.

## 6. SPECIFICATIONS

---

Feature	Detail
Model Name	CS-V105
Sensor	8 Megapixels
Dimensions (H x W x D)	6.5 cm x 11.5 cm x 3.3 cm (2.56 x 4.53 x 1.3 inches)
Weight	180g (7.1 ounces)
Battery	Built-in rechargeable battery (up to 500 images per charge)
Charging	USB-C, PD fast charging (0.73W - 2.96W)
Storage	4GB microSD card included
Flash Modes	OFF, ON, AUTO
Included Components	4GB microSD memory card, USB cable

## 7. WARRANTY AND SUPPORT

---

### 7.1. Manufacturer's Guarantee

The Camp Snap V105 camera is backed by a 2-year manufacturer's guarantee. Please retain your proof of purchase for warranty claims.

### 7.2. Customer Support

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided with your product packaging or visit the official Camp Snap website.