

[manuals.plus](#) /

› [AIYAPLAY](#) /

› [AIYAPLAY Wooden Play Kitchen Model 350-202V00GD Instruction Manual](#)

AIYAPLAY 350-202V00GD

AIYAPLAY Wooden Play Kitchen

MODEL 350-202V00GD INSTRUCTION MANUAL

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your AIYAPLAY Wooden Play Kitchen. Designed for children aged 3 years and above, this kitchen set offers a realistic and engaging play experience. Please read all instructions carefully before assembly and use.

Important Safety Information: Use under direct adult supervision.





Image: Front view of the AIYAPLAY Wooden Play Kitchen, showcasing its complete design with microwave, stove, sink, and oven.

PACKAGE CONTENTS

Before assembly, please ensure all components listed below are present in your package:

- Wooden kitchen components (main structure, shelves, doors)
- Microwave unit
- Oven unit
- Sink basin and faucet
- 6 Stainless Steel Accessories (e.g., pots, pans, spatulas, ladles)
- 6 Cutting Vegetables (e.g., corn, pepper, eggplant, carrot)
- Assembly hardware (screws, wall anchor)



Image: A brown cardboard box with the AIYAPLAY logo, indicating the product packaging.

SETUP AND ASSEMBLY

- Unpacking:** Carefully remove all components from the packaging. Verify all parts are present against the included parts list (refer to the separate assembly guide for a detailed list).
- Assembly:** Follow the step-by-step assembly instructions provided with the product. A Phillips head screwdriver is required for assembly.
- Secure Connections:** Ensure all screws are tightened securely, but avoid overtightening to prevent damage to the wooden components.
- Wall Anchoring:** For enhanced stability and safety, use the provided wall anchor to secure the play kitchen to a wall. This prevents accidental tipping.
- Placement:** Place the assembled kitchen on a flat, stable surface, away from heat sources or direct sunlight.



Image: Close-up details of the kitchen, including the faucet, stove knobs, and utensil hooks. A note advises not to overtighten screws during installation.

OPERATING INSTRUCTIONS

The AIYAPLAY Wooden Play Kitchen is designed for imaginative play. Here's how to interact with its features:

- **Stove Knobs:** The stove knobs produce a realistic "click" sound when turned, simulating a real kitchen experience. No batteries are required for this feature.
- **Microwave:** The microwave door opens and closes. The keypad and display are for pretend play.
- **Oven:** The oven door opens and closes, providing storage space for play food or accessories.
- **Sink and Faucet:** The sink basin can be used for pretend washing of play food. The faucet handles turn for realistic play.
- **Storage:** Utilize the shelves and hooks for organizing play accessories and keeping the play area tidy.



Image: A collage showing children engaging in various play activities with the kitchen, including washing ingredients in the sink, cutting vegetables, cooking on the stove, and using the microwave.

SONIDOS REALISTAS

Sonido al encender la estufa



Image: Two children standing next to the play kitchen. Insets highlight the realistic clicking sound of the stove knobs and the movable faucet.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the wood finish.
- **Inspection:** Regularly check all screws and connections to ensure they remain tight. Retighten as necessary to maintain structural integrity.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperatures, to preserve the wood and prevent warping or fading.

TROUBLESHOOTING

- **Loose Parts:** If any parts become loose during play, gently tighten the corresponding screws. Do not overtighten.
- **Missing Parts:** If any parts are missing upon unboxing, please contact AIYAPLAY customer support immediately for assistance.
- **Stability Issues:** Ensure the kitchen is placed on a level surface. If tipping is a concern, verify that the wall anchor is properly installed and secured.

SPECIFICATIONS

Brand	AIYAPLAY
Model Number	350-202V00GD
Material	Engineered Wood
Color	Gold
Product Dimensions (L x W x H)	24 cm x 55 cm x 96 cm (9.45 in x 21.65 in x 37.8 in)
Countertop Height	55.3 cm (21.77 in)
Product Weight	7.1 kg (15.65 lbs)
Recommended Age	3 years and up
Assembly Required	Yes
Batteries Required	No



Image: Diagram showing the key dimensions of the play kitchen: 96 cm height, 55 cm width, and 24 cm depth, with a

countertop height of 55.3 cm.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your AIYAPLAY Wooden Play Kitchen, please contact AIYAPLAY customer service through your retailer or the official AIYAPLAY website. Please retain your proof of purchase for warranty claims.