

## Beko FBE69100X

# Beko FBE69100X Freestanding Cooker - User Manual

Model: FBE69100X

## 1. INTRODUCTION

Thank you for choosing the Beko FBE69100X Freestanding Cooker. This appliance combines an elegant design with advanced technology, featuring a 4-zone induction hob and a 72-liter multifunction electric oven. Designed for efficiency and style, it is a perfect addition to any modern kitchen. This manual provides essential information for safe installation, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

- **2-in-1 Cooker:** Combines an induction hob and a multifunction oven for maximum versatility in a compact 60 cm space.
- **4-Zone Induction Hob:** Features a Booster function for rapid heating up to 2300 W per zone and intelligent energy management (Power Management up to 9.1 kW).
- **72-Liter Multifunction Oven, Class A:** Offers 6 cooking modes, including fan grill, traditional cooking, and bottom heating for perfect results.
- **HydroClean Function:** Provides natural and quick cleaning using steam, eliminating the need for harsh detergents.
- **Premium Inox Design:** Stainless steel handles and finishes, removable inner glass, internal lighting, and triple glass door for maximum safety.

## 2. SAFETY INFORMATION

Please read this section carefully before using the appliance to prevent personal injury or damage. Keep this manual for future reference.

- **General Safety:** Ensure the appliance is installed by a qualified technician according to local regulations.
- **Electrical Connection:** Verify that the voltage and frequency indicated on the rating plate match your household electrical supply. The appliance must be properly grounded.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a

safe way and understand the hazards involved.

- **Hot Surfaces:** The appliance surfaces become hot during use. Avoid touching hot surfaces. Use oven mitts when handling hot items.
- **Flammable Materials:** Do not store flammable materials (e.g., aerosols, cleaning products) in or near the appliance.
- **Ventilation:** Ensure adequate ventilation around the appliance during operation.
- **Cleaning:** Always disconnect the appliance from the power supply before cleaning or maintenance.

### 3. SETUP AND INSTALLATION

---

Proper installation is crucial for the safe and efficient operation of your cooker. It is recommended that installation be performed by a qualified professional.

#### 3.1 Unpacking

- Carefully remove all packaging materials from the appliance.
- Inspect the cooker for any signs of damage during transit. If damage is found, do not install and contact your retailer.
- Keep packaging materials out of reach of children.

#### 3.2 Positioning

- Place the cooker on a stable, level surface.
- Ensure there is sufficient clearance around the appliance for proper ventilation. Refer to the installation diagram for minimum distances from walls and cabinets.
- The dimensions of the appliance are approximately 60 cm (Depth) x 60 cm (Width) x 85 cm (Height).

#### 3.3 Electrical Connection

- The appliance comes with a power cable. Ensure the electrical supply is compatible with the cooker's requirements.
- Connect the appliance to a dedicated, properly grounded electrical outlet.
- The induction hob features Power Management, allowing adjustment of total power consumption from 2.5 kW to 7.2 kW. This setting should be configured during installation by a qualified electrician to match your home's electrical capacity.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

**Included Components:** The product includes a power cable.

### 4. PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your Beko FBE69100X cooker.



Figure 4.1: Overall front view of the Beko FBE69100X cooker, highlighting the induction hob and oven.



Figure 4.2: Detailed front view showing the control panel and stainless steel finish.



Figure 4.3: Side view of the cooker.



Figure 4.4: Rear view of the cooker, showing connection points.

#### 4.1 Control Panel

The control panel features mechanical knobs for oven functions and temperature, and touch controls for the induction hob.

#### 4.2 Induction Hob

- Four cooking zones with varying power levels.
- Touch Control interface for precise adjustments.
- Booster function for rapid heating.
- Residual heat indicators for safety.

#### 4.3 Multifunction Oven

- 72-liter capacity.
- Multiple cooking levels (5 levels).
- Internal lighting for visibility.
- Removable inner glass for easy cleaning.

- Triple glass door for improved insulation and safety.



Figure 4.5: Oven interior with fan and rack positions.

## 5. OPERATING INSTRUCTIONS

## 5.1 Using the Induction Hob



Figure 5.1: Induction hob touch controls.

1. **Power On:** Touch the main power symbol to turn on the hob.
2. **Select Cooking Zone:** Place an induction-compatible pan on the desired zone. Touch the corresponding zone selection control.
3. **Adjust Power:** Use the '+' and '-' touch controls to set the desired power level (1-9).
4. **Booster Function:** For rapid heating, touch the 'Booster' symbol for the selected zone. This provides maximum power for a short period.
5. **Stop&Go™ Function:** Touch the 'Stop&Go' symbol to pause all active cooking zones. Touch it again to resume cooking with the previous settings.
6. **Timer Function:** Set a cooking timer for individual zones or the entire hob using the timer controls.
7. **Power Off:** Touch the main power symbol to turn off the hob. Individual zones can also be turned off by reducing their power level to '0'.

**Important:** The hob features a residual heat indicator (H) which remains lit until the zone has cooled down to a safe temperature.

## 5.2 Using the Multifunction Oven

1. **Select Cooking Function:** Turn the function selector knob to choose one of the 6 available cooking programs.
2. **Set Temperature:** Turn the thermostat knob to the desired temperature. The oven will begin to preheat.
3. **Preheating:** Allow the oven to reach the set temperature before placing food inside. The indicator light will turn off when the temperature is reached.
4. **Place Food:** Use the provided tray and metallic grid. The oven has 5 levels for flexible placement.
5. **Monitor Cooking:** The internal light can be switched on to check food without opening the door.
6. **End Cooking:** Turn both knobs to the 'Off' position after cooking.

### Available Cooking Programs:

- **Static:** Traditional top and bottom heating for even cooking.
- **Ventilated:** Fan-assisted cooking for uniform heat distribution, ideal for baking multiple dishes.
- **Grill:** For grilling small items, toasting, or browning.
- **Grill with Fan:** Combines grilling with fan assistance for faster and more even grilling.
- **Bottom Heating:** Ideal for crisping bases or slow cooking.
- **HidroClean:** Special cleaning program (see Section 6.1).

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Beko cooker.

### 6.1 HidroClean Function (Oven)

The HidroClean function uses steam to soften baked-on food residues, making cleaning easier.

1. Ensure the oven is cool.
2. Pour approximately 0.5 liters of water into the designated cavity at the bottom of the oven.
3. Select the HidroClean program on the oven function selector.
4. Allow the program to run for the recommended duration (refer to the full manual for exact timing).
5. Once the program is complete and the oven has cooled, wipe the interior with a soft cloth or sponge to remove softened dirt.

## 6.2 General Cleaning

- **Induction Hob:** Clean the glass-ceramic surface with a soft cloth and a specialized hob cleaner after each use, once the surface has cooled. Avoid abrasive cleaners or scourers.
- **Oven Interior:** For stubborn stains not removed by HidroClean, use a non-abrasive oven cleaner. The inner glass of the oven door is removable for thorough cleaning.
- **Exterior Surfaces:** Clean stainless steel surfaces with a soft cloth and a mild detergent or a specialized stainless steel cleaner. Avoid harsh chemicals that can damage the finish.
- **Accessories:** Wash the tray and metallic grid with warm soapy water.

**Caution:** Always ensure the appliance is disconnected from the power supply before performing any cleaning or maintenance.

## 7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions.

- **Cooker Not Turning On:**
  - Check if the appliance is properly plugged into the electrical outlet.
  - Verify the circuit breaker in your home's electrical panel.
- **Induction Hob Not Heating:**
  - Ensure the cookware is induction-compatible (magnetic base).
  - Check if the pan is correctly centered on the cooking zone.
  - Look for any error codes displayed on the hob's control panel and consult the full manual for their meaning.
- **Oven Not Heating:**
  - Confirm that the oven function and temperature knobs are correctly set.
  - Ensure the oven door is fully closed.
  - Check if the oven timer is set to 'manual' or a cooking duration.
- **Unusual Odors During First Use:**
  - It is normal for a new appliance to emit a slight odor during its first few uses. Ensure good ventilation in the kitchen.
- **Uneven Cooking in Oven:**
  - Ensure food is placed centrally on the rack.
  - Avoid overcrowding the oven.
  - Use the fan-assisted cooking function for more even heat distribution.

If the problem persists after checking these points, please contact Beko customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Beko
Model Name	FBE69100X
Form Factor	Freestanding
Material	Stainless Steel
Finish	Polished

Feature	Specification
Dimensions (DxWxH)	60P x 60l x 85H cm
Item Weight	47.5 Kilograms
Hob Type	Induction
Number of Heating Elements	4
Hob Controls	Touch
Oven Type	Multifunction Electric
Oven Capacity	72 Liters
Energy Efficiency Class	A
Heating Element Type	Sealed
Drawer Type	Grill, Baking, Warming
GTIN	08690842810176
Country of Origin	Turkey
Included Components	Power cable

## 9. WARRANTY AND SUPPORT

Your Beko FBE69100X Freestanding Cooker is covered by a manufacturer's warranty.

- **Warranty Period:** This product comes with a 2-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.
- **Warranty Coverage:** The warranty covers manufacturing defects and faults under normal domestic use. It does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs.
- **Customer Support:** For technical assistance, spare parts, or warranty claims, please contact Beko customer service. You can find contact details on the official Beko website or through your retailer.