

[Manuals.plus](#) /

› [AVERA](#) /

› AVERA GE01 XL 3-in-1 Electric Panini Grill, Hot Cake, and Waffle Maker Instruction Manual

AVERA GE01

AVERA GE01 XL 3-in-1 Electric Panini Grill, Hot Cake, and Waffle Maker Instruction Manual

Model: GE01

1. INTRODUCTION

Thank you for purchasing the AVERA GE01 XL 3-in-1 Electric Panini Grill, Hot Cake, and Waffle Maker. This versatile appliance is designed to simplify your cooking experience, allowing you to prepare a variety of dishes including grilled sandwiches, meats, vegetables, hot cakes, and waffles with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

Your AVERA GE01 appliance is designed for maximum versatility and ease of use. It features interchangeable plates and a digital control panel for precise cooking.

Components and Controls



Image: Control Panel and Main Parts. This image shows the digital control panel with time and temperature controls, On/Off button, handle, upper lid, locking latch, and 180° open button.



Image: Three sets of interchangeable plates. Includes grill plates for sandwiches, meats, and vegetables; hot cake plates for 4 hot cakes; and waffle plates for 4 waffles.

- **Digital Control Panel:** For precise temperature (120°C to 230°C) and time (up to 60 min) settings.
- **Interchangeable Plates:** Includes grill, hot cake, and waffle plates for diverse cooking.
- **180° Opening:** Allows the grill to open flat, doubling the cooking surface.
- **Non-stick Coating:** Ensures easy food release and cleaning.

- **Cool-touch Handle:** For safe operation.
- **Removable Drip Tray:** Collects excess fat and oil for healthier cooking and easy cleanup.

4. SETUP AND FIRST USE

Unboxing and Initial Cleaning

1. Carefully remove the appliance and all accessories from the packaging.
2. Wipe the exterior of the appliance with a damp cloth.
3. Wash the interchangeable plates and drip tray with warm, soapy water. Rinse thoroughly and dry completely before first use.
4. Ensure all parts are dry before plugging in the appliance.

Installing Plates

1. Open the grill completely.
2. Align the desired cooking plates (grill, hot cake, or waffle) with the slots on the upper and lower heating elements.
3. Gently press down until the plates click into place. Ensure they are securely fastened.
4. Place the drip tray into its designated slot at the front of the appliance.

Your browser does not support the video tag.

Video: Unboxing and Plate Installation. This video demonstrates how to unbox the product and correctly install the interchangeable cooking plates.

5. OPERATING INSTRUCTIONS

General Operation

1. Plug the appliance into a 127V electrical outlet. The power indicator light will illuminate.
2. Press the On/Off button on the digital panel to turn on the appliance.
3. Use the temperature controls (+/- buttons) to set the desired cooking temperature (120°C to 230°C).
4. Use the time controls (+/- buttons) to set the desired cooking time (up to 60 minutes).
5. Allow the appliance to preheat until the "Ready" indicator light illuminates (if available, otherwise wait for the set temperature to be reached).

Using as a Panini Press or Grill

For grilling sandwiches, meats, or vegetables, use the grill plates.

1. Ensure the grill plates are installed and the appliance is preheated.
2. Carefully place your food onto the lower grill plate.
3. Close the upper lid. The floating hinge will adjust to the thickness of your food, ensuring even cooking.
4. Cook for the set time or until desired doneness is achieved.
5. Use a heat-resistant spatula to remove food. Do not use metal utensils that could scratch the non-stick coating.

MODELO: GE01

Parrilla grill 3 en 1



Placas intercambiables
Grill, Hot cakes, Waffles



Voltaje 127 V
Frecuencia 60 Hz
Potencia 1500 W



Temperatura 120° a 230°



Panel de control
digital



Apertura
180°



Año
de garantía

Image: Panini Grill in action with sandwiches. This image illustrates the grill plates being used to prepare sandwiches.

Your browser does not support the video tag.

Video: Electric Panini Press Grill. This video demonstrates the use of a panini press for grilling, highlighting its features and cooking capabilities.

Using as a Hot Cake or Waffle Maker

Switch to the hot cake or waffle plates for delicious breakfast items.

1. Ensure the hot cake or waffle plates are installed and the appliance is preheated.
2. Lightly grease the plates if necessary (though non-stick, a little oil can enhance browning).
3. Pour your batter evenly into the molds.
4. Close the lid and cook until golden brown and cooked through.
5. Remove with a non-metal utensil.

Your browser does not support the video tag.

Video: 6-in-1 Plate Set Grill Sandwich Waffle Donut YOU. This video showcases the versatility of an appliance with multiple interchangeable plates, including waffle and hot cake plates.

Your browser does not support the video tag.

Video: 5-in-1 Non-stick Electric Sandwich Maker. This video demonstrates the use of a multi-function sandwich maker, including its hot cake and waffle plate capabilities.

180° Open Grill Mode

To use the appliance as an open grill, doubling your cooking surface:

1. Open the upper lid to a 90-degree angle.
2. Locate the 180° open button (usually on the side hinge) and press it firmly.
3. Gently push the upper lid back until it lies flat, creating a continuous grilling surface.
4. You can now cook more food simultaneously, such as bacon, eggs, vegetables, or multiple pieces of meat.



Image: Grill with 180° opening for full breakfasts and perfect grilling. This image shows the appliance fully open, demonstrating its expanded cooking surface for various breakfast items.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your appliance.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the cooking plates by pressing the release buttons and lifting them out.
3. Wash the plates and drip tray with warm, soapy water. The non-stick coating makes cleaning easy. Avoid abrasive cleaners or scouring pads.
4. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
5. Ensure all parts are completely dry before reassembling or storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; On/Off button not pressed.	Ensure the appliance is securely plugged into a working outlet. Press the On/Off button.
Food sticks to plates.	Plates not properly cleaned; insufficient preheating; no oil/butter applied (for some recipes).	Clean plates thoroughly. Allow sufficient preheating time. Lightly grease plates if needed.
Uneven cooking.	Food not evenly distributed; lid not fully closed.	Distribute food evenly. Ensure the lid is properly closed and the floating hinge is engaged.

8. SPECIFICATIONS

Feature	Detail
Brand	AVERA
Model	GE01
Color	Silver
Product Dimensions	37 x 33.2 x 15.6 cm (Depth x Width x Height)
Weight	5.7 kg
Power	1500 Watts
Voltage	127 Volts (AC)
Material	Stainless Steel, Non-stick Coating
Special Features	Dual Zone Cooking, Temperature Control, Digital Control, Interchangeable Plates, Non-stick Coating
Automatic Shut-off	Yes

9. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, spare parts, or service inquiries, please contact AVERA customer service through their official website or the contact information provided in your product documentation.

You can also visit the [AVERA Store on Amazon](#) for more information and products.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question