

[Manuals.plus](#) /

› [XZEAL](#) /

› XZEAL XZ-420 XZGP01WG Wireless Gamepad User Manual

XZEAL XZGP01WG

XZEAL XZ-420 XZGP01WG Wireless Gamepad User Manual

Model: XZGP01WG

INTRODUCTION

Thank you for choosing the XZEAL XZ-420 XZGP01WG Wireless Gamepad. This device is designed to enhance your mobile gaming experience with precision, comfort, and broad compatibility. Featuring a Type-C connection for stable performance and an ergonomic design, this gamepad is perfect for extended gaming sessions on Android and iOS devices. Please read this manual carefully to ensure proper setup, operation, and maintenance of your new gamepad.

PACKAGE CONTENTS

- XZEAL XZ-420 XZGP01WG Wireless Gamepad
- USB Type-C Charging Cable
- User Manual

SETUP

1. Charging the Gamepad

Before first use, fully charge the gamepad. Connect the provided USB Type-C charging cable to the gamepad's Type-C port and the other end to a USB power source (e.g., computer, wall adapter). The charging indicator light will show the charging status and turn off or change color once fully charged.

2. Attaching Your Mobile Device

The XZ-420 XZGP01WG features an integrated phone holder. Gently extend the holder and securely place your Android or iOS smartphone into the designated slot. Ensure your device is firmly seated to prevent accidental drops during gameplay.



Image: The XZEAL XZ-420 XZGP01WG Gamepad with a smartphone inserted into its holder, ready for use.

3. Connecting to Your Device (Wireless)

1. **Power On:** Press and hold the power button on the gamepad until the indicator light flashes.
2. **Enable Bluetooth:** On your mobile device, go to Settings > Bluetooth and turn Bluetooth on.
3. **Pairing:** Search for available devices. Select "XZEAL XZ-420" or "XZGP01WG" from the list. The indicator light on the gamepad will become solid once successfully paired.
4. **Type-C Direct Connection:** For devices with a compatible Type-C port, you may also connect the gamepad directly using the Type-C cable for a wired connection. This ensures zero latency.

OPERATING INSTRUCTIONS

Gamepad Layout



Image: The XZEAL XZ-420 XZGP01WG Gamepad with a smartphone displaying a racing game, highlighting the ergonomic design and button layout.

- **Left Joystick / D-Pad:** For movement and navigation.
- **Right Joystick:** For camera control or aiming.
- **Action Buttons (A, B, X, Y):** For in-game actions.
- **Shoulder Buttons (L1, R1) / Triggers (L2, R2):** For various in-game functions like shooting, accelerating, etc.
- **Menu/Start/Select Buttons:** For game menus and system functions.
- **Home Button:** Returns to the device's home screen or gamepad menu.



Image: A detailed view of the right-hand controls of the XZEAL XZ-420 XZGP01WG Gamepad, including the A, B, X, Y buttons and the right analog stick.

Gaming

Once connected, launch your favorite mobile games that support gamepad input. The XZ-420 XZGP01WG offers low latency for a fluid and responsive gaming experience. Some games may require specific controller settings within their application menus.

Power Off

To power off the gamepad, press and hold the power button until the indicator lights turn off. If left idle for an extended period, the gamepad may automatically power off to conserve battery.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the gamepad. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the gamepad frequently. Charge it regularly, even if not in use for long periods.
- **Avoid Drops:** Protect the device from physical shocks and drops, which can damage internal components.

TROUBLESHOOTING

- **Gamepad not turning on:** Ensure the gamepad is fully charged. Connect it to a power source and try again.
- **Cannot connect via Bluetooth:**
 - a. Ensure Bluetooth is enabled on your mobile device.
 - b. Make sure the gamepad is in pairing mode (indicator light flashing).
 - c. Forget the device from your phone's Bluetooth settings and try pairing again.
 - d. Restart both your mobile device and the gamepad.
- **Buttons not responding in game:**
 - a. Verify that the gamepad is successfully connected to your device.
 - b. Check if the game supports gamepad input. Some games may require specific settings or may not be compatible.
 - c. Test the gamepad with another compatible game or application.
- **Input lag or delay:**
 - a. Ensure there are no obstructions between the gamepad and your device.
 - b. Minimize other active Bluetooth connections on your device.
 - c. Try connecting via the Type-C cable if your device supports it for a direct, low-latency connection.

SPECIFICATIONS



Image: The rear view of the XZEAL XZ-420 XZGP01WG Gamepad, displaying the XZEAL logo and product information.

Feature	Detail
Model Number	XZGP01WG
Compatibility	Android, iOS, Devices with Type-C input
Connection Type	Wireless (Bluetooth), Wired (Type-C)
Latency	Low
Design	Ergonomic, White/Gray finish
Power Source	Rechargeable Battery
Package Dimensions	44.98 x 19.99 x 9.98 cm
Weight	500 g

WARRANTY AND SUPPORT

The XZEAL XZ-420 XZGP01WG Wireless Gamepad comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official XZEAL website for detailed warranty terms and conditions. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact XZEAL customer service through their official channels.

Online Support: Visit the [XZEAL Brand Store](#) for more information and support resources.

© 2023 XZEAL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question