

WETIE KKZ-12D020AA-H

WETIE 11.6QT Dual Basket Air Fryer Oven Instruction Manual

Model: KKZ-12D020AA-H

Brand: WETIE

INTRODUCTION

Thank you for choosing the WETIE 11.6QT Dual Basket Air Fryer Oven. This appliance is designed to provide efficient and versatile cooking for a variety of meals. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

- Always place the air fryer on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Supervise children when the appliance is in use.
- Do not block any ventilation openings.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- The top heating element may become hot during use. Do not touch to avoid burns.
- Ensure baskets are properly inserted before operating.
- Automatic shutoff feature pauses cooking when a basket is removed and resumes when replaced.

Easy & Safe Cooking



Image: Safety features of the WETIE Dual Basket Air Fryer, showing automatic shutoff, anti-skid feet, and easy slide-out baskets.

PRODUCT OVERVIEW

The WETIE 11.6QT Dual Basket Air Fryer Oven features a vertical design with two independent 5.8QT baskets, allowing for simultaneous cooking of different foods. It includes a digital touchscreen with preset functions and dual-zone cooking technology.

- **Dual Independent Baskets:** Two 5.8QT baskets for versatile cooking.
- **Vertical Design:** Space-saving footprint on your countertop.
- **Digital Touchscreen:** Intuitive controls for temperature, time, and presets.
- **Top & Bottom Heating:** Independent 800W halogen heaters in each basket for even cooking.
- **Chromed Stacked Meal Racks:** Allows cooking up to 4 foods at once.



Image: The WETIE 11.6QT Dual Basket Air Fryer Oven, illustrating its compact vertical design.

11.6QT Family-Size Capacity STACKED BASKETS

Cook 4 FOODS AT ONCE

Upper Air Fryer Basket **5.8QT**

Lower Air Fryer Basket **5.8QT**



Stacked Meal Rack



Image: Diagram detailing the 11.6QT capacity with two 5.8QT stacked baskets and the included meal rack.

SETUP

1. Unpack all components and remove any packaging materials.
2. Wipe down the exterior of the air fryer with a damp cloth.
3. Wash the baskets, crisper plates, and any accessories with warm, soapy water, then rinse and dry thoroughly.
4. Place the air fryer on a flat, stable, heat-resistant surface, ensuring adequate ventilation around the unit.
5. Insert the crisper plates into the baskets.
6. Plug the power cord into a grounded electrical outlet. The display will illuminate.

OPERATING INSTRUCTIONS

Basic Operation

1. Press the power button () to turn on the air fryer.

2. Select the desired basket (1 or 2) by tapping its corresponding number on the touchscreen.
3. Adjust the temperature using the+ and - buttons under "TEMP". Temperature is adjustable from 100°F to 450°F.
4. Adjust the cooking time using the+ and - buttons under "TIME".
5. Press the play/pause button ►/||) to start cooking.
6. To pause cooking, press the play/pause button again. To resume, press it once more.
7. The air fryer will automatically shut off when the timer reaches zero.

Using Preset Functions

The air fryer includes six dedicated one-touch presets for common foods:

- Fries
- Shrimp
- Defrost
- Chicken
- Steak
- Dehydrate

1. Press the power button ().
2. Select the desired basket (1 or 2).
3. Tap the icon for the desired preset function on the touchscreen. The air fryer will automatically set the optimal temperature and time.
4. Press the play/pause button ►/||) to start cooking.

Dual-Zone Cooking

MATCH & SYNC Function



Image: Close-up of the digital touchscreen displaying the six one-touch preset functions.

Dual-Zone Cooking Technology (SYNC & MATCH)

This feature allows for efficient cooking of multiple items.

- **SYNC Feature:** Cook two different foods in separate baskets with different settings, and have them finish at the same time.
- **MATCH Feature:** Duplicate the time and temperature settings from one basket to the other.

1. Press the power button ().
2. Set the desired temperature and time for Basket 1.
3. Set the desired temperature and time for Basket 2.
4. To use **SYNC**: Press the "SYNC" button. The air fryer will intelligently adjust the cooking start times so both baskets finish simultaneously.
5. To use **MATCH**: Set Basket 1's settings, then press the "MATCH" button. The settings will be copied to Basket 2.
6. Press the play/pause button (▶/||) to start cooking.

Top Heating Tube Technology

360° Hot Air Circulation Provides
More Even Cooking than Rear Heating



Image: Explanation of SYNC and MATCH functions for dual-zone cooking.

Official Product Video: WETIE 11.6QT Dual Large Air Fryer with Digital Touchscreen

Your browser does not support the video tag.

Video: An official overview of the WETIE 11.6QT Dual Basket Air Fryer, demonstrating its features and operation, including the digital touchscreen and dual baskets.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. The removable non-stick coated double-layer cooking racks and dividers are dishwasher-safe.
3. For manual cleaning, wash baskets and accessories with warm, soapy water and a non-abrasive sponge.
4. Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasives or metal scouring pads.
5. Ensure all parts are completely dry before reassembling and storing.

Space Saving Design



**Vertical
Design**

**50% Less
Counter Space**



**Horizontal
Design**

**Takes Up More
Counter Space**

Image: Dishwasher-safe baskets and crisper plates for easy cleaning.

TROUBLESHOOTING

If you encounter issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Overcrowding baskets; incorrect temperature/time.	Do not overcrowd baskets. Shake or flip food halfway through cooking. Adjust temperature or time as needed.
White smoke coming from appliance.	Grease residue from previous use; fatty food.	Clean the basket and crisper plate thoroughly. For fatty foods, drain excess oil during cooking.

Problem	Possible Cause	Solution
Appliance stops during operation.	Basket removed; overheating protection activated.	Ensure baskets are fully inserted. If overheated, unplug and let cool for 30 minutes before restarting.

SPECIFICATIONS

Feature	Detail
Model Name	KKZ-12D020AA-H Air Fryer
Capacity	11.6 Quarts (2 x 5.8QT Baskets)
Product Dimensions	16.69"D x 9.76"W x 16.14"H
Color	Black
Material	Plastic, Stainless Steel
Output Wattage	1600 Watts
Control Method	Touch
Temperature Range	100°F to 450°F
Special Features	Digital Display, Dual Zone Features, Vertical 2 Basket, 6-in-1 Presets (Fries, Shrimp, Defrost, Chicken, Steak, Dehydrate), Temperature Control, Nonstick Coating
Item Weight	20.8 pounds

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official WETIE website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question