

Beautiful 29270

Beautiful 4-Quart Programmable Slow Cooker Instruction Manual

Model: 29270

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Beautiful 4-Quart Programmable Slow Cooker. Please read all instructions thoroughly before first use and retain this manual for future reference.

Your slow cooker is designed for convenient meal preparation, featuring a 4-quart capacity, programmable heat and timer settings, a hinged locking lid, and an intuitive touch display.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the slow cooker.
- Do not touch hot surfaces. Use oven mitts or pot holders when handling the hot stoneware pot or lid.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Avoid sudden temperature changes, such as adding cold food to a hot pot or placing a hot pot on a cold surface.
- The stoneware pot is designed for use only in this slow cooker. It must never be used on a stovetop or in a microwave oven.

PRODUCT COMPONENTS

Your Beautiful 4-Quart Programmable Slow Cooker consists of the following main components:

- **Base Unit:** Contains the heating element and touch control panel. Features cool-touch handles and non-skid feet.
- **Stoneware Pot:** Removable 4-quart capacity pot for cooking.
- **Hinged Locking Lid:** Tempered glass lid with a hinge mechanism and locking clips for secure transport.
- **Steel Lid Holder:** Provides a convenient resting spot for the lid during serving.



Image: The slow cooker in use, highlighting the hinged lid and cool-touch handles.



Image: The slow cooker components separated: base, stoneware pot, and lid.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from your slow cooker.
2. **Initial Cleaning:** Before first use, wash the stoneware pot and tempered glass lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water.
3. **Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure the power cord is not dangling where it can be pulled or tripped over.

4. **Assembly:** Place the clean stoneware pot into the base unit. Position the hinged lid onto the stoneware pot.

OPERATING INSTRUCTIONS

Cooking Process

1. **Prepare Food:** Place your ingredients into the stoneware pot. Do not overfill; ensure there is at least 1 inch of space from the top rim of the pot to the food level.
2. **Secure Lid:** Close the hinged lid. If transporting, engage the locking clips for a spill-proof seal. For cooking, the clips do not need to be engaged.
3. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet. The touch display will illuminate.
4. **Select Heat Setting:** Press the "Mode" button to cycle through the heat settings **High**, **Low**, or **Warm**. The selected setting will be illuminated on the display.
5. **Set Timer:** Use the **+** and **-** buttons to select your desired cooking time. Available timer options are 4, 6, 8, or 10 hours.
6. **Start Cooking:** The slow cooker will automatically begin cooking after the timer is set. The display will show the remaining cooking time.
7. **Automatic Warm:** Once the set cooking time expires, the slow cooker will automatically switch to the "Warm" setting to keep your food at a serving temperature. The display will show "Warm" and begin counting up the time spent in warm mode.
8. **Turn Off:** To turn off the slow cooker at any time, press the power button (). Unplug the appliance from the outlet when cooking is complete and before cleaning.



Image: Detailed view of the touch control panel for setting heat and timer.

Using the Hinged Locking Lid

- The hinged lid allows for easy access to stir or serve food without needing to find a place to set the lid down.
- To open, simply lift the lid. It will stay upright on its hinge.
- For transport, ensure the lid is closed and press the locking clips on either side of the lid down until they securely engage with the base unit. This creates a spill-proof seal.
- To unlock, lift the clips away from the base unit.



Image: The slow cooker with its lid closed, illustrating its capacity and control features.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your slow cooker.

1. **Always Unplug:** Before cleaning, always unplug the slow cooker from the electrical outlet and allow it to cool completely.
2. **Stoneware Pot and Lid:** The removable stoneware pot and tempered glass lid are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. Avoid abrasive cleaners or scouring pads that may scratch surfaces.
3. **Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the base unit, cord, or plug in water or any other liquid.
4. **Stubborn Residue:** For stubborn food residue on the stoneware pot, fill it with warm, soapy water and let it soak for a few hours before cleaning.
5. **Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker assembled or with the lid inverted on the pot to save space.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Slow cooker does not turn on.	Not plugged in; power outlet not functioning; appliance malfunction.	Ensure the unit is securely plugged into a working electrical outlet. Test the outlet with another appliance. If the problem persists, contact customer support.
Food is not cooking properly.	Incorrect heat setting; lid not properly sealed; insufficient cooking time.	Verify the correct heat setting (High/Low) and cooking time for your recipe. Ensure the lid is seated correctly on the stoneware pot. Avoid frequently lifting the lid, as this extends cooking time.
Food is burning on the bottom.	Too high heat setting; not enough liquid; pot too full.	Reduce the heat setting if possible. Ensure adequate liquid is present in the recipe. Do not overfill the pot.
Lid is difficult to lock.	Lid not aligned correctly; food obstructing lid.	Ensure the lid is properly seated on the stoneware pot and aligned with the base unit. Check for any food particles obstructing the lid's closure or locking mechanism.

SPECIFICATIONS

- Model:** 29270
- Capacity:** 4 Quarts
- Wattage:** 180 watts
- Voltage:** 120V AC
- Material:** Stainless Steel (housing), Stoneware (pot), Tempered Glass (lid)
- Product Dimensions:** 8.66"D x 12.2"W x 14.57"H
- Item Weight:** 4 Pounds
- Control Method:** Touch Display
- Heat Settings:** Low, High, Warm
- Timer Settings:** 4, 6, 8, 10 hours (with auto-warm)
- Dishwasher Safe Parts:** Stoneware Pot, Lid



Image: Product dimensions for the slow cooker.

WARRANTY AND SUPPORT

Specific warranty information for this product is typically provided with the purchase documentation. Please refer to the warranty card or contact the retailer where the product was purchased for details regarding warranty coverage.

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact the manufacturer's customer support. Contact information can usually be found on the product packaging or the manufacturer's official website.