

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Anderic](#) /

› [Anderic TRA049G1M Replacement Ceiling Fan Wall Mount Remote Control User Manual](#)

Anderic TRA049G1M

Anderic TRA049G1M Replacement Ceiling Fan Wall Mount Remote Control User Manual

INTRODUCTION

This manual provides comprehensive instructions for the Anderic TRA049G1M replacement remote control, designed for use with specific Harbor Breeze ceiling fan models. Please read this guide thoroughly to ensure proper setup and operation of your new remote control.

PRODUCT OVERVIEW

The Anderic TRA049G1M is a direct replacement for original Harbor Breeze TRA049G1M and 2AQZU-18052 remotes. It features a user-friendly button layout for controlling fan speeds, light functions, and special modes. The remote is designed to fit into a wall mount bracket for convenient access.



Figure 1: Front of Anderic TRA049G1M Remote Control. The remote features buttons for fan off, fan high, fan medium, fan low, on/off light control & dimmer, 1 min delay for lights off, random fan speed cycling, and random lights on/off. The FCC ID 2AQZU-18052 is printed at the top, and a QR code for support is at the bottom. For more information, scan the QR code or visit <https://qr.link/CpbUBA>.

COMPATIBILITY

This remote control is compatible with the following models and kits:

- Works with Summersville collection Ceiling Fans | 4L000015190 (KIT), MRAC04S1M-LD-F0 (RECEIVER)
- Operates on 304.25 MHz frequency
- Compatible with 4L000015190 kit and MRAC04S1M-LD-F0 receiver
- Replaces original Harbor Breeze TRA049G1M & 2AQZU-18052 remote

SETUP

Battery Installation

The Anderic TRA049G1M remote control requires one A23 battery (sold separately). Follow these steps to install the battery:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert one A23 battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Battery Compartment of Anderic TRA049G1M Remote Control. The image shows the back of the remote with the battery cover removed, revealing the single A23 battery slot. The FCC ID 2AQZU-18052 is also visible at the top.

Pairing/Syncing

The Anderic TRA049G1M remote control is typically a direct replacement and may not require explicit pairing if your existing fan receiver is already configured for this model. If your fan does not respond after battery installation, refer to your ceiling fan's original instruction manual for specific pairing or syncing procedures, as these steps are usually performed at the fan receiver unit.

OPERATING INSTRUCTIONS

Familiarize yourself with the remote's buttons and their functions:

Button	Function
Power (Fan Off)	Turns the ceiling fan off.
Light (On/Off Light Control & Dimmer)	Turns the fan light on or off. Press and hold to dim or brighten the light.
Fan High	Sets the fan speed to high.
1 Min Delay (Lights Turn Off)	Press for a 1-minute delay before the lights turn off.
Fan Medium	Sets the fan speed to medium.
Random Fan Speed Cycling	Press to activate random fan speed cycling, providing varied airflow.
Fan Low	Sets the fan speed to low.
Random Lights On/Off	Press to activate random lights on/off, simulating occupancy.

MAINTENANCE

Battery Replacement

When the remote control's range decreases or buttons become unresponsive, it may be time to replace the battery. The remote uses one A23 battery.

1. Open the battery compartment cover on the back of the remote.
2. Remove the old A23 battery.
3. Insert a new A23 battery, observing the correct polarity (+/-).

4. Close the battery compartment cover securely.
5. Dispose of the old battery responsibly according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the battery is installed correctly and has sufficient charge. Replace if necessary.
 - Ensure there are no obstructions between the remote and the fan's receiver.
 - Verify the fan's power supply is on.
 - If the remote is new or has been reset, refer to the fan's original manual for pairing instructions.
- **Lights not dimming:**
 - Ensure the light bulbs installed in your fan are dimmable. Non-dimmable bulbs will not respond to the dimmer function.
 - Press and hold the light button to activate the dimming feature.
- **Fan not changing speeds:**
 - Confirm the fan is receiving power.
 - Try pressing the fan speed buttons multiple times.

SPECIFICATIONS

- **Model:** Anderic TRA049G1M
- **Frequency:** 304.25 MHz
- **Battery Type:** 1 x A23 (12V) (not included)
- **Compatibility:** Harbor Breeze 2AQZU-18052, TR326A 2AQZU-18007, Summersville collection Ceiling Fans (4L000015190 KIT, MRAC04S1M-LD-F0 RECEIVER)

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Anderic customer service. Keep your purchase receipt as proof of purchase. You may also find additional resources by scanning the QR code on the back of your remote or visiting the provided link: <https://qr.link/CpbUBA>.