

Victrola VTA-810SB

Victrola Century Essential 5-in-1 Music Center

MODEL: VTA-810SB

User Instruction Manual

Introduction

The Victrola Century Essential 5-in-1 Music Center is designed to provide versatile audio playback options in a compact, mid-century modern design. This unit integrates a 3-speed turntable, CD player, Bluetooth input, VINYLSTREAM Bluetooth output, and a 3.5mm auxiliary input. It features built-in stereo speakers for a complete audio experience.



Front view of the Victrola Century Essential music center, showcasing its elegant espresso wood finish and integrated speaker grille. The lid is open, revealing the turntable.

Safety Information

Please read and understand all safety instructions before using this product. Keep these instructions for future reference.

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

Package Contents

Verify that all items listed below are included in your package:

- Victrola Century Essential Music Center
- Power Adapter

Product Overview



An annotated image illustrating the various components and functionalities of the Victrola Century Essential, including its 3-speed belt-driven turntable, CD player, Bluetooth connectivity, VINYLSTREAM output, 3.5mm auxiliary input, headphone jack, RCA output, and built-in speakers.

Front Panel Controls:

- **Display Screen:** Shows current mode and track information.
- **Open/Close Button:** For the CD tray.
- **Repeat Button:** Repeats current track or entire CD.
- **Previous/Next Buttons:** Navigates tracks on CD or cassette.
- **Play/Pause Button:** Controls playback for CD and cassette.
- **Phones Jack:** 3.5mm output for headphones.
- **Aux Jack:** 3.5mm input for external audio devices.
- **Volume/Mode Knob:** Rotates to adjust volume, presses to cycle through input modes (Vinyl, VINYLSTREAM, Bluetooth, Compact Disc, Cassette, Aux).

Rear Panel Connections:

RCA & HEADPHONE OUTPUTS

Connect to an external stereo system or use the headphone output for private listening.



3.5MM AUX INPUT

Easily connect external devices via the 3.5mm aux input for expanded playback options.

The rear panel of the music center, displaying the RCA Line Out ports for connecting to external audio systems and the DC IN port for power.

- **LINE OUT (R/L):** RCA outputs for connecting to external speakers or an amplifier.
- **DC IN:** Power input for the included adapter.

Dimensions:



An image of the Victrola Century Essential with its key dimensions clearly marked, providing a visual reference for its size.

- **Width:** 14.57 inches (370mm)
- **Depth:** 14.02 inches (356mm)
- **Height:** 6.42 inches (163mm)

Setup

1. **Unpack:** Carefully remove the unit from its packaging.
2. **Placement:** Place the unit on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibration.
3. **Power Connection:** Connect the included power adapter to the DC IN port on the rear of the unit, then plug the adapter into a wall outlet.

Operating Instructions

Power On/Off & Mode Selection

- To turn the unit **ON**, press the Volume/Mode knob. The display will illuminate.
- To turn the unit **OFF**, press and hold the Volume/Mode knob for a few seconds.

- To select an input mode (Vinyl, VINYLSTREAM, Bluetooth, Compact Disc, Cassette, Aux), press the Volume/Mode knob repeatedly until the desired mode is indicated on the display and by the corresponding LED light.
- Rotate the Volume/Mode knob to adjust the volume level.

Turntable (Vinyl) Operation



A detailed view of the 3-speed belt-driven turntable, showcasing a vinyl record spinning and the tonearm in position, emphasizing the premium stereo sound.

1. Open the turntable lid.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33 $\frac{1}{3}$, 45, or 78 RPM) using the speed selector switch located near the tonearm.
4. Release the tonearm lock.
5. Gently lift the tonearm using the cueing lever.
6. Position the tonearm over the desired track on the record.
7. Slowly lower the cueing lever to place the stylus onto the record. Playback will begin.
8. At the end of the record, lift the tonearm, return it to its rest, and engage the tonearm lock.

CD Player Operation

CD PLAYER

Easily play your favorite albums with the built-in CD player.



The integrated CD player of the Victrola Century Essential with its tray extended, ready for a compact disc to be inserted for playback.

1. Select the "Compact Disc" mode using the Volume/Mode knob.
2. Press the "Open/Close" button to open the CD tray.
3. Place a CD onto the tray with the label side facing up.
4. Press the "Open/Close" button again to close the tray. The unit will read the CD.
5. Press the "Play/Pause" button to start playback.
6. Use the "Previous" and "Next" buttons to skip tracks.
7. Press the "Repeat" button to repeat the current track or all tracks.

Bluetooth Input Operation



BLUETOOTH® CONNECTIVITY

Wirelessly stream music from your Bluetooth device for effortless playback.

A smartphone wirelessly connected to the Victrola Century Essential via Bluetooth, illustrating the ability to stream music from compatible smart devices.

1. Select the "Bluetooth" mode using the Volume/Mode knob. The Bluetooth indicator light will flash.
2. Enable Bluetooth on your smart device (smartphone, tablet, etc.).
3. Search for "Victrola Century" in your device's Bluetooth settings and select it to pair.
4. Once paired, the Bluetooth indicator light will stop flashing and remain solid.
5. You can now stream audio from your device to the music center.

VINYLSTREAM Bluetooth Output Operation

BLUETOOTH® OUTPUT

VINYLSTREAM™

Technology lets you wirelessly stream vinyl records to Bluetooth speakers or headphones for flexible listening.



The Victrola Century Essential actively streaming music from a vinyl record to Bluetooth-enabled headphones, demonstrating the VINYLSTREAM feature for flexible listening.

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. Select the "VINYLSTREAM" mode using the Volume/Mode knob. The VINYLSTREAM indicator light will flash.
3. The music center will automatically search for and connect to nearby Bluetooth audio devices.
4. Once connected, the VINYLSTREAM indicator light will stop flashing and remain solid.
5. Begin playing a vinyl record on the turntable. The audio will stream to your connected Bluetooth device.

Auxiliary Input Operation

1. Connect an external audio device (e.g., MP3 player, smartphone) to the 3.5mm "Aux" jack on the front panel using a 3.5mm audio cable (not included).
2. Select the "Aux" mode using the Volume/Mode knob.
3. Play audio from your connected external device.

Headphone Jack Usage

1. Connect 3.5mm headphones to the "Phones" jack on the front panel.

2. Audio will be routed to the headphones, and the built-in speakers will be muted.

RCA Output Usage

1. Connect RCA cables (not included) from the "LINE OUT" ports on the rear of the unit to the audio input of an external amplifier or powered speakers.
2. Ensure the external audio system is set to the correct input.
3. The built-in speakers of the Victrola Century Essential will continue to play unless manually muted or turned off on the external system.

Maintenance

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Stylus Care:** Handle the turntable stylus with care. Clean it periodically with a soft brush designed for styli.
- **CD/Cassette Care:** Keep CDs and cassettes clean and free of dust and scratches.

Troubleshooting

- **No Power:** Ensure the power adapter is securely connected to the unit and a working power outlet.
- **No Sound:** Check the volume level. Ensure the correct input mode is selected. If using external speakers, verify their connection and power.
- **Turntable Not Spinning:** Ensure the unit is powered on and in Vinyl mode. Check that the platter is correctly seated.
- **Skipping on Vinyl:** Ensure the record is clean and free of dust. Place the unit on a stable surface to minimize vibrations.
- **Bluetooth Pairing Issues:** Ensure the unit is in Bluetooth pairing mode and your device's Bluetooth is enabled and searching. Try restarting both devices.

Specifications



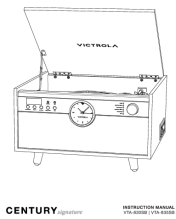
Model Number	VTA-810SB
Brand	Victrola
Dimensions (W x D x H)	14.57 x 14.02 x 6.42 inches (370 x 356 x 163 mm)
Weight	13.6 pounds
Turntable Speeds	33 1/3, 45, 78 RPM
Connectivity	Bluetooth Input, VINYLSTREAM Bluetooth Output, 3.5mm Aux Input, RCA Line Out
Media Playback	Vinyl Records, Compact Discs, Cassette Tapes
Included Components	Record Player, Power Adapter
Material	Wood


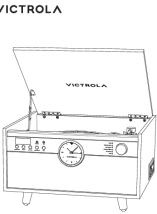
Warranty and Support

For warranty information and technical support, please refer to the documentation included with your product or visit the official Victrola website. Keep your purchase receipt as proof of purchase.

© 2025 Victrola. All rights reserved.

Related Documents - VTA-810SB

	<p>Victrola Aviator Bluetooth Turntable & Wooden Stand User Manual and Assembly Guide</p> <p>Comprehensive guide for the Victrola Aviator 8-in-1 Bluetooth Turntable (VTA-750B(PC)) and assembly instructions for the Victrola Wooden Stand with Record Holder (VA-30), covering setup, operation, maintenance, troubleshooting, and specifications.</p>
	<p>Victrola Century 6-in-1 Music Center: Mid-Century Design, Turntable, CD, Bluetooth</p> <p>Discover the Victrola Century 6-in-1 music center, blending elegant mid-century modern design with versatile audio playback. Features a 3-speed turntable, CD player, cassette player, Bluetooth streaming, and built-in stereo speakers.</p>
	<p>Victrola Century Signature VTA-830SB/VTA-835SB Instruction Manual</p> <p>Comprehensive instruction manual for the Victrola Century Signature music center (models VTA-830SB and VTA-835SB). Learn how to set up, operate, and troubleshoot your Victrola record player, CD player, cassette deck, and Bluetooth features.</p>

<p>User Manual of Product 1:</p> <p>Victrola Nostalgic 6-in-1 Bluetooth Record Player & Multimedia Center with Built-in Speakers • 3-Speed Turntable • CD • Cassette Player • FM Radio • Wireless Music Streaming • Memory</p>	<p>Victrola VTA-200B 6-in-1 Nostalgic Entertainment Center User Manual</p> <p>Comprehensive user manual for the Victrola VTA-200B 6-in-1 Nostalgic Entertainment Center, covering setup, operation, maintenance, troubleshooting, and specifications for its record player, CD player, cassette player, FM radio, and Bluetooth features.</p>
 <p>A black and white photograph of the Victrola VTA-800B 5-in-1 Turntable. The device is a small, rectangular, black unit with a silver-colored turntable and tonearm. The top lid is open, revealing the internal components. The brand name 'VICTROLA' is printed in a stylized font on the top lid. Below the photograph, the text '5-IN-1 TURNTABLE' is visible.</p>	<p>Victrola VTA-800B 5-in-1 Turntable Instruction Manual</p> <p>User manual for the Victrola VTA-800B 5-in-1 Turntable, providing setup, operation, maintenance, and troubleshooting guidance.</p>
 <p>A black and white photograph of the Victrola Music Center. The device is a larger, rectangular unit with a silver-colored front panel and a black top. The top lid is open, revealing the internal components. The brand name 'VICTROLA' is printed in a stylized font on the top lid. Below the photograph, the text 'CENTURY' is visible.</p>	<p>Victrola Music Center User Manual and Setup Guide</p> <p>Comprehensive guide for setting up and operating the Victrola Music Center, including vinyl playback, Bluetooth connectivity, CD and cassette operation, and troubleshooting.</p>