

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SakerPlus](#) /

› [SakerPlus CP97052-AA Handheld Steam Cleaner Instruction Manual](#)

## SakerPlus CP97052-AA

# SakerPlus CP97052-AA Handheld Steam Cleaner Instruction Manual

Model: CP97052-AA

## 1. INTRODUCTION

---

Thank you for choosing the SakerPlus CP97052-AA Handheld Steam Cleaner. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new steam cleaner. Please read all instructions carefully before use and retain this manual for future reference.

## 2. SAFETY INFORMATION

---

Your SakerPlus steam cleaner is designed with safety in mind. Observe the following precautions:

- **Child-Safety Lock:** The unit features a child-safety lock to prevent accidental steam release. Ensure the lock is engaged when not in active use or when children are present.
- **Cool-Touch Cap:** The heat-insulated cap remains cool to the touch, minimizing burn risks during operation.
- **Water Filling:** Always unplug the unit and allow it to cool completely before refilling the water tank. Fill only up to the indicated line (recommended 280 mL for a 350 mL tank capacity) and securely tighten the cap.
- **Operating Angle:** Avoid tilting the unit beyond 45 degrees during operation to prevent water leakage.
- **Unplugging:** Always unplug the steam cleaner before refilling, cleaning, or storing.
- **High Temperature Steam:** The unit produces 230°F (110°C) steam. Exercise extreme caution to avoid direct contact with skin or delicate surfaces.



Figure 1: The SakerPlus steam cleaner offers chemical-free cleaning, making it suitable for homes with children and pets. Always ensure proper safety measures are followed during use.



Figure 2: Key safety features of the SakerPlus steam cleaner, including the child lock, safety cap, and indicator light for operational status.

### 3. PRODUCT OVERVIEW & WHAT'S INCLUDED

Your SakerPlus Handheld Steam Cleaner comes with the main unit and 13 versatile accessories to tackle various cleaning tasks:

- **Main Steam Unit:** The core device for generating high-pressure steam.
- **Long Spray Nozzle:** For general steam application and reaching tight spots.
- **Bent Spray Nozzle:** Ideal for corners, edges, and hard-to-reach areas like stove corners or toilet rims.
- **Round Brush Nozzle:** For scrubbing grout lines, tiles, and other textured surfaces.
- **Towel Sleeve:** Used with the fabric cleaning accessory for steaming upholstery, fabrics, and car seats.
- **Flexible Hose:** Extends reach and maneuverability for cleaning various surfaces.
- **Window Spray Nozzle:** For streak-free cleaning of windows and glass surfaces.
- **General Spray Nozzle:** A broad nozzle for wider surface cleaning.
- **Measuring Cup:** For precise water filling.

- **Funnel:** Aids in easy water pouring into the tank.
- Additional brushes for specialized cleaning.



Figure 3: A selection of the 13 versatile accessories, demonstrating their use for various cleaning tasks, from kitchen surfaces to car interiors.

## 4. SETUP

1. **Prepare the Unit:** Ensure the steam cleaner is unplugged and cool.
2. **Fill Water Tank:** Unscrew the safety cap. Use the provided measuring cup and funnel to fill the 350 mL tank with up to 280 mL of purified water. Do not overfill.
3. **Secure Cap:** Tightly screw the safety cap back onto the unit.
4. **Attach Accessory:** Select the appropriate accessory for your cleaning task and securely attach it to the nozzle.
5. **Power On:** Plug the power cord into a suitable electrical outlet. The indicator light will illuminate (often red) to show it's heating up.
6. **Heat-Up Time:** The unit will heat up in approximately 3-5 minutes, reaching 230°F (110°C). The indicator light will change or turn off when ready for use.

# 350ML HIGH CAPACITY

Big tank, no tantrums



Figure 4: Filling the water tank of the SakerPlus steam cleaner using the provided measuring cup and funnel. Ensure not to overfill.

## 5. OPERATING INSTRUCTIONS

Once the unit is heated and ready, you can begin cleaning:

1. **Unlock Safety Trigger:** Disengage the child-safety lock if it is active.
2. **Apply Steam:** Point the nozzle at the surface to be cleaned and press the steam trigger. Steam will be released.
3. **Clean Surfaces:** Move the steam cleaner slowly over the surface, allowing the hot steam to loosen dirt, grime, and stains. Use appropriate attachments for best results.
4. **Wipe Clean:** For optimal results, wipe the steamed surface with a clean cloth immediately after steaming to remove loosened debris.

### Recommended Uses for Accessories:

- **Kitchen:** Use the bent nozzle for stove range hoods and sinks, and the round brush for kitchen tiles and grout lines.
- **Bathroom:** The round brush is effective for ceramic tiles and grout lines. The bent nozzle can reach toilet rims.

- **Home Furniture & Floors:** Use the towel sleeve with the fabric cleaning accessory for upholstered furniture and sofas. The general spray nozzle can be used on sealed hard floors.
- **Car Interiors:** The towel sleeve is suitable for car seats, and various nozzles can clean cup holders and dashboards.
- **Various Crevices:** The long spray nozzle and flexible hose are excellent for grills and other hard-to-reach areas.



Figure 5: The SakerPlus steam cleaner in action, demonstrating its versatility across different household surfaces.

Video 1: Official SakerPlus demonstration of the steam cleaner's features and cleaning capabilities on various surfaces.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner:

- **Empty Water Tank:** After each use, unplug the unit and allow it to cool. Carefully unscrew the safety cap and empty any remaining water from the tank.
- **Clean Accessories:** Wash removable accessories with mild soap and water. Ensure they are completely dry before storing.
- **Wipe Down Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the unit in water.

- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach of children.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your SakerPlus steam cleaner, please refer to the following common solutions:

- **No Steam:** Ensure the unit is properly plugged in and has completed its heat-up cycle (indicator light off or green). Check if the water tank is filled to the recommended level.
- **Water Leakage:** Ensure the safety cap is tightly secured and the unit is not tilted beyond 45 degrees during operation.
- **Insufficient Steam Pressure:** Allow the unit to reheat if the indicator light turns red during prolonged use.

For further assistance, please contact SakerPlus customer support.

## 8. SPECIFICATIONS

---

Feature	Specification
Brand	SakerPlus
Model Name	CP97052-AA
Wattage	1050 Watt-hours
Item Weight	4 Pounds
Tank Volume	350 Milliliters
Heat Time	3-5 Minutes
Maximum Temperature	230 Degrees Fahrenheit (110°C)
Power Source	AC (120 Volts)
Cord Length	9.2 ft
Special Features	Child Lock, Fast Heat-Up, Lightweight, Portable

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact SakerPlus customer service directly. Keep your purchase receipt as proof of purchase.