



Manuals.plus /

- › Seesii /
- › SEESII M6 Combo Mini Chainsaw & Electric Pruning Shears Instruction Manual

Seesii M6 Combo

SEESII M6 Combo Mini Chainsaw & Electric Pruning Shears Instruction Manual

1. SAFETY INFORMATION

Always prioritize safety when operating power tools. Read and understand all safety warnings and instructions before use. Keep this manual for future reference.

General Safety Precautions:

- Wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and hearing protection.
- Ensure the work area is clear of bystanders, especially children and pets.
- Do not operate tools in wet conditions or in the presence of flammable liquids or gases.
- Keep hands and body parts away from cutting blades and chains.
- Always remove the battery before performing any adjustments, changing accessories, or storing the tool.
- Use only original SEESII batteries and chargers.
- Store tools in a dry, secure place out of reach of children.

Enhanced Safety Features:

- **Chainsaw:** Features a dual-switch safety lock to prevent accidental startup.
- **Pruning Shears:** Requires a double-trigger press for activation.
- Both tools are equipped with non-slip grips and protective scabbards for user safety.

2. PACKAGE CONTENTS

The SEESII M6 Combo kit includes the following items:

- 1 x 6-inch Mini Chainsaw
- 1 x Electric Pruning Shears

- 2 x 2.0Ah Rechargeable Batteries
- 1 x Fast Charger
- 2 x Chains (1 pre-installed on chainsaw)
- 1 x Sharpening Rod
- 1 x Empty Oil Bottle (Oil not included)
- 1 x Pair of Gloves
- 1 x Tool Bag
- 1 x Hex Wrench
- 1 x Screwdriver
- 1 x User Manual (This document)

One-Handed Operation

Perfect for Women & Seniors

2.91 Lbs

2.31 Lbs

Image: All components of the SEESII M6 Combo kit, including the mini chainsaw, pruning shears, batteries, charger, and accessories.

3. SETUP

3.1 Battery Charging and Installation

Before first use, fully charge both 2000mAh lithium batteries using the provided fast charger. Insert the charged battery firmly into the tool until it clicks into place.

3.2 Mini Chainsaw Chain Installation and Tensioning

One chain is pre-installed. If you need to replace or install a new chain:

1. Remove the battery from the chainsaw.
2. Loosen the side cover knob and remove the side cover.
3. Remove the old chain and guide bar if replacing.
4. Place the new chain onto the guide bar, ensuring the cutting teeth are facing the correct direction (refer to the arrow on the guide bar).
5. Attach the guide bar to the chainsaw and loop the chain around the sprocket.
6. Reinstall the side cover and lightly tighten the knob.
7. Check the chain slack. It should be 1-3 mm.
8. Turn the tensioning screw clockwise to tighten the chain until the slack is within the recommended range.
9. Fully tighten the side cover knob.

Video: How to Install SEESII 6-Inch Chainsaw. This video demonstrates the step-by-step process of installing and tensioning the chain on the mini chainsaw.

3.3 Electric Pruning Shears Blade Replacement

To replace the blade on the electric pruning shears:

1. Remove the battery from the pruning shears.
2. Loosen the screw with the large hex key, then loosen the screw with the small hex key.
3. Loosen the two mounting screws with a screwdriver.
4. Remove the rear cover and then carefully remove the old blades.
5. Place the new blades in position.
6. Insert the blade bolt and turn clockwise to tighten.
7. Align the screws with the hex holes and tighten clockwise with a hex key.
8. Tighten the nut.
9. Insert the screw and tighten clockwise.
10. Place the gasket and tighten the screw with a large hex key.

Video: Installing Your SEESII Pruning Shears. This video guides you through the process of replacing the blade on the electric pruning shears.

3.4 Electric Pruning Shears Blade Opening Adjustment

The pruning shears feature 3 adjustable cutting modes (15mm, 20mm, 30mm) for precise pruning:

1. Install the battery and press the power button to turn on the shears.
2. Quickly press the trigger twice until you hear two beeps and the blade opens to its maximum (30mm).
3. Press the power button to cycle through the cutting diameters (15mm, 20mm, 30mm). The LED indicators will show the selected mode.

Video: Changing Blade Opening: SEESII Pruning Shears. This video demonstrates how to adjust the cutting diameter of the pruning shears.

4. OPERATING INSTRUCTIONS

4.1 Mini Chainsaw Operation

The 6-inch mini chainsaw is designed for efficient cutting of branches and logs up to 6 inches in diameter. It can cut a 6-inch branch in approximately 5-8 seconds with a chain speed of 23-26 ft/s.

1. Ensure the battery is fully charged and properly installed.
2. Hold the chainsaw firmly with one hand, ensuring a stable grip on the non-slip handle.
3. Engage the dual-switch safety lock, then press the trigger to start the saw.
4. Position the chain against the branch to be cut and apply gentle, steady pressure. Allow the saw to do the work.
5. After cutting, release the trigger and engage the safety lock.

One Kit for Every Pruning Task

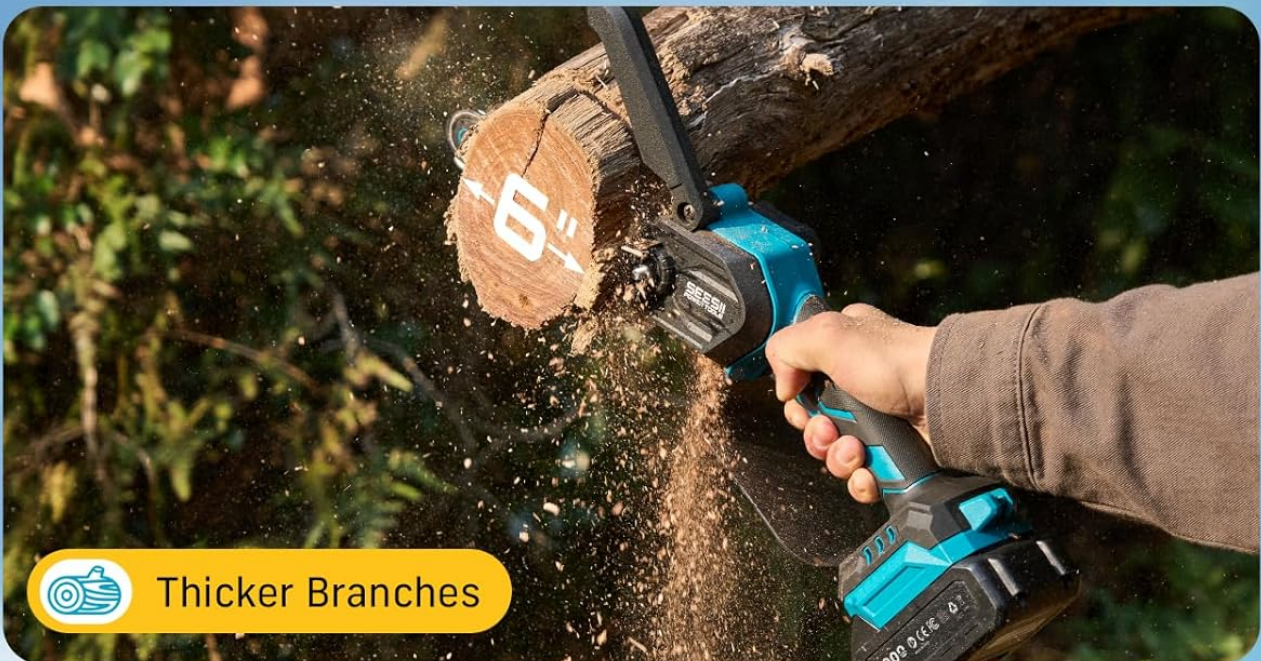


Image: A person demonstrating the use of the SEESII mini chainsaw for cutting logs.

4.2 Electric Pruning Shears Operation

The electric pruning shears are ideal for precise trimming of trees and flowers, with a maximum cutting diameter of 1.2 inches (30mm). The ultra-sharp SK5 high-carbon steel blade ensures clean cuts.

1. Ensure the battery is fully charged and properly installed.
2. Turn on the shears by pressing the power button.
3. Quickly press the trigger twice to open the blades.
4. Adjust the cutting diameter as needed (15mm, 20mm, or 30mm) by pressing the power button.
5. Position the blades around the branch to be cut and press the trigger to make a clean cut.
6. The auto-lock mode conserves battery when not in active use.

600W

Brushless Motor



Powerful



Low Noise



Energy Efficient



Durable



Image: A person using the SEESII electric pruning shears to trim a tree branch, showing the adjustable cutting diameter.

Video: SEESII 2-in-1 Electric Pruner & Chainsaw Combo. This video showcases both tools in action, demonstrating their cutting capabilities.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your tools.

5.1 Cleaning

- Always remove the battery before cleaning.
- After each use, clean the blades of the pruning shears and the chain/guide bar of the chainsaw with a brush or cloth to remove sap, sawdust, and debris.
- Wipe down the tool bodies with a damp cloth. Do not use harsh chemicals or abrasive cleaners.

5.2 Lubrication

- **Mini Chainsaw:** Regularly lubricate the chain and guide bar using chain oil (not included, use the provided empty bottle for storage). Proper lubrication reduces friction and wear.
- **Electric Pruning Shears:** Apply a small amount of machine oil to the blade pivot point periodically to ensure smooth operation.

5.3 Blade and Chain Care

- **Pruning Shears:** Sharpen the SK5 high-carbon steel blade as needed using the provided sharpening rod or a suitable sharpening tool. Replace blades when they become dull or damaged beyond sharpening.
- **Mini Chainsaw:** Keep the chain sharp for efficient cutting. Use the sharpening rod to maintain sharpness. Replace the chain if it becomes excessively dull, stretched, or damaged.

5.4 Storage

- Always remove batteries from the tools before storage.
- Store tools and batteries in a cool, dry place, away from direct sunlight and moisture.
- Use the provided tool bag for organized and protected storage.
- Ensure protective scabbards are on the chainsaw bar and pruning shears blades during storage.

6. TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions.

General Specifications		
Tool does not turn on	Battery not installed correctly or discharged; Safety lock engaged (chainsaw); Double-trigger not pressed (pruning shears).	Ensure battery is fully charged and properly inserted. Disengage safety lock. Press double-trigger for shears.
Poor cutting performance (Chainsaw)	Dull chain; Incorrect chain tension; Insufficient lubrication.	Sharpen or replace chain. Adjust chain tension. Lubricate chain and guide bar.
Poor cutting performance (Pruning Shears)	Dull blade; Incorrect blade opening for material.	Sharpen or replace blade. Adjust blade opening to match branch diameter.
Battery not charging	Charger not properly connected; Faulty battery or charger.	Ensure secure connection. Try a different outlet. Contact support if issue persists.
Tool overheats	Continuous heavy use; Blocked ventilation.	Allow tool to cool down. Clear any debris from ventilation openings. Avoid prolonged heavy use.

7. SPECIFICATIONS

General Specifications	
Brand	Seesii
Model Number	M6 Combo
Power Source	Battery Powered
Motor Type	Brushless (800 Watts)
Battery Type	2 x 2000mAh Lithium Batteries
Item Weight	Chainsaw: 3.3 lbs; Pruning Shears: 2.31 lbs
Product Dimensions	16.9"L x 9.1"W x 5.1"H (Overall package)
Mini Chainsaw Specifications	
Chain Length	6 Inches
Chain Speed	26 ft/s
Max Cutting Diameter	6 Inches
Electric Pruning Shears Specifications	
Blade Material	SK5 High-Carbon Steel
Adjustable Cutting Modes	15mm, 20mm, 30mm (1.2 inches max)

8. WARRANTY AND SUPPORT

SEESII provides exceptional after-sales support to ensure a worry-free purchase. If you have any questions or concerns regarding your SEESII M6 Combo Mini Chainsaw and Electric Pruning Shears, please do not hesitate to contact us.

Customer Service:

- **Availability:** 24/7 friendly customer service.
- **Response Time:** Our team aims to respond within 12 hours to quickly resolve any issues.
- **Email:** support@seesiius.com

For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official SEESII website.