

KEMEI KM-1680+1737

KEMEI KM-1680+1737 Professional Cordless Hair Clipper and Trimmer Set User Manual

Model: KM-1680+1737

1. INTRODUCTION

Thank you for choosing the KEMEI KM-1680+1737 Professional Cordless Hair Clipper and Trimmer Set. This manual provides essential information for the safe and effective use, maintenance, and care of your grooming tools. Please read it thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

- The machine is not waterproof. Avoid contact with water to prevent electric shock or damage.
- Do not immerse the appliance in water or other liquids.
- Keep the appliance away from children.
- Ensure the power adapter is compatible with your local voltage before charging.
- Do not use the appliance if it is damaged or malfunctioning.
- Only use attachments supplied by the manufacturer.
- Unplug the appliance before cleaning or maintenance.

3. PACKAGE CONTENTS

Your KEMEI KM-1680+1737 set includes the following items:

- 1 x KEMEI KM-1680 Hair Clipper
- 1 x KEMEI KM-1737 Hair Trimmer
- 6 x Guide Combs for Clipper (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm)
- 4 x Guide Combs for Trimmer (1mm, 2mm, 3mm, 4mm)
- 2 x USB Charging Cables

- 1 x Cleaning Brush
- 1 x Lubricating Oil
- 1 x Hair Comb
- 1 x Hair Cape
- User Manual



Image: Overview of the KEMEI KM-1680+1737 Hair Clipper and Trimmer Kit, showing both devices, various guide combs, charging cables, and accessories.

4. PRODUCT FEATURES

- **Sharp Stainless Steel Blades:** Designed for smooth, precise cutting without pulling or snagging.
- **Powerful Motor:** Provides efficient and quiet operation for a comfortable trimming experience.
- **Digital LED Display:** Clearly shows battery level, charging reminder, motor RPM, and oil reminder.
- **Long-Lasting Rechargeable Battery:** Clipper features a 2000mAh battery with 3 hours charging time and 90 minutes running time. Trimmer features a 2000mAh battery with 2.5 hours charging time and 90 minutes running time.
- **USB Charging:** Conveniently charge via power bank, laptop, or wall adapter.
- **Ergonomic Design:** Provides a comfortable and secure grip during use.
- **Versatile Guide Combs:** Includes 10 guide combs for various hair lengths and styles.

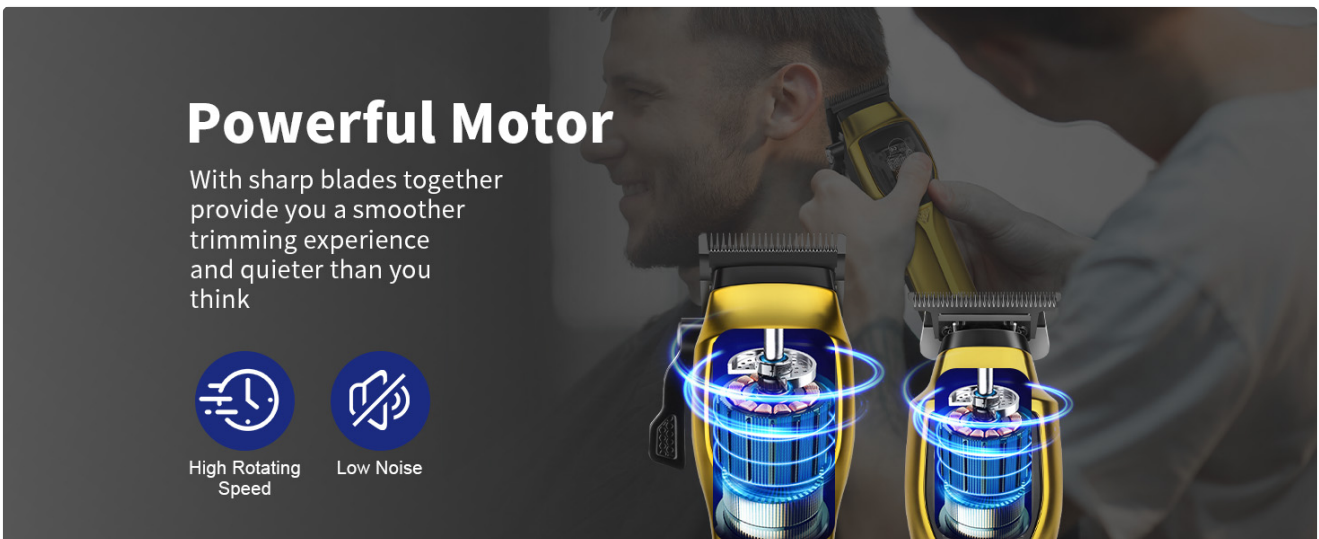 


Image: Close-up of the sharp stainless steel blades on both the KEMEI hair clipper and trimmer, highlighting their precision cutting ability.

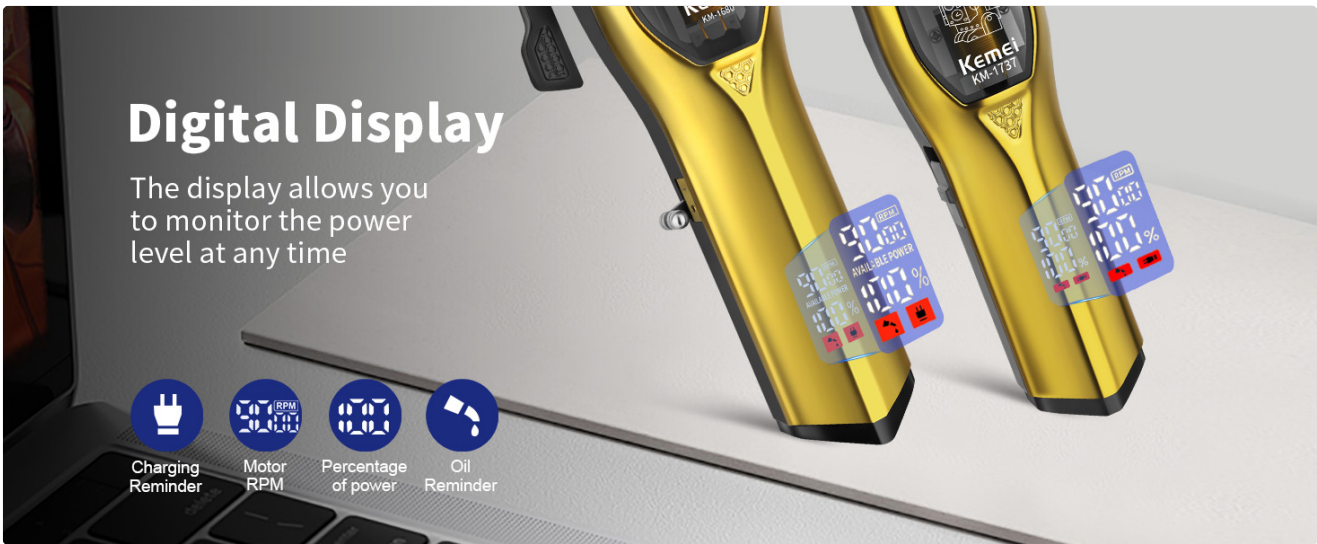 


Image: Illustration showing the internal powerful motor of the KEMEI hair clipper and trimmer, emphasizing high rotating speed and low noise operation.



Image: Close-up of the digital LED display on both devices, showing indicators for charging, motor RPM, percentage of power, and oil reminder.

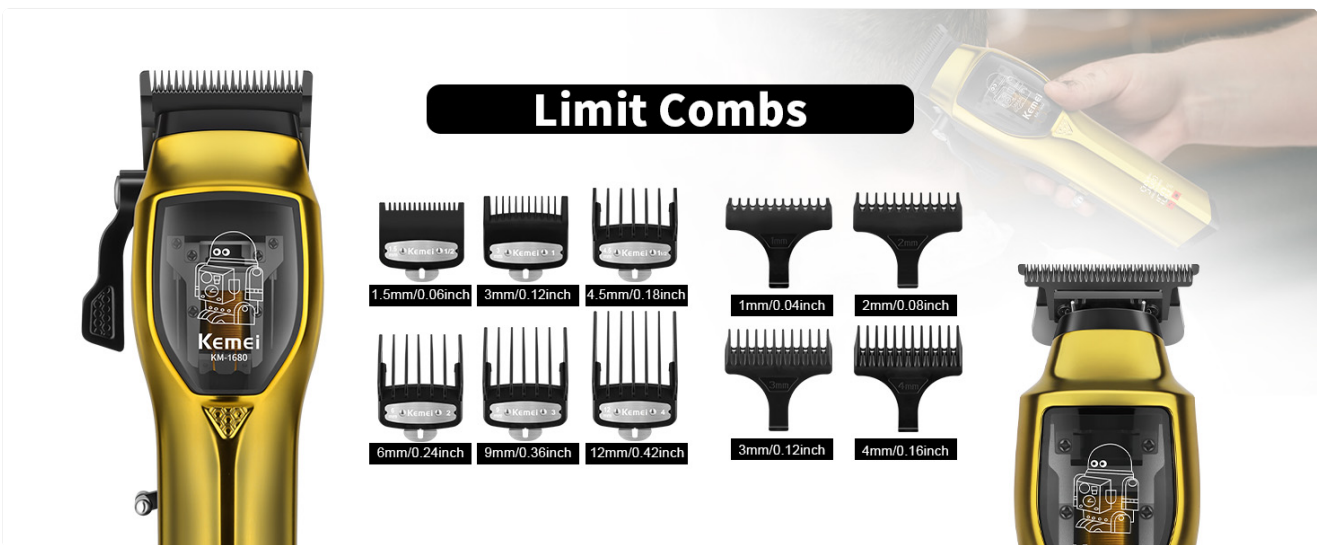 


Image: Depiction of the rechargeable battery and various USB charging options, including laptop, USB charger, power bank, and car charger, along with charging and running times.



Image: The KEMEI hair clipper and trimmer displayed with their respective sets of guide combs, showing the different length options.

5. SETUP

5.1 Charging the Device

1. Before first use, fully charge the hair clipper and trimmer.
2. Connect the USB charging cable to the charging port at the bottom of the device.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., laptop, power bank, USB wall adapter).
4. The LED display will indicate the charging status. The clipper takes approximately 3 hours to fully charge, and the trimmer takes approximately 2.5 hours.
5. Once fully charged, the display will show 100%. Disconnect the charger.

5.2 Attaching Guide Combs

1. Ensure the device is turned off before attaching or removing guide combs.
2. Select the desired guide comb for your preferred hair length.
3. Align the comb with the blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

6. OPERATING INSTRUCTIONS

6.1 General Hair Cutting (Clipper KM-1680)

1. Ensure hair is clean and dry.
2. Attach the appropriate guide comb (1.5mm, 3mm, 4.5mm, 6mm, 9mm, or 12mm).
3. Turn on the clipper using the power button.
4. Hold the clipper with the blade teeth pointing upwards and flat against the head.
5. Move the clipper slowly against the direction of hair growth.
6. For blending, use a larger comb length first, then gradually switch to shorter lengths.

6.2 Detailing and Trimming (Trimmer KM-1737)

1. For precise lines and edges, use the trimmer without a guide comb.
2. For beard trimming or shorter styles, attach the desired guide comb (1mm, 2mm, 3mm, or 4mm).
3. Turn on the trimmer.
4. Hold the trimmer at an angle and gently move it along the desired area to create clean lines or trim hair.

Video: A demonstration of the KEMEI Professional Men's Cordless Hair Clipper Set in use, showing how to handle the devices and perform basic trimming and clipping actions.

7. MAINTENANCE

7.1 Cleaning the Blades

1. After each use, turn off and unplug the device.
2. Use the provided cleaning brush to remove any loose hair from the blades.
3. The detachable blades can be rinsed under running water. Ensure the main body of the device does not get wet as it is not waterproof.
4. Allow the blades to air dry completely before reattaching or storing.

7.2 Oiling the Blades

1. Regularly oil the blades to maintain optimal performance and prolong their lifespan.
2. Apply a few drops of the included lubricating oil onto the blades while the device is running.
3. Allow it to run for a few seconds to distribute the oil evenly, then turn off.
4. Wipe off any excess oil with a soft cloth.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Device not charged	Charge the device fully.
Blades pull hair	Blades are dull or dirty; Insufficient oil	Clean the blades thoroughly and apply lubricating oil. If problem persists, blades may need replacement.
Device runs slowly	Low battery; Hair caught in blades	Charge the device. Clean the blades to remove any trapped hair.

Problem	Possible Cause	Solution
Excessive noise/vibration	Blades not properly aligned or oiled	Ensure blades are clean and oiled. Check for proper blade alignment.

9. SPECIFICATIONS

Feature	Detail
Model Numbers	KM-1680 (Clipper), KM-1737 (Trimmer)
Blade Material	Stainless Steel
Power Source	Battery Powered (Rechargeable)
Clipper Battery Capacity	2000mAh
Clipper Charging Time	Approx. 3 hours
Clipper Running Time	Approx. 90 minutes
Trimmer Battery Capacity	2000mAh
Trimmer Charging Time	Approx. 2.5 hours
Trimmer Running Time	Approx. 90 minutes
Input Voltage	5V 1A (USB)
Product Dimensions	7.48 x 2.64 x 1.65 inches (Clipper)
Item Weight	532 Grams (Total)

10. WARRANTY AND SUPPORT

KEMEI products are manufactured with quality and reliability in mind. For any issues or support inquiries, please refer to your purchase documentation or contact the retailer where the product was purchased. Keep your proof of purchase for warranty claims.