

Monster S300

Monster S300 Portable Bluetooth Speaker User Manual

Model: S300

INTRODUCTION

Thank you for purchasing the Monster S300 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW

The Monster S300 is a versatile portable Bluetooth speaker designed for both indoor and outdoor use. It features IPX7 waterproofing, dynamic RGB lights, TWS pairing, and a secure bike mount.

Package Contents

What's in the Package?

- Monster S300 Speaker x 1
- Charging Cable x 1
- Handlebar Mount x 1
- Rubber Strip x 2
- Quick Start Guide x 1

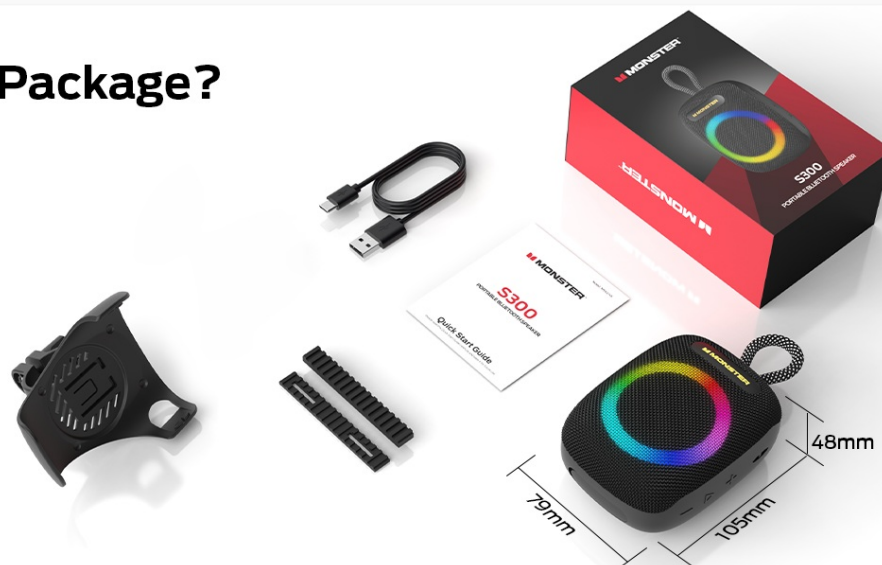 


Image: What's in the Box - Monster S300 Speaker, Charging Cable, Handlebar Mount, Rubber Strip x 2, Quick Start Guide.

- Monster S300 Speaker x 1

- Charging Cable x 1
- Handlebar Mount x 1
- Rubber Strip x 2
- Quick Start Guide x 1

Speaker Components and Controls

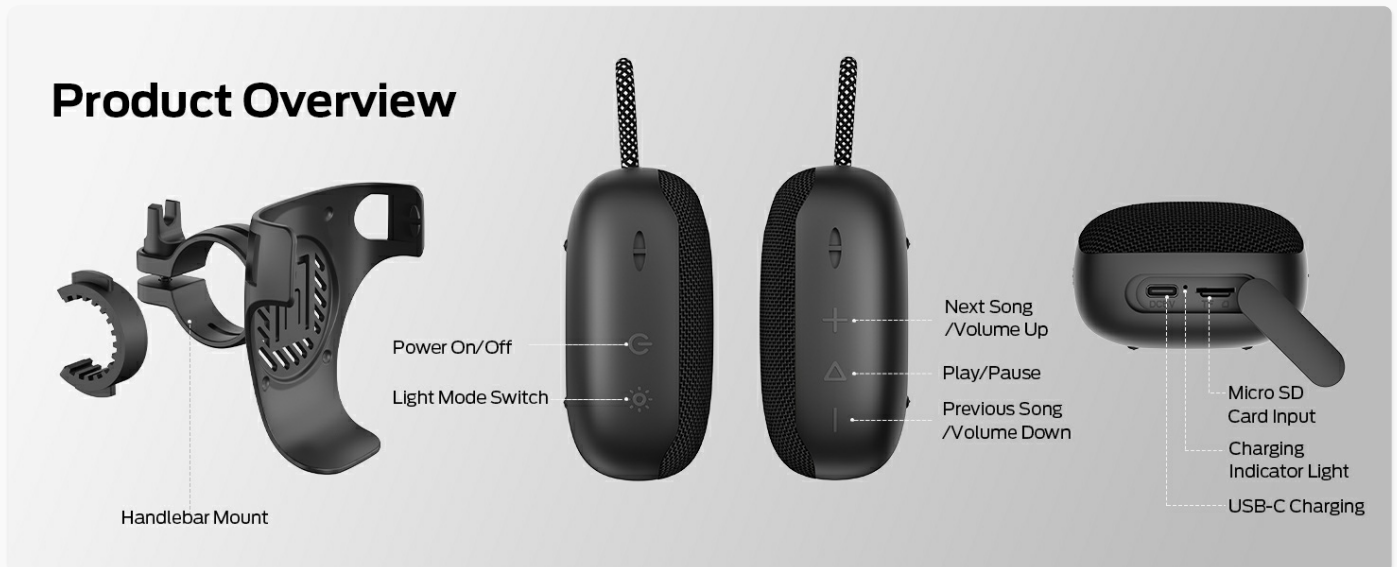


Image: Product Overview - Labeled diagram of the Monster S300 speaker and its handlebar mount.

- **Power On/Off Button:** Press and hold to power on or off.
- **Light Mode Switch:** Press to cycle through RGB light modes.
- **Next Song / Volume Up Button (+):** Short press for next song, long press for volume up.
- **Play/Pause Button (▶ ||):** Press to play or pause music, answer/end calls.
- **Previous Song / Volume Down Button (-):** Short press for previous song, long press for volume down.
- **Micro SD Card Input:** Insert a TF card for local music playback.
- **Charging Indicator Light:** Indicates charging status.
- **USB-C Charging Port:** Connect the charging cable here.
- **Handlebar Mount:** For securing the speaker to bike handlebars.

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's charging port and a compatible USB power adapter (not included). The charging indicator light will show the charging status. A full charge provides up to 10 hours of playtime at 50% volume with lights off.

Installing the Bike Mount

Secure Bike Mount

Easy clip-on design locks firmly on handlebars, staying rock-solid through any ride.

Min size **19 mm**




Max size **35 mm**



Image: Secure Bike Mount - Illustrates the installation of the bike mount on a handlebar, suitable for motorcycles, bicycles, and scooters.

Universal Handlebar Mount from 19-34mm

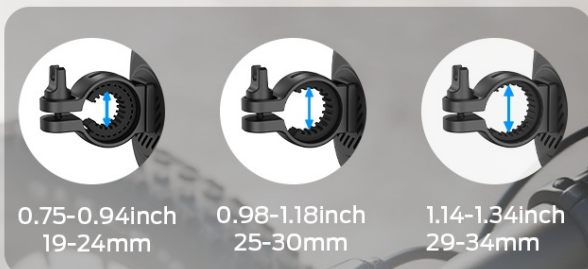

0.75-0.94inch
19-24mm

0.98-1.18inch
25-30mm

1.14-1.34inch
29-34mm

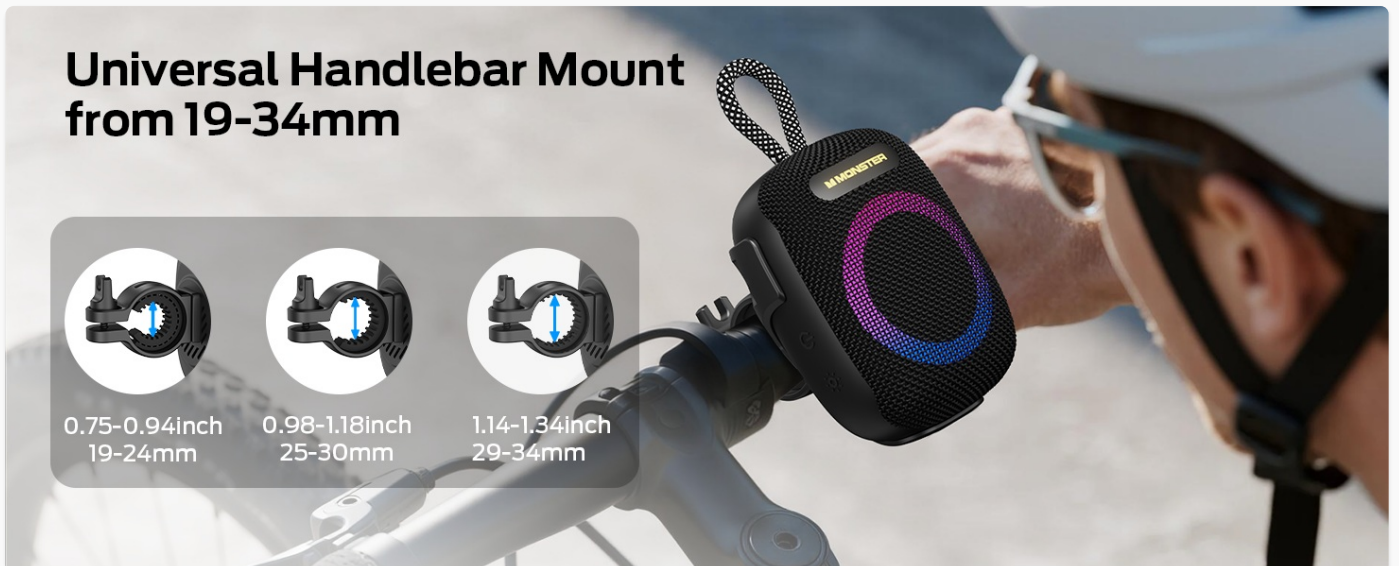


Image: Universal Handlebar Mount - Details the adjustable sizes of the mount for various handlebar diameters.

1. Select the appropriate rubber strip(s) for your handlebar diameter (19-34mm).
2. Place the rubber strip(s) around your handlebar at the desired mounting location.
3. Attach the handlebar mount over the rubber strip(s) and secure it firmly.
4. Slide the Monster S300 speaker onto the mount until it clicks into place.

OPERATING INSTRUCTIONS

Power On/Off

- To power on, press and hold the Power On/Off button until the indicator light illuminates.
- To power off, press and hold the Power On/Off button again until the indicator light turns off.

Bluetooth Pairing

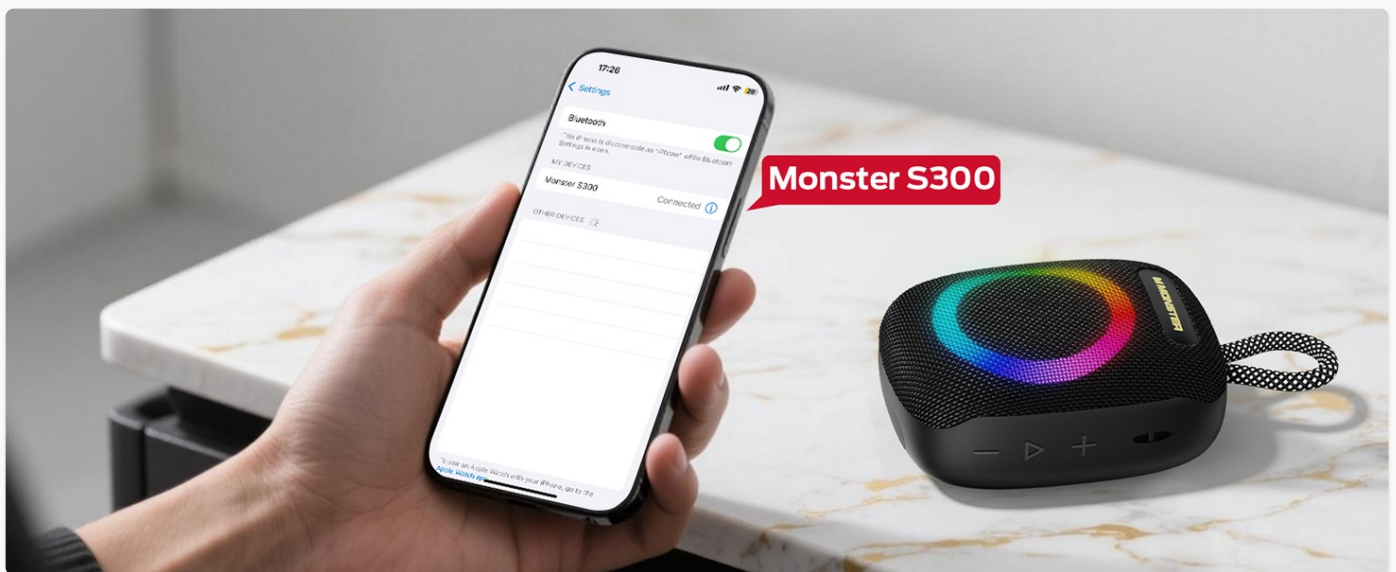


Image: Bluetooth 6.0 - Demonstrates connecting the Monster S300 speaker to a smartphone via Bluetooth.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicator light will flash).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Monster S300" from the list of devices.
4. Once paired, the speaker will indicate a successful connection, and the indicator light will become solid.

True Wireless Stereo (TWS) Pairing

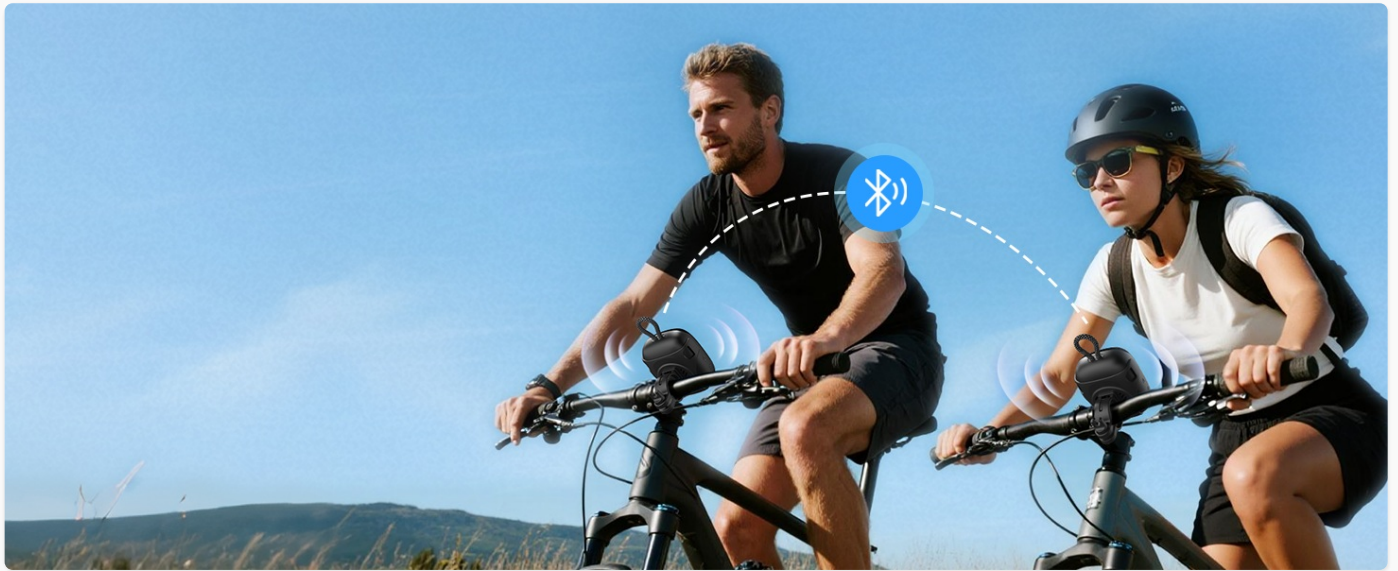


Image: TWS - Two Monster S300 speakers paired for immersive stereo sound on a bike ride.

To achieve immersive stereo sound, you can pair two Monster S300 speakers together:

1. Ensure both S300 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Play/Pause button. It will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. You will hear an audible confirmation.
4. Once TWS paired, connect your device to the primary speaker via Bluetooth as described above.

RGB Light Modes



Image: RGB Lights - Shows the speaker's dynamic RGB lights in action, enhancing the atmosphere.

Press the Light Mode Switch button to cycle through various RGB light patterns. The lights can pulse and breathe with your music, or be set to a static mode, or turned off to conserve battery.

Hands-Free Calling

When connected to your smartphone via Bluetooth, the built-in microphone allows for hands-free calls. Press the Play/Pause button to answer an incoming call or end an ongoing call.

TF Card Playback

Insert a Micro SD (TF) card loaded with MP3 audio files into the TF card input slot. The speaker will automatically switch to TF card playback mode. Use the Next/Previous Song buttons to navigate tracks.

MAINTENANCE

Waterproof Care (IPX7)



Image: IPX7 Waterproof - Speaker submerged in water, highlighting its waterproof capability.

The Monster S300 speaker has an IPX7 waterproof rating, meaning it can withstand immersion in water up to 1 meter for 30 minutes. To maintain its waterproof integrity:

- Ensure the charging port cover is securely closed before exposing the speaker to water.
- Do not expose the speaker to saltwater or other chemicals, as this may damage the seals.
- After exposure to water, especially chlorinated or saltwater, rinse the speaker with fresh water and dry thoroughly before charging or using.

Cleaning and Storage

- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its health.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.
Cannot pair via Bluetooth.	Make sure the speaker is in pairing mode. Turn off and on Bluetooth on your device. Ensure no other device is connected to the speaker. Try resetting the speaker (if applicable, refer to quick start guide for reset instructions).

Problem	Solution
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the speaker is not muted. Check if the speaker is properly connected via Bluetooth or TF card.
TWS pairing fails.	Ensure both speakers are fully charged and not connected to any other Bluetooth device. Try powering both speakers off and on, then attempt TWS pairing again.

SPECIFICATIONS

Feature	Detail
Model Number	S39
Brand	Monster
Connectivity Protocol	Bluetooth 6.0
Audio Output Mode	Stereo
Speaker Type	Outdoor
Waterproof Rating	IPX7
Battery Capacity	3300 mAh
Battery Average Life	10 hours (at 50% volume with lights off)
Control Method	Push Button
Mounting Type	Bike Mount
Product Dimensions	9.3 x 5.9 x 14.6 cm; 400 g
Compatible Devices	Smartphone, Tablet, Laptop

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the Quick Start Guide included in your package or visit the official Monster website. Keep your purchase receipt as proof of purchase for any warranty claims. If you encounter any issues not covered in this manual, please contact Monster customer service for assistance.

© 2026 Monster. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question