

coocaa 65Y74 Pro

coocaa 65Y74 Pro 65-inch QLED Ultra Smart Google TV User Manual

Model: 65Y74 Pro

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your coocaa 65Y74 Pro 65-inch QLED Ultra Smart Google TV. Please read this manual thoroughly before using your television to ensure proper and safe operation.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV.
- Use only the power cord supplied with the TV.
- Keep batteries away from children.

SETUP

1. Unboxing and Package Contents

Carefully remove all components from the packaging. Ensure all items listed below are present. Keep the original packaging for potential future transport or returns.

- TV Unit (1N)
- Stand Bases (2N)
- Quick Start Guide (1N)
- Warranty Card (1N)
- Remote (1N)

- Batteries (2N, AAA type)
- Power cord (1N)
- Screws (4N)
- AV Converting Cable (1N)



Image: Overview of the coocaa 65Y74 Pro TV packaging and included accessories.

2. Physical Installation

Your coocaa 65Y74 Pro TV supports both table-top and wall-mount installations. Choose the method that best suits your environment.

Table-Top Installation

1. Attach the two stand bases to the bottom of the TV unit using the provided screws. Ensure they are securely fastened.
2. Place the TV on a stable, flat surface large enough to support its dimensions (144.5W x 83.8H cm).

CrystalQLED
4K



Dolby
Vision

HLG



HDR10+

120Hz

MEMC

ALLM

EYE CARE

Full Screen

Dolby Atmos

30W Speaker

2.0 Sound Channel

Google Assistant

Hey Google

"Hey Google"



S2
satellite signal



HDMI2.1/1
(eARC)

2GB RAM

32GB ROM

A55 Chip



Image: Front view of the coocaa 65Y74 Pro TV on its stand.

4K Ultra-Clear

The world you see is more beautiful

 4K resolution



Image: Dimensions of the coocaa 65Y74 Pro TV (1445mm width, 838mm height, 80mm depth).

Wall-Mount Installation

For wall mounting, use a VESA compatible mount (400 x 400 mm). Consult a professional for wall mounting to ensure safety and proper installation.

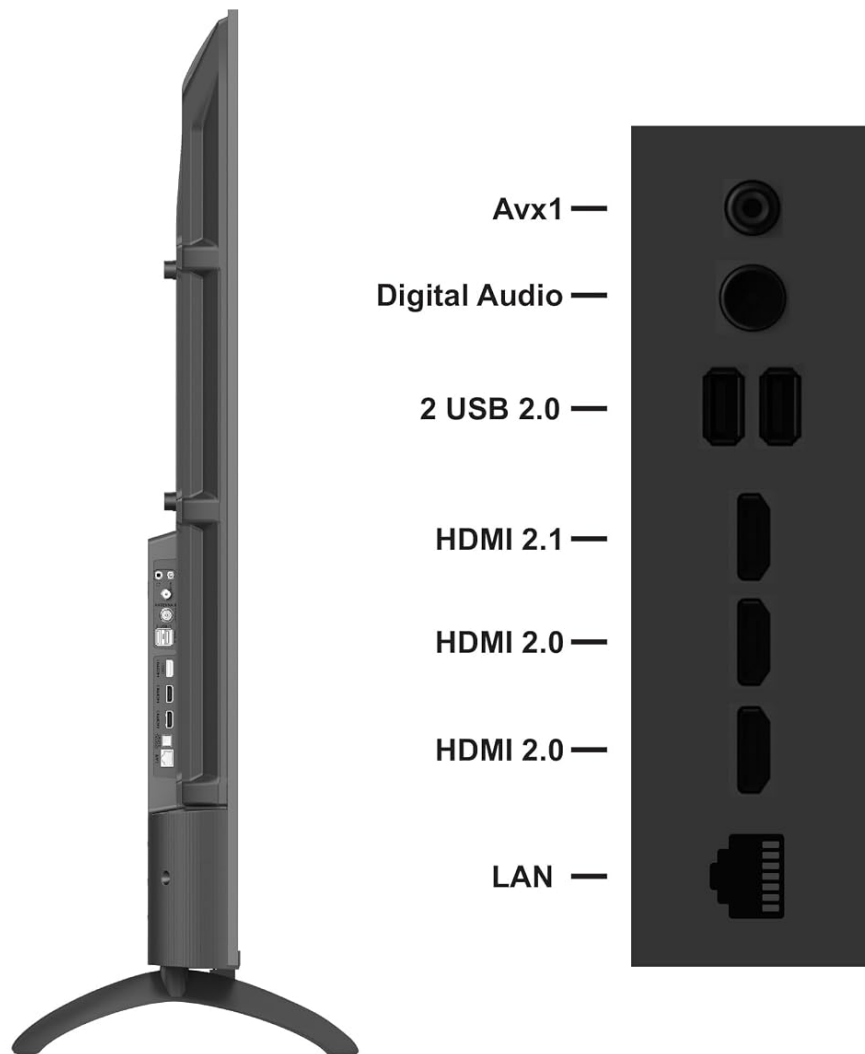


Image: Rear view of the coocaa 65Y74 Pro TV, highlighting the VESA mounting pattern.

3. Connecting Peripherals

Connect your devices to the TV using the available ports.



Image: Side panel connections of the coocaa 65Y74 Pro TV, including HDMI, USB, Digital Audio, and AVx1 ports.

- **HDMI Ports (3 total, including HDMI 2.1 with eARC)** Connect set-top boxes, Blu-ray players, gaming consoles, or soundbars.
- **USB Ports (2 total, USB 2.0):** Connect USB storage devices for media playback.
- **AVx1:** For older analog devices using the provided AV converting cable.
- **Digital Audio Out:** For connecting to external audio systems.
- **LAN Port:** For wired internet connection.

4. Power On and Initial Setup

1. Insert the two AAA batteries into the remote control.
2. Connect the power cord to the TV and then to a power outlet.
3. Press the power button on the remote control or on the TV itself.
4. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or Ethernet), and Google account login.

Restore the wonderful nature

Highlights That Pop with Exceptional Precision

Dolby
Vision

HDR10+

HLG



Image: The coocaa TV remote control, featuring dedicated buttons for popular streaming services and Google Assistant.

OPERATING YOUR TV

1. Basic Functions

- **Power On/Off:** Use the power button on the remote or TV.
- **Volume Control:** Use the Volume Up/Down buttons on the remote.
- **Channel Selection:** Use the Channel Up/Down buttons or the number pad on the remote.
- **Input Source:** Press the "Input" button on the remote to switch between HDMI, AV, and other sources.

2. Smart Google TV Features

Your TV runs on Google TV, providing access to a wide range of applications and smart functionalities.



Image: The Google TV interface, showcasing a selection of available applications.

- **App Access:** Navigate the Google TV home screen to access pre-installed apps like Netflix, YouTube, Prime Video, Zee5, and more. Download additional apps from the Google Play Store.
- **Google Assistant:** Use the dedicated Google Assistant button on your remote to issue voice commands for searching content, controlling smart home devices, and more.
- **Chromecast Built-in:** Cast content directly from your compatible smartphone or tablet to the TV.
- **Display Mirroring:** Mirror your device's screen to the TV for presentations or sharing content.

3. Picture and Sound Settings

Optimize your viewing and listening experience through the TV's settings menu.

Picture Quality

Powerful, Cinematic Audio Experience

 **Dolby**
Atmos

 **30W**
Speaker

 **2.0**
Sound Channel



Image: Visual representation of enhanced picture quality with Dolby Vision, HDR10, and HLG technologies.

- **4K UHD Resolution:** Enjoy crisp, detailed images with 3840 x 2160 resolution.
- **QLED Display:** Experience vibrant colors and improved contrast.
- **HDR Support:** The TV supports Dolby Vision and HDR10 for enhanced brightness, contrast, and color detail in compatible content.
- **HSR 120Hz Refresh Rate:** Provides smoother motion for fast-paced content and gaming.
- **Eye Care Features:** Includes Flicker-Free technology, Night mode, and Automatic Brightness adjustment via an ambient light sensor to reduce eye strain.



Image: Explanation of Eye Care features, including ambient light sensor and flicker reduction.

Audio Quality



Image: Visual representation of the TV's powerful cinematic audio experience with Dolby Atmos and 30W speakers.

- **Dolby Atmos:** Provides immersive, multi-dimensional sound.
- **30 Watts Output:** Powerful built-in box speakers deliver clear surround sound.

MAINTENANCE

1. Cleaning Your TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Do not spray liquid directly onto the screen.
- **Frame and Back Panel:** Use a soft, dry cloth to wipe dust and dirt from the frame and back panel.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.

2. Software Updates

Your Google TV may receive periodic software updates to improve performance and add new features. It is recommended to keep your TV connected to the internet to receive these updates automatically. You can also manually check for updates in the TV's settings menu.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions before contacting customer support.

Problem	Possible Cause	Solution
No power	Power cord disconnected; power outlet issue.	Ensure power cord is securely connected. Test the outlet with another device.
No picture, but sound is present	Incorrect input source; loose HDMI/AV cable.	Press the "Input" button on the remote to select the correct source. Check cable connections.
No sound, but picture is present	Volume muted or too low; external audio system issue.	Increase volume. Check if TV is muted. If using external audio, ensure it's powered on and correctly connected.
Remote control not working	Dead batteries; obstruction; remote not paired.	Replace batteries. Remove any obstructions between remote and TV. Re-pair Bluetooth remote if necessary (refer to Quick Start Guide).
Cannot connect to Wi-Fi	Incorrect password; router issue; TV too far from router.	Verify Wi-Fi password. Restart your router. Move TV closer to router or use a Wi-Fi extender.
Slow performance or app crashes	Too many apps running; low storage; software glitch.	Close unused apps. Clear cache for problematic apps. Restart the TV. Ensure software is updated.

SPECIFICATIONS

Feature	Detail
Brand	coocaa

Feature	Detail
Model Name	65Y74 Pro
Model Number	65Y74Pro
Screen Size	65 Inches (164 cm)
Display Technology	QLED
Resolution	4K UHD (3840 x 2160)
Refresh Rate	120 Hz (HSR)
Operating System	Google TV
Memory (RAM + ROM)	2GB RAM + 32GB Storage
HDR Format Supported	Dolby Vision, HDR10
Audio Output Mode	Surround
Audio Encoding	Dolby Atmos, Dolby Digital Plus
Speaker Output Power	30 Watts (Built-in Box Speakers)
HDMI Ports	3 (including 1x HDMI 2.1 with eARC)
USB Ports	2 (USB 2.0)
Connectivity	Ethernet, HDMI, USB, Wi-Fi (Dual band), Bluetooth (5.0)
Control Method	Remote, Voice (Google Assistant)
Product Dimensions (D x W x H)	8D x 144.5W x 83.8H Centimeters
Item Weight Without Stand	13.8 Kilograms
Power Consumption	250 Watts
Mounting Type	Wall Mount & Table Mount
VESA Mount Standard	400 x 400 mm

WARRANTY INFORMATION

Your coocaa 65Y74 Pro TV comes with a **1-year warranty** provided by the manufacturer from the date of purchase. This is an onsite warranty covering product defects. Please note that delivery damages are not covered under this warranty. To avail warranty service, you will need your purchase invoice. The warranty card is included in the package.

CUSTOMER SUPPORT

For assistance, technical support, or warranty claims, please contact coocaa customer service:

- **Toll-Free Number:** 1800123446666
- When contacting support, please provide your product's model name (65Y74 Pro) and the seller's details as

mentioned on your invoice. The service center will then schedule a convenient slot for service.

Manufacturer: Radiant Appliances And Electronics Private Limited, Survey No. 111, 112,S-2 A 1, Ecity, Fabcity, Maheshwaram Mandal Raviryala Village, Ranga Reddy, Telangana- 501141

Importer/Packer: Skyworth India Electronic Private Limited, Emaar Digital Green, Tower B, 19th Floor, Unit Nos. DG-B-19-016 & DG-B-017, Golf Course Extension Road, Sector 61, Gurgaon, Haryana-122011

© 2026 coocaa. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question