



[Manuals.plus](#) /

› [Fanttik](#) /

› Fanttik W101 4-inch Chainsaw Chain Instruction Manual

## Fanttik W101

# Fanttik W101 4-inch Chainsaw Chain Instruction Manual

Model: W101

## 1. PRODUCT OVERVIEW

The Fanttik W101 4-inch chainsaw chain is an essential replacement component designed for optimal performance with the Fanttik TurboLite W10 APEX External Rotor Brushless Motor Mini Chainsaw. This chain is engineered for durability and efficient cutting, featuring a specialized design that ensures compatibility and superior operation with the specified Fanttik mini chainsaw model.



Figure 1.1: Fanttik W101 4-inch Chainsaw Chains (3-pack).

## 2. SPECIFICATIONS

The Fanttik W101 chainsaw chain is manufactured to precise standards to ensure compatibility and performance.

- **Chain Length:** 4 inches (10 cm)
- **Gauge:** 0.043 inches (1.1 mm)
- **Pitch:** 0.3 inches
- **Drive Links:** 26
- **Material:** Germany steel with heat treatment for toughness and flatness.
- **Rivets:** Hardened and quenched for wear resistance and strength.
- **Cutters:** Japanese chrome-plated technology for enhanced durability and sharpness.
- **Lubrication System:** Built-in oiling system with protective oil for continuous lubrication.

- **Compatibility:** Exclusively designed for Fanttik TurboLite W10 APEX Mini Chainsaw.

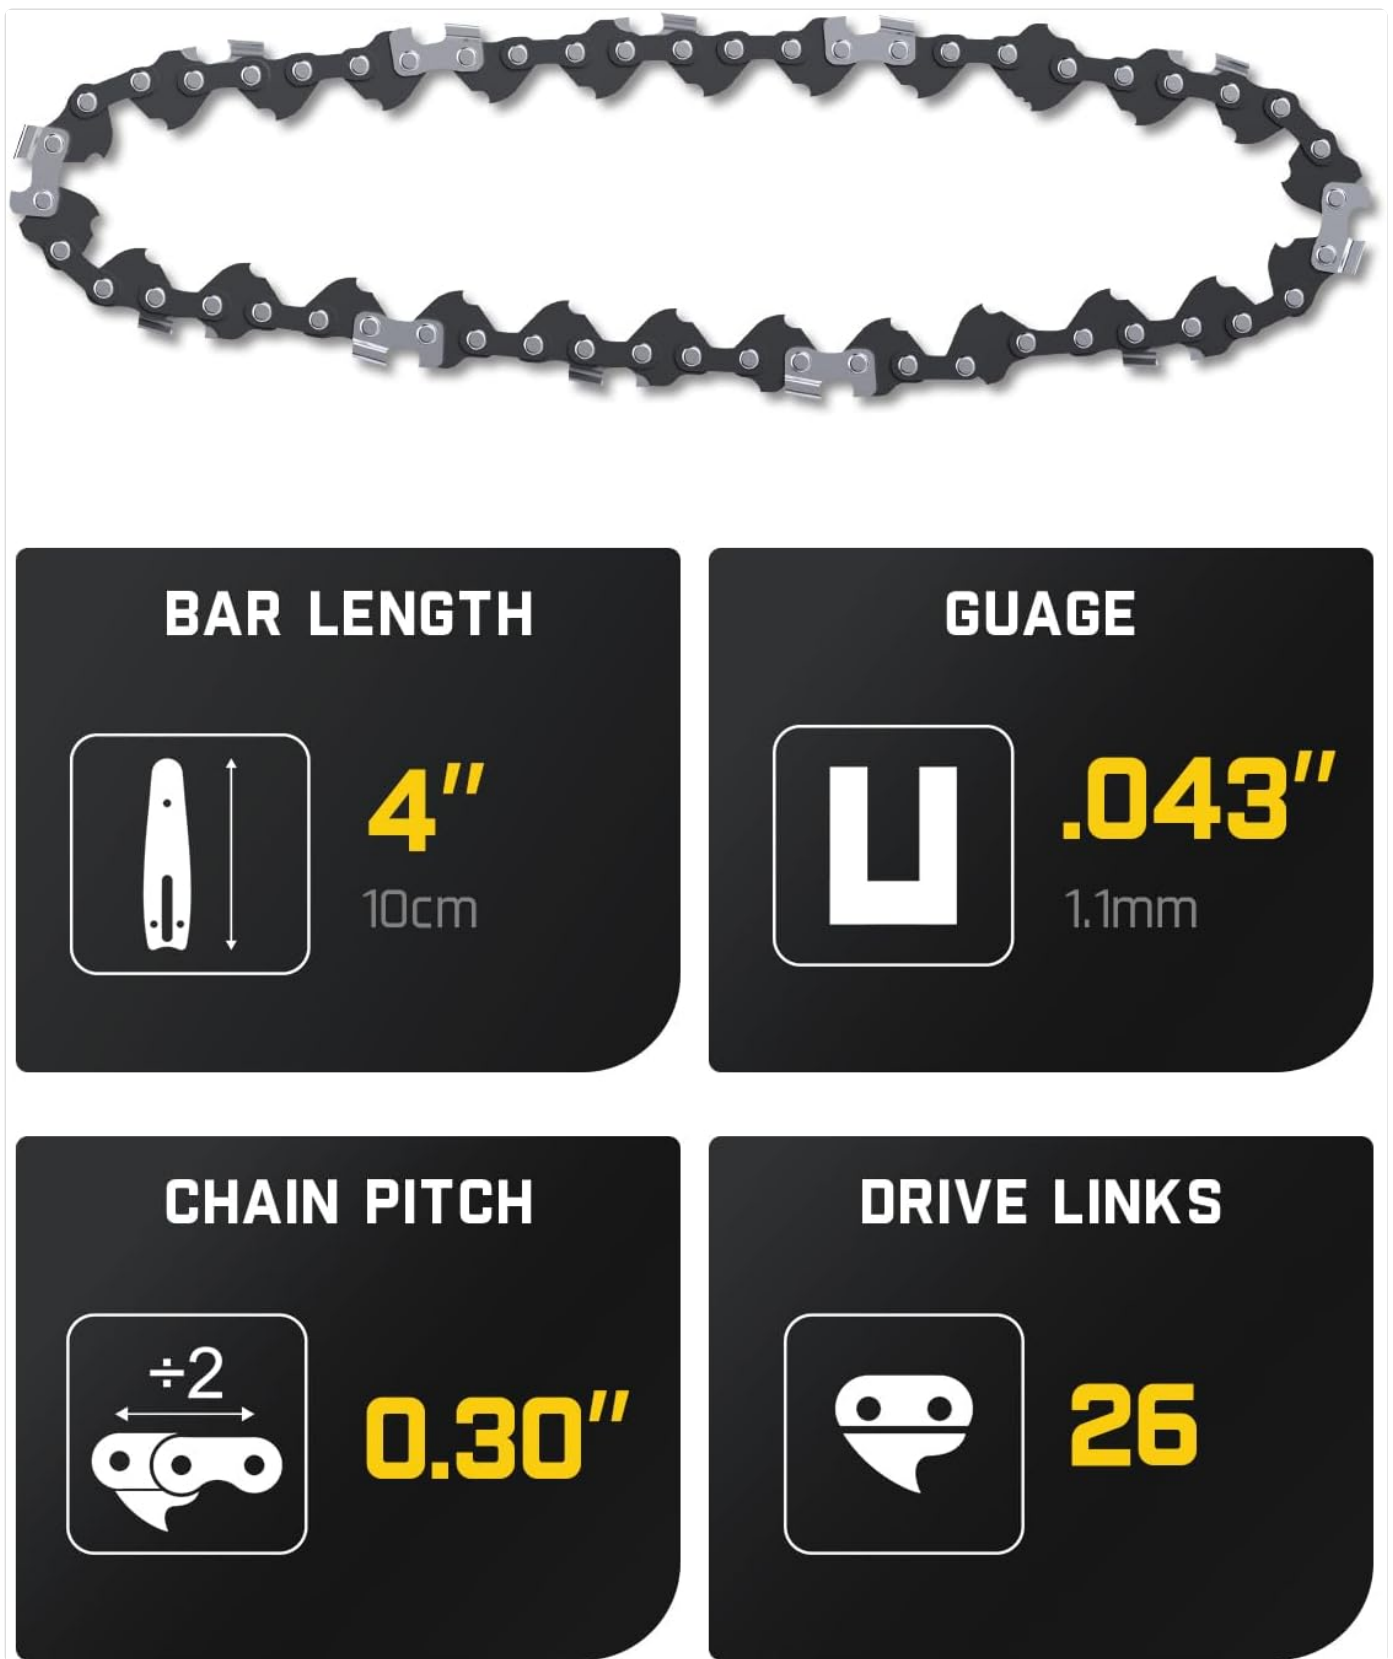


Figure 2.1: Detailed specifications of the Fanttik W101 Chainsaw Chain.

### 3. CHAIN INSTALLATION AND REPLACEMENT

Always ensure the chainsaw is powered off and the battery is removed before attempting any installation or replacement procedures. Wear appropriate safety gloves.

1. **Unscrew the Protective Cover:** Locate and unscrew the protective cover of your Fanttik W10 APEX mini chainsaw.

2. **Assemble the Saw Chain:** Carefully place the new saw chain around the guide bar, ensuring the cutting edges are facing the correct direction for cutting.
3. **Align the Chain with the Sprocket:** Position the chain so it properly engages with the drive sprocket on the chainsaw motor.
4. **Incline Guide Plate:** Align the bottom locating hole of the guide plate with the locating pin on the chainsaw body.
5. **Pull Down Slanted Guide Plate:** Gently pull down the left side of the slanted guide plate to ensure the chain is seated correctly and has proper tension.
6. **Secure the Protective Cover:** Reinstall and securely fasten the protective cover. Verify that the chain tension is correct; the chain should be snug but still able to be pulled around the guide bar by hand.

# HOW TO REPLACE THE CHAIN



Unscrew the protective cover



Assemble the saw chain along



Align the chain with the sprocket



Inclined guide plate, align the bottom locating hole with the I



Pull down the left side of the slanted guide plate



Secure the protective cover

Figure 3.1: Step-by-step guide for replacing the chainsaw chain.

## 4. OPERATING CONSIDERATIONS (WITH FANTTIK W10 APEX MINI CHAINSAW)

While the W101 is a chain, its operation is directly tied to the Fanttik W10 APEX Mini Chainsaw. Ensure you are familiar with the chainsaw's operating instructions before use.

### 4.1 Chainsaw Speed Adjustment

The Fanttik W10 APEX Mini Chainsaw, when equipped with the W101 chain, offers multiple speed modes for various cutting tasks:

- **ECO Mode:** For lighter tasks and extended battery life.
- **REG Mode:** Standard power for general cutting.
- **MAX Mode:** Full power for demanding cuts.

## THREE-SPEED ADJUSTMENT

### ECO MODE



### REG MODE



### MAX MODE



Figure 4.1: Fanttik W10 APEX Mini Chainsaw speed modes in action.

## 4.2 Applications

The Fanttik W101 chain, when used with the compatible mini chainsaw, is suitable for a range of applications:

- Garden Pruning
- Home Improvement tasks
- Outdoor Camping wood preparation
- Yard Trimming

# WIDE APPLICATION



Figure 4.2: Various applications of the Fanttik W10 APEX Mini Chainsaw with W101 chain.

## 5. MAINTENANCE

---

Proper maintenance extends the life and performance of your chainsaw chain. Always ensure the chainsaw is powered off and the battery is removed before performing maintenance.

### 5.1 Lubrication

The Fanttik W101 chain features a built-in oiling system and comes with protective oil. Ensure the chainsaw's oil reservoir (if applicable to the W10 APEX model) is adequately filled with appropriate bar and chain oil to maintain continuous lubrication during operation. This reduces wear and extends service life.

### 5.2 Cleaning

After each use, clean the chain and guide bar to remove sawdust, sap, and debris. A stiff brush and a mild cleaning solution can be used. Ensure the chain is dry before storage.

### 5.3 Sharpening

A sharp chain is crucial for safe and efficient cutting. Sharpen the chain regularly using a suitable round file or a chain sharpener designed for 0.3-inch pitch chains. Refer to the chainsaw's manual for specific sharpening angles and techniques. Replace the chain if it becomes too dull to sharpen effectively or if teeth are damaged.

### 5.4 Chain Tension

Periodically check and adjust chain tension. A properly tensioned chain should be snug against the guide bar but still allow you to pull it around the bar by hand without excessive force. Incorrect tension can lead to premature wear, poor cutting performance, or chain derailment.

## 6. TROUBLESHOOTING

---

This section addresses common issues related to the chainsaw chain. For issues related to the chainsaw motor or battery, refer to the Fanttik W10 APEX Mini Chainsaw manual.

Problem	Possible Cause	Solution
Chain not cutting efficiently or binding	Dull chain, incorrect chain tension, insufficient lubrication, incorrect chain installation.	Sharpen the chain. Adjust chain tension. Check oil reservoir and lubrication system. Reinstall chain correctly.
Chain derails from guide bar	Loose chain tension, worn guide bar, damaged chain links.	Adjust chain tension. Inspect guide bar for wear; replace if necessary. Inspect chain for damage; replace if necessary.
Excessive smoke or heat from chain	Insufficient lubrication, dull chain, improper cutting technique.	Ensure adequate lubrication. Sharpen or replace chain. Review cutting technique.

## 7. WARRANTY AND SUPPORT

---

Specific warranty information for the Fanttik W101 4-inch chainsaw chain is not provided in this document. For details regarding warranty coverage, terms, and conditions, please refer to the official Fanttik website or contact Fanttik customer support directly. For technical support or inquiries, please visit the Fanttik official website or consult the user manual provided with your Fanttik TurboLite W10 APEX Mini Chainsaw.



© 2023 Fanttik. All rights reserved.