

coocaa 55Y74 Pro

Coocaa 55Y74 Pro QLED Ultra Smart Google TV User Manual

Model: 55Y74 Pro

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Coocaa 55Y74 Pro QLED Ultra Smart Google TV. Please read this manual thoroughly before using the product and retain it for future reference. Your Coocaa TV features a durable A+ Grade QLED panel and an ultra-bright screen designed for optimal picture quality.



Figure 1.1: Front view of the Coocaa 55Y74 Pro QLED Ultra Smart Google TV.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage and ensure safe operation:

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Ensure proper grounding for the power cord.
- Avoid placing the TV on unstable surfaces.
- Disconnect the power cord during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- TV Unit (1N)
- Stand Bases (2N)
- Quick Start Guide (1N)
- Warranty Card (1N)
- Remote Control (1N)
- AAA Batteries (2N)
- Power Cord (1N)
- Screws (4N)
- AV Converting Cable (1N)



Figure 3.1: Contents included with your Coocaa 55Y74 Pro TV.

4. SETUP

4.1 Unpacking

Carefully remove the TV and all accessories from the packaging. It is recommended to retain the packaging for future

transport or service needs.

4.2 Stand Installation

If placing the TV on a table, attach the two stand bases to the bottom of the TV using the provided screws. Ensure the stands are securely fastened.

4.3 Wall Mounting

The Coocaa 55Y74 Pro supports wall mounting. A compatible VESA wall mount kit (not included) is required. Follow the instructions provided with your wall mount kit and ensure professional installation for safety.

4.4 Connecting Peripherals

Connect your devices to the TV using the available ports:

- **HDMI Ports:** Connect set-top boxes, Blu-ray players, gaming consoles, or other HDMI-enabled devices. The TV features 3 HDMI ports, including HDMI 2.1 with eARC support.
- **USB Ports:** Connect USB storage devices for media playback. The TV has 2 USB 2.0 ports.
- **Digital Audio Out:** For connecting to external audio systems.
- **LAN Port:** For a wired internet connection.
- **AV Input:** For older devices using composite video and stereo audio.
- **Satellite Port:** For satellite signal input.

CrystalQLED

Diamond-Precision Quantum Nano Coating



Crystal-Clear



Ultra-Tough



Tech-Forward

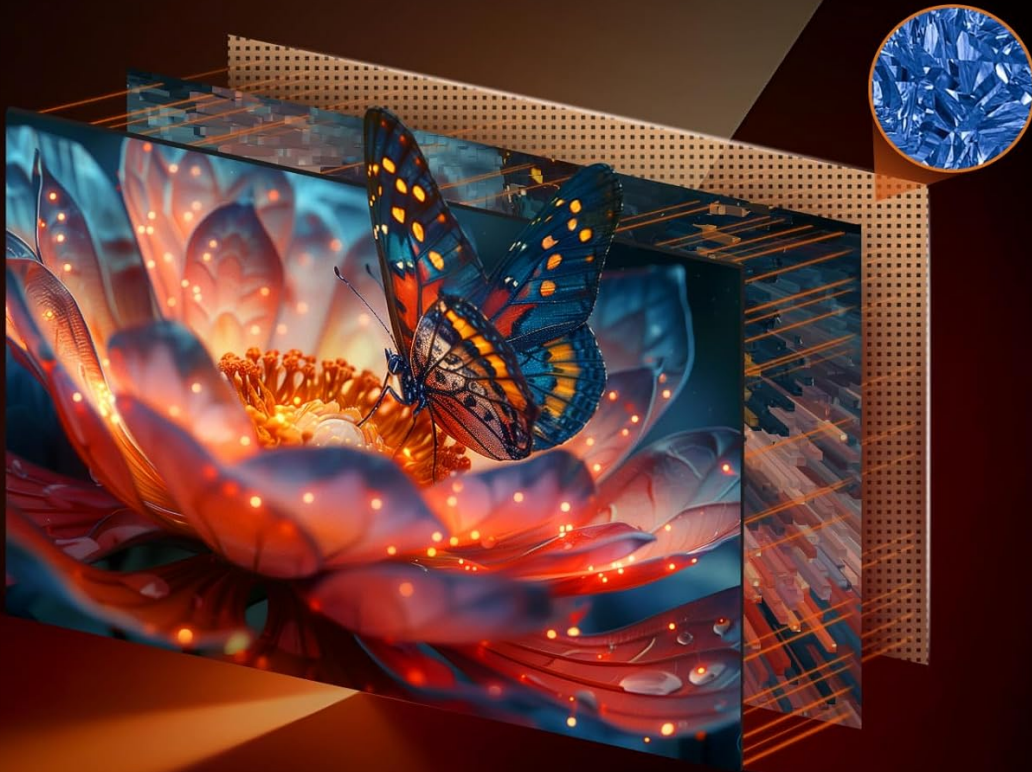 


Figure 4.1: Available connectivity ports on the Coocaa 55Y74 Pro TV.

4.5 Power Connection

Connect the power cord to the TV's power input and then to a suitable electrical outlet. The TV operates on 240 Volts AC.

5. OPERATING

5.1 First Time Setup

Upon first power-on, the TV will guide you through the initial setup process, including language selection, network connection (Wi-Fi or Ethernet), and Google account sign-in for Google TV features.

5.2 Remote Control

Insert the two AAA batteries into the remote control. The remote features dedicated buttons for popular streaming services like Netflix and Prime Video, a navigation key, and a voice assistant button for Google Assistant.

4K Ultra-Clear

The world you see is more beautiful


 4K resolution



Figure 5.1: The Coocaa TV remote control.

5.3 Basic Functions

 
- **Power:** Press the power button on the remote to turn the TV on or off.
- **Volume:** Use the volume up/down buttons to adjust audio levels.
- **Input Selection:** Use the input button to switch between connected devices (HDMI, AV, etc.).

5.4 Smart TV Features (Google TV)


Your Coocaa TV runs on Google TV, providing access to a wide range of applications and features:

- **App Access:** Download and use apps like Netflix, YouTube, Prime Video, Zee5, and Sony LIV from the Google Play Store.
- **Google Assistant:** Use voice commands via the remote control for search, control, and information.
- **Chromecast Built-in:** Cast content from compatible mobile devices directly to your TV.
- **Display Mirroring:** Mirror the screen of compatible devices to the TV.


What's in the box?

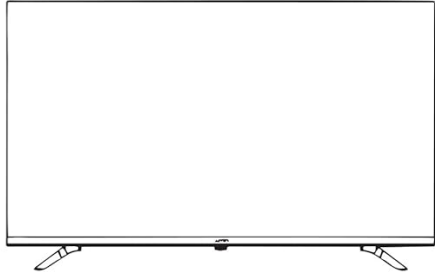


COOCAA Select Series

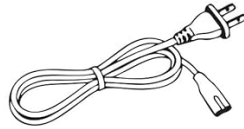 

Power Cable

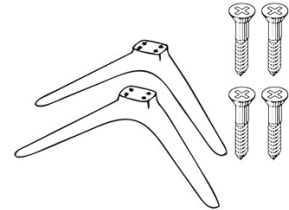 

TV Stands & Screws

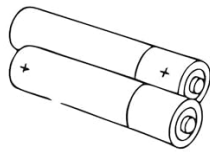 

x2 AAA Batteries



Remote

Figure 5.2: Key smart features of the Coocaa 55Y74 Pro TV.

6. MAINTENANCE

6.1 Cleaning

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- **TV Body:** Wipe the TV frame and back panel with a soft, dry cloth. Avoid abrasive cleaners or solvents.

6.2 Software Updates

Your TV may receive software updates to improve performance and add new features. Ensure your TV is connected to the internet. You can usually check for updates in the TV's settings menu under 'System' or 'About'.

6.3 Storage

If storing the TV for an extended period, disconnect it from power, remove batteries from the remote, and store it in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
No power	Power cord disconnected; Power outlet issue	Check power cord connection; Test power outlet with another device.
No picture, but sound is present	Incorrect input source; Loose HDMI/AV cable	Select correct input source; Reconnect cables securely.
No sound, but picture is present	Volume muted or too low; External audio system issue	Unmute volume or increase level; Check external audio connections.
Remote control not working	Dead batteries; Obstruction; Remote not paired	Replace batteries; Remove obstructions; Re-pair Bluetooth remote (refer to TV settings).
Wi-Fi connection issues	Incorrect password; Router issue; Signal interference	Verify Wi-Fi password; Restart router; Move TV closer to router or use wired connection.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Key technical specifications for the Coocaa 55Y74 Pro QLED Ultra Smart Google TV:

Feature	Specification
Model	55Y74 Pro
Screen Size	55 Inches (138 cm)
Display Technology	QLED, A+ Display Type
Resolution	4K UHD (3840 x 2160 Pixels)
Refresh Rate	HSR 120 Hz
Operating System	Google TV
Processor	A55 Chip
Graphics Coprocessor	Mali G52 MC1
RAM Memory	2 GB
Storage Capacity	32 GB
Audio Output	30 Watts, Dolby Atmos, 2.0 Sound Channel
Connectivity	3 HDMI ports (1x HDMI 2.1 eARC), 2 USB 2.0 ports, Ethernet, Wi-Fi (Dual band), Bluetooth

Feature	Specification
Special Features	Chromecast, Google Voice Assistant, Display Mirroring, Eye Care (Flicker Free, Night Mode, Automatic Brightness)
Product Dimensions (LxWxH)	122.6 x 7.9 x 72 cm
Item Weight	9.4 kg
Power Source	AC 240 Volts
Wattage	120 Watts



Figure 8.1: Dimensions of the Coocaa 55Y74 Pro TV.

9. WARRANTY AND SUPPORT






9.1 Warranty Information

Your Coocaa 55Y74 Pro QLED Ultra Smart Google TV comes with a **1-year warranty** provided by the brand from the date of purchase. To avail warranty services, please retain your purchase invoice and the warranty card.

9.2 Customer Support

For further assistance, technical support, or to access the latest user manual, please visit the official Coocaa brand website. Contact details for customer service can typically be found on the warranty card or the brand's website.

Related Documents - 55Y74 Pro

	<p>coocaa 24CGPF70Z Google TV Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für das coocaa 24CGPF70Z TV-Gerät mit Google TV. Enthält detaillierte Anweisungen zur Einrichtung, Bedienung, Fehlerbehebung und Nutzung von Google TV-Funktionen.</p>
	<p>Coocaa 24CGPF70Z Quick Start Guide</p> <p>A comprehensive quick start guide for the Coocaa 24CGPF70Z portable TV, covering setup, safety precautions, terminal connections, remote control functions, basic operations, troubleshooting, and technical specifications.</p>
	<p>Coocaa S3N/S3U TV Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für Coocaa S3N und S3U TV-Geräte. Enthält Informationen zu Installation, Gebrauch, Sicherheitshinweisen, Einstellungen und Fehlerbehebung.</p>
	<p>Coocaa LED TV S3N Series Quick Start Guide</p> <p>This guide provides instructions for setting up and operating the Coocaa LED TV S3N Series, including safety precautions, remote control functions, terminal connections, troubleshooting, and specifications.</p>
	<p>COOCOA 70S5G LED TV Quick Start Guide</p> <p>Comprehensive quick start guide for the COOCOA 70S5G LED TV, detailing setup, safety, operation, connections, troubleshooting, and specifications. Includes multilingual information and product details.</p>



[Coccaa 43CRUG50Z 4K UHD Smart TV Product Data Sheet](#)

Detailed technical specifications for the Coccaa 43CRUG50Z 4K UHD Smart TV, including display, reception, sound, connectivity, power, and dimensions. Features Roku TV smart platform.