

Portronics Apollo 30 (POR-2737)

Portronics Apollo 30 (POR-2737) Wireless Bluetooth Portable Speaker User Manual

Comprehensive instructions for setup, operation, and maintenance of your Apollo 30 speaker.

1. INTRODUCTION

The Portronics Apollo 30 is a 30W wireless Bluetooth portable speaker designed for high-definition audio playback and karaoke functionality. It features a wireless microphone, RGB LED lighting, and a robust battery for extended playtime. This manual provides detailed instructions to help you maximize your experience with the Apollo 30 speaker.



Image: The Portronics Apollo 30 speaker, showcasing its integrated RGB lighting and accompanying wireless microphone.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Portronics Apollo 30 Party Speaker
- 1 x Wireless Karaoke Microphone
- 1 x USB Type-C Charging Cable
- 1 x AUX Cable
- 1 x User Manual

3. SETUP GUIDE

3.1 Charging the Speaker

1. Locate the Type-C charging port on the speaker.
2. Connect the provided Type-C charging cable to the speaker and a compatible USB power adapter (not included).
3. The LED indicator will show charging status. A full charge typically takes approximately 3-4 hours.

4. Disconnect the charging cable once fully charged to preserve battery life.



Image: Speaker highlighting the Type-C fast charging port and echo control functionality.

3.2 Powering On/Off

- To power on, press and hold the power button located on the top panel of the speaker until the LED lights illuminate.
- To power off, press and hold the power button again until the LED lights turn off.



Image: Detailed view of the speaker's control panel, including the power button and other function keys.

3.3 Initial Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED).
2. On your device (smartphone, tablet, laptop), navigate to the Bluetooth settings.
3. Search for available devices and select "Portronics Apollo 30" from the list.
4. Once paired, the speaker will emit an audible confirmation, and the LED indicator will become solid.

Bluetooth 5.4V Seamless Pairing



Image: The speaker demonstrating seamless Bluetooth 5.4 pairing with a mobile device.

4. OPERATING INSTRUCTIONS

4.1 Audio Playback

- **Bluetooth Mode:** After successful pairing, play audio from your connected device. Use the speaker's volume controls or your device's volume controls to adjust the sound level.
- **USB Playback:** Insert a USB drive containing audio files into the USB port. The speaker will automatically detect and begin playing music.
- **AUX Mode:** Connect an audio source using the provided AUX cable to the AUX input port. The speaker will switch to AUX mode.

4.2 Using the Wireless Karaoke Microphone

1. **Power On Mic:** Press and hold the power button on the microphone to turn it on. It will automatically connect to the Apollo 30 speaker.
2. **Volume Control:** Use the '+' and '-' buttons on the microphone to adjust its volume independently.
3. **Echo Control:** The speaker features an Echo Control function. Use the dedicated echo control buttons on the speaker's top panel to add or reduce echo effects to your vocals.
4. **Voice Changer:** The microphone may include a voice changer feature. Refer to the microphone's specific

instructions for activation and use.



Wireless Karaoke Mic

With Voice Changer

Image: A user demonstrating the wireless karaoke microphone in use.

4.3 RGB LED Light Control

- The Apollo 30 features dynamic RGB LED lights.
- Use the dedicated light control button on the speaker's top panel to cycle through different lighting modes or to turn the lights off.

RGB Ring LED Lights



Image: The speaker displaying its vibrant RGB ring LED lights.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery or no charge.	Charge the speaker using the provided Type-C cable.
No sound from speaker.	Volume too low, incorrect input mode, or device not paired.	Increase volume on both speaker and connected device. Ensure correct input mode (Bluetooth, USB, AUX). Re-pair Bluetooth device.

Problem	Possible Cause	Solution
Bluetooth pairing fails.	Speaker not in pairing mode, device too far, or interference.	Ensure speaker is in pairing mode. Move device closer to speaker. Turn off other Bluetooth devices. Forget "Portronics Apollo 30" on your device and try pairing again.
Microphone not working.	Microphone not powered on, low battery, or out of range.	Ensure microphone is powered on and charged. Move microphone closer to the speaker.
RGB lights not working.	Lights turned off or specific mode selected.	Press the light control button to cycle through modes or turn them on.

7. SPECIFICATIONS

Feature	Detail
Model Name	Apollo 30
Model Number	POR-2737
Output Wattage	30 Watts
Connectivity Technology	Bluetooth V5.4
Compatible Devices	Laptop, Smartphone, Tablet
Audio Input	Wireless Microphone, USB, AUX
Special Features	30W HD Bluetooth Speaker, ECHO Control, Type C Fast Charging, Wireless Karaoke Mic, RGB LED Light
Battery Type	Lithium Polymer (Included)
Playtime	Up to 5 hours
Charging Port	Type-C
Material	ABS Plastic
Product Dimensions	26.5 x 18 x 15 cm
Item Weight	1 kg
Country of Origin	India







8. WARRANTY AND SUPPORT

For warranty information, technical support, or any product-related inquiries, please contact Portronics customer service.

- **Email:** help@portronics.com
- **Phone:** +91 9555-245-245
- **Manufacturer Address:** Portronics Digital Pvt Ltd, First Floor Property No D 8 Upper Basement Sector 8 Noida Uttar Pradesh 201301, India.

Please retain your purchase receipt for warranty claims.

Related Documents - Apollo 30 (POR-2737)

	<p>Portronics POR-1360 Dash TWS Portable Speaker with Karaoke Mic User Manual</p> <p>User manual for the Portronics POR-1360 Dash TWS portable speaker, detailing its features, specifications, operation, and connectivity options for enhanced audio experience with a karaoke microphone.</p>
	<p>Portronics Apollo One Bluetooth Speaker with Wireless Karaoke Mic - User Manual</p> <p>User manual and specifications for the Portronics Apollo One, a portable Bluetooth speaker featuring RGB lighting and a wireless karaoke microphone. Includes setup instructions, packing list, operational details, and support information.</p>
	<p>Portronics Dash POR-1360: TWS Portable Speaker with Karaoke Mic User Manual</p> <p>Comprehensive user manual for the Portronics Dash POR-1360 TWS portable speaker with karaoke microphone. Details features, specifications, remote control functions, operational diagrams, and FCC compliance.</p>
	<p>Portronics DASH 10 50W Wireless Party Speaker with Dual Karaoke Mic User Manual</p> <p>User manual for the Portronics DASH 10, a 50W wireless party speaker with dual wireless karaoke microphones. Features include Bluetooth 5.3, 4-6 hours playback, USB/TF/AUX playback, and LED lightshow.</p>
	<p>Portronics Nebula X Party Speaker User Manual</p> <p>User manual for the Portronics Nebula X Party Speaker with Wireless Karaoke Mic, detailing functions, connectivity, controls, and charging.</p>
	<p>Portronics Adapto 62 POR-1062 USB Wall Adapter User Manual</p> <p>User manual for the Portronics Adapto 62 POR-1062, a 2.4A fast-charging single USB wall adapter. Features intelligent protection, wide compatibility, and portable design for iOS and Android devices.</p>