

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [whall](#) /

> [WHALL Touch Screen Toaster 2 Slice Instruction Manual KST076BU](#)

whall KST076BU

WHALL Touch Screen Toaster 2 Slice - Model KST076BU

Instruction Manual

[Instructions](#) [Safety Instructions](#) [Maintenance](#) [Product Overview](#) [Troubleshooting](#) [Setup](#) [Specifications](#) [Operating](#) [Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the WHALL Touch Screen Toaster. Retain this manual for future reference.

- **Electrical Safety:** Ensure the toaster is connected to a grounded power outlet. Do not immerse the toaster, cord, or plug in water or other liquids. Do not operate with a damaged cord or plug.
- **Heat Warning:** The exterior surfaces of the toaster, especially the sides, become very hot during operation. Avoid touching hot surfaces. Use handles or knobs.
- **Fire Hazard:** Never leave the toaster unattended while in use. Do not place bread or other items too close to the heating elements. Do not toast items with runny fillings or glazes. Remove any food that may become lodged in the slots.
- **Proper Use:** Only use the toaster for toasting bread products. Do not insert metal objects into the toaster slots. Do not use the toaster in damp or wet environments.
- **Children:** This appliance is not intended for use by children. Keep the toaster and its cord out of reach of children.
- **Cleaning:** Always unplug the toaster and allow it to cool completely before cleaning.

2. PRODUCT OVERVIEW

The WHALL Touch Screen Toaster KST076BU is designed for efficient and customizable toasting. It features a digital interface for easy control and various settings to suit different bread types and preferences.

Key Features:

- **Touch Screen Interface:** A large color LED display with intuitive controls for selecting bread type and shade.
- **1.5-inch Wide Slots:** Accommodates various bread sizes, including bagels and thicker slices.
- **6 Shade Settings:** Allows for precise browning control from light to dark.
- **6 Bread Types:** Dedicated settings for Bread, Bagel, Pastry, Waffle, English Muffin, and Grain.

- **Memory Function:** Remembers your last selected settings for convenience.
- **Countdown Timer:** Displays the remaining toasting time.
- **Auto Shut-off:** Enhances safety by automatically turning off the toaster after use.
- **Removable Crumb Tray:** Simplifies cleaning and maintenance.
- **Cord Storage:** Integrated cord wrap for neat storage.

Components:



Image: Front view of the WHALL Touch Screen Toaster, highlighting the display area and touch area for controls.

The toaster features a sleek brushed stainless steel body with a prominent touch screen on the front. The touch screen is divided into a display area showing bread types and shade levels, and a touch area for selecting functions and adjusting settings. A high-lift lever is located on the side for easy retrieval of toasted items.



Image: Detailed view of the toaster's display area, touchscreen controls, and brushed stainless steel exterior.



Image: The WHALL Toaster with its dimensions indicated: 11.02 inches deep, 11.02 inches wide, and 7.09 inches high. The slots are 1.5 inches wide.

3. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, heat-resistant, and dry surface, away from walls, curtains, and other heat-sensitive materials. Ensure adequate ventilation around the toaster.
3. **Crumb Tray:** Ensure the removable crumb tray is correctly inserted at the bottom of the toaster.
4. **Cord Management:** Unwind the power cord to the required length. The base of the toaster includes a cord wrap for convenient storage of excess cord.
5. **Initial Use:** Before first use, operate the toaster without bread on the highest shade setting (Level 6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Allow the toaster to cool completely.

4. OPERATING INSTRUCTIONS

Basic Toasting:

1. **Insert Bread:** Place slices of bread into the toaster slots.
2. **Select Bread Type:** On the touch screen, press the icon corresponding to your bread type (e.g., Bread, Bagel, Pastry).
3. **Adjust Shade:** Use the "<<" and ">>" arrows to select your desired shade level from 1 (lightest) to 6 (darkest). The display will show the selected shade.
4. **Lower Lever:** Push the toast lever down until it locks into place. The toaster will begin the toasting cycle, and the countdown timer will appear on the display.
5. **Completion:** Once the toasting cycle is complete, the toast will automatically pop up.



Image: Step-by-step guide for operating the toaster: 1. Insert bread, 2. Select bread type and shade, 3. Lower the lever, 4. Enjoy toasted bread.

Special Functions:

- **Defrost:** For frozen bread products. After selecting the bread type and shade, press the **DEFROST** button. This adds extra time to the toasting cycle to thaw and then toast the item.
- **Reheat:** To warm up already toasted bread without further browning. After inserting the bread, press the **REHEAT** button. This function typically runs for 30 seconds.
- **Cancel:** To stop the toasting cycle at any time, press the **CANCEL** button. The toast will immediately pop up.
- **Mute Function:** To mute the toaster's sound, long press the **CANCEL** button for 2 seconds.



Image: The toaster's control panel highlighting the Defrost, Bread Type, Reheat, and Cancel functions with brief descriptions.



Image: A visual representation of the Reheat function, showing bread before and after a short reheating cycle without additional browning.

Bread Type and Shade Settings:

The toaster offers 6 distinct bread type settings and 6 shade levels, providing 36 possible combinations for optimal toasting results.



Image: The toaster's display showing various bread types (Bread, Bagel, Pastry, Waffle, English Muffin, Grain) and 6 shade levels from light (Level 1) to dark (Level 6).

Video Demonstration:

Your browser does not support the video tag.

Video: A demonstration of the WHALL Touch Screen Toaster's features, including wide slots, display area, touch controls, 6 bread types, 6 shade settings, digital countdown, and removable crumb tray. This video illustrates the basic operation and key functionalities.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Empty Crumb Tray:**
 - Slide out the removable crumb tray located at the bottom of the toaster.
 - Discard accumulated crumbs.
 - Wipe the tray clean with a damp cloth and dry thoroughly before reinserting.
 - Ensure the crumb tray is fully inserted before using the toaster.
3. **Exterior Cleaning:**
 - Wipe the exterior surfaces with a soft, damp cloth.
 - For stubborn marks, use a mild non-abrasive cleaner.
 - Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
 - Ensure the toaster is completely dry before plugging it back in.
4. **Interior Cleaning:** Do not attempt to clean the interior of the toaster or heating elements. If food becomes lodged, unplug the toaster, allow it to cool, and carefully invert it to dislodge the food.



Image: Features that facilitate easy cleaning and storage: removable crumb tray, built-in cord wrap, extra-wide 1.5-inch slots, and an extra-lift lever.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your home's circuit breaker.
Toast does not pop up.	Lever not fully depressed; mechanical issue.	Ensure the toast lever is pushed down until it locks. If the issue persists, unplug and contact support.
Toast is too light or too dark.	Incorrect shade setting selected.	Adjust the shade setting using the "<<" and ">>" arrows. Start with a lower setting and increase as needed.
Uneven toasting.	Bread slices are too thick or unevenly cut; crumb tray is full.	Ensure bread slices fit well within the slots. Empty and clean the crumb tray.
Smoke or burning smell.	Crumbs accumulated in the toaster; food lodged in slots; initial burn-off.	Immediately press CANCEL and unplug. Allow to cool, then clean the crumb tray. Carefully remove any lodged food. If it's the first use, a slight odor is normal.

7. SPECIFICATIONS

- **Model Number:** KST076BU
- **Brand:** WHALL
- **Color:** Platinum
- **Number of Slices:** 2
- **Wattage:** 1500 watts
- **Product Dimensions:** 11.02"D x 11.02"W x 7.09"H (28 x 28 x 18 cm)
- **Item Weight:** 4.16 pounds (1.89 kg)

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or contact WHALL customer service directly. Contact details are typically available on the manufacturer's website or product packaging.

Please have your model number (KST076BU) and purchase date available when contacting support.

