



Manuals.plus /

› Soobaby /

› Soobaby Convertible 5-in-1 High Chair Instruction Manual (Model B0FVLQCJ9K)

Soobaby B0FVLQCJ9K

Soobaby Convertible 5-in-1 High Chair Instruction Manual

Model: B0FVLQCJ9K

1. INTRODUCTION

Thank you for choosing the Soobaby Convertible 5-in-1 High Chair. This product is designed to adapt to your child's growth, offering multiple configurations from infancy through childhood and beyond. Please read this manual carefully before assembly and use to ensure safe and proper operation.

The Soobaby High Chair transforms into five different modes:

1. Infant High Chair with Tray
2. Toddler High Chair (without tray, at table)
3. Booster Seat
4. Youth Chair
5. Adult Stool

2. SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always secure your child in the restraint system. The harness is essential for safety.
- Always use the chair on a flat, level surface.
- Never leave child unattended.
- Do not use the product if any components are broken or missing.
- Prevent serious injury from falling or sliding out. Always use the restraint system.
- The maximum weight recommendation for the high chair mode is 200 pounds (90.7 kg). For adult stool mode, the maximum load-bearing capacity is up to 240 lbs (108.8 kg).
- Ensure all parts are securely fastened before each use.
- Keep children away from the product during assembly and disassembly.

BUILT TO LAST A LIFETIME:

Supports 250lbs weight capacity,
effortlessly transitioning from
childhood to adulthood.

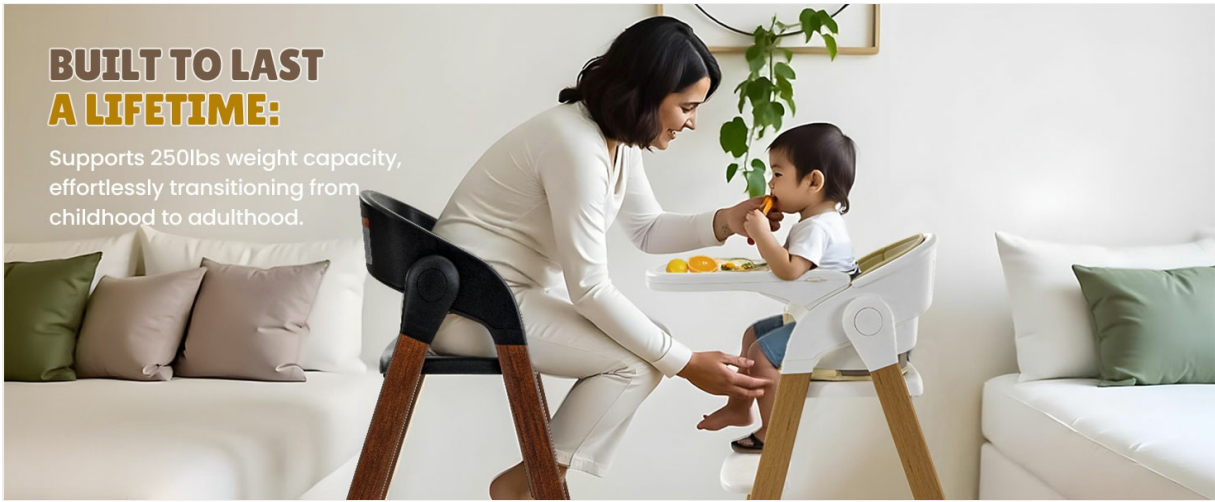


Image: The high chair features a 3-point safety belt for secure child restraint, providing 360-degree protection.

3. PARTS LIST

Verify that all components are present before beginning assembly. If any parts are missing or damaged, do not use the product and contact customer support.



Image: Included components: The main chair structure, a detachable feeding tray, and a comfortable cushion with an integrated 3-point harness.

- Chair Frame (with legs and footrest attachment points)
- Seat Unit
- Cushion with 3-point Harness
- Detachable Tray
- Footrest (adjustable)
- Assembly Hardware (screws, tools if required)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly typically takes an adult approximately 10-15 minutes. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.

2. **Attach Legs to Seat Unit:** Align the chair legs with the designated slots on the underside of the seat unit. Ensure they click securely into place.
3. **Install Footrest:** Slide the footrest into the desired height position on the chair legs. Ensure it locks firmly. The footrest is adjustable with 5 positions.
4. **Place Cushion:** Position the cushion onto the seat unit, ensuring the harness straps pass through the appropriate openings.
5. **Attach Tray:** Slide the detachable tray onto the front of the seat unit until it locks into place.
6. **Final Check:** Before first use, ensure all connections are secure and the chair is stable.



Image: The footrest can be adjusted to five different levels to ensure proper support as your child grows.

5. OPERATING INSTRUCTIONS

5.1. Adjusting the Footrest

The footrest has five adjustable positions to accommodate your child's height and ensure ergonomic support. To adjust, press the release buttons on both sides of the footrest and slide it up or down to the desired position. Ensure it clicks into place securely.



Image: The footrest is adjustable and removable, supporting comfortable seating for children from 6 months to 4 years old, and can be removed for adult use.

5.2. Using the 3-Point Harness

Always secure your child with the 3-point harness. Place the child in the seat, bring the waist straps around

the child's waist, and connect them to the crotch strap buckle. Adjust the straps to a snug fit, ensuring the child cannot slip out.

5.3. Detaching and Attaching the Tray

To detach the tray, locate the release levers or buttons on the underside or sides of the tray. Press them and pull the tray forward and away from the seat. To reattach, align the tray with the guides on the seat and push it back until it clicks securely into place.

5.4. Converting Chair Modes

The Soobaby High Chair is designed for versatility. To convert between modes (e.g., from high chair to youth chair or adult stool), you may need to remove the tray, cushion, and/or adjust the leg height by detaching and reattaching leg segments. Refer to the visual guides for specific configurations.



Image: The high chair adapts for use from 6 months to 2 years old (high chair), over 2 years old (toddler chair), over 4 years old (youth chair), and as an adult stool, supporting up to 240 lbs.



Image: The high chair seamlessly integrates into family dining, converting to a youth chair for older children.

5.5. Folding for Storage

For convenient storage, the high chair features a one-click folding mechanism. Locate the folding release button, typically on the side or back of the seat unit. Press the button and fold the chair as instructed. Ensure it locks in the folded position before moving.



Image: The high chair can be expanded for use, folded with a one-click mechanism, and retracted for compact storage.

6. CARE AND MAINTENANCE

Regular cleaning and maintenance will extend the life of your Soobaby High Chair.

- **Tray:** The detachable tray is dishwasher safe for thorough cleaning. For quick clean-ups, wipe with a damp cloth and mild soap.
- **Cushion:** The seat cushion is waterproof and designed for easy cleaning. It can be wiped clean with a damp cloth. For deeper cleaning, the cushion is machine-washable. Refer to the care label for specific washing instructions.
- **Frame:** Wipe the chair frame and legs with a damp cloth and mild soap. Dry thoroughly.
- **Harness:** Clean the harness straps with a damp cloth and mild soap. Allow to air dry completely.
- **Storage:** Store the high chair in a clean, dry place away from direct sunlight when not in use.



Image: Cleaning is effortless with a dishwasher-safe tray, wipe-clean surfaces, and a machine-washable cushion.

7. TROUBLESHOOTING

If you encounter any issues with your Soobaby High Chair, please refer to these common solutions:

- **Chair is unstable:** Ensure all leg connections are fully engaged and tightened. Check that the chair is on a flat, level surface.
- **Tray not attaching/detaching smoothly:** Verify that the release levers/buttons are fully pressed.

Check for any food debris or obstructions in the tray guides.

- **Harness not securing child:** Ensure straps are properly threaded through the buckle and adjusted snugly. The harness should be tight enough so that only one finger can fit between the strap and your child.
- **Difficulty folding:** Ensure the folding mechanism is fully disengaged and no parts are obstructing the folding path.

If the problem persists, please contact Soobaby customer support.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	25"D x 25"W x 25"H (approximate)
Item Weight	22 pounds (approximate)
Material Composition	Alloy frame, plastic components, fabric cushion
Maximum Weight Recommendation (High Chair)	200 Pounds (90.7 kg)
Maximum Load-Bearing (Adult Stool)	240 Pounds (108.8 kg)
Age Range (Description)	Baby to Adult (multi-stage)
Portability	Yes, foldable design
Batteries Required	No

9. WARRANTY AND SUPPORT

Soobaby is committed to providing high-quality products. For warranty information, product support, or to report missing/damaged parts, please contact Soobaby customer service directly.

Please have your model number (B0FVLQCJ9K) and purchase date available when contacting support.

Contact Information:

- Refer to your product packaging or the retailer's website for the most current contact details for Soobaby customer service.