

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [EVVO](#) /
- › [EVVO Nova V0423 Washer Dryer \(8kg Wash / 6kg Dry\) User Manual](#)

EVVO V0423

EVVO Nova V0423 Washer Dryer (8kg Wash / 6kg Dry) User Manual

Model: V0423 | Brand: EVVO

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your EVVO Nova V0423 washer dryer. Please read it thoroughly before installation and use, and keep it for future reference. This appliance combines washing and drying functions in a single unit, designed for energy efficiency and convenience.



Figure 1: EVVO Nova V0423 Washer Dryer (White Model)

2. SAFETY INFORMATION

2.1 General Safety Precautions

- Ensure the appliance is properly grounded and connected to a 220V power supply.
- Do not allow children to play with or operate the appliance.
- Keep packaging materials out of reach of children to prevent suffocation.
- Do not install the appliance in areas exposed to direct sunlight or extreme temperatures.
- Never attempt to repair the appliance yourself. Contact qualified service personnel.
- Always unplug the appliance before cleaning or maintenance.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. It is crucial to remove the transport bolts located at the rear of the machine before operation. Failure to do so will cause severe vibration and damage.

3.2 Location

Place the washer dryer on a firm, level surface. Ensure there is adequate ventilation around the appliance. Avoid installing it in damp environments or near heat sources.

3.3 Leveling the Appliance

Adjust the leveling feet at the bottom of the appliance to ensure it is perfectly stable and balanced. This prevents excessive noise and vibration during operation.

3.4 Water Connection

Connect the cold water inlet hose to a suitable water tap. Ensure all connections are tight to prevent leaks. Do not reuse old hoses.

3.5 Drain Connection

Connect the drain hose to a standpipe or a sink, ensuring it is securely fastened and positioned to allow proper drainage.

3.6 Electrical Connection

Plug the power cord into a grounded electrical outlet. Verify that the voltage matches the appliance's requirements (220V). Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a central program dial, a digital display, and touch-sensitive buttons for various functions. The display shows program duration, spin speed, and other indicators.

4.2 Loading Laundry

Open the door and load your laundry into the drum. Do not exceed the maximum load capacity (8kg for wash, 6kg for dry). For optimal results, avoid overloading. The appliance features a function to add forgotten items during the initial stages of a cycle.

4.3 Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and softener to its designated compartment. Refer to your detergent packaging for recommended dosages.

4.4 Selecting a Program

Turn the central program dial to select the desired wash or wash & dry cycle. The digital display will show the estimated duration and default settings for the selected program.

Available Programs:

- **Favorite:** Customizable program.
- **Cotton:** For cotton items.

- **Mix:** For mixed fabric loads.
- **Baby Care:** Gentle wash for baby clothes.
- **Wool:** Specific program for woolens.
- **Auto Clean:** Drum cleaning cycle.
- **Spin:** For spinning only.
- **15'/1h WD:** Quick wash and dry in 1 hour.
- **Steam:** Steam wash function.
- **ECO 40-60:** Energy-efficient program for 40-60°C.
- **20°C:** Low-temperature wash.
- **Wash and Dry:** Combined wash and dry cycle.
- **Auto Dry:** Automatic drying based on load.
- **Time Dry:** User-defined drying time.

4.5 Special Functions

- **Steam Wash:** This function uses steam to sterilize garments, eliminate odors, remove germs, and reduce wrinkles, resulting in softer fabrics.
- **STAIN MASTER Technology:** Designed to effectively tackle various types of stains, from food to cosmetic marks, ensuring a thorough clean.
- **Smart Load:** The appliance automatically adjusts wash time and resource consumption (water, energy) based on the detected laundry load, optimizing efficiency.
- **Turbo Function:** Activates a rapid wash cycle, significantly reducing the overall program duration for lightly soiled items.
- **Add Forgotten Items:** Allows you to pause the cycle and add any laundry items that were missed at the beginning of the wash.

Your browser does not support the video tag.

Video: Overview of EVVO Nova Washer Dryer features, including control panel, detergent drawer, and drum.

5. MAINTENANCE AND CARE

5.1 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer to prevent residue buildup and mold. Rinse it under running water and dry thoroughly before reinserting.

5.2 Cleaning the Drum (Auto Clean)

Use the dedicated "Auto Clean" program periodically to clean the interior of the drum. This helps remove detergent residues and maintain hygiene. Do not add laundry during this cycle.

5.3 Cleaning the Pump Filter

The pump filter should be cleaned regularly to prevent blockages and ensure efficient drainage. Refer to the diagram in your full manual for the exact location and procedure.

5.4 Cleaning the Exterior

Wipe the exterior surfaces of the appliance with a soft, damp cloth. Avoid using abrasive cleaners or solvents that

could damage the finish.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected.	Check power cord and circuit breaker; Ensure door is securely latched; Select a program and press Start.
Water leakage	Loose hose connections; Detergent drawer overflowing.	Tighten water inlet/drain hoses; Do not overfill detergent drawer.
Excessive vibration or noise	Transport bolts not removed; Appliance not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry evenly in the drum.
Clothes not drying properly	Overloaded drum; Incorrect drying program selected; Lint filter blocked.	Reduce load size; Select appropriate drying program; Clean the lint filter.

7. SPECIFICATIONS

7.1 Technical Data

- **Model:** V0423
- **Brand:** EVVO
- **Type:** Washer-Dryer
- **Wash Capacity:** 8 kg
- **Dry Capacity:** 6 kg
- **Color:** White
- **Dimensions (Height x Width x Depth):** 85 cm x 60 cm x 48 cm
- **Weight:** 65.4 kg
- **Maximum Spin Speed:** 1400 rpm
- **Energy Class:** A
- **Voltage:** 220 Volts
- **Annual Energy Consumption (100 cycles):** 307 kWh
- **Special Features:** Inverter Motor, Steam Wash, STAIN MASTER Technology, Smart Load, Child Lock, Adjustable Leveling Feet, ePROTECT Diamond Drum.
- **Included Components:** Power cable, Filling hose.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This EVVO appliance is covered by a three-year manufacturer's warranty. Please retain your proof of purchase for any warranty claims. The availability of spare parts in the EU is guaranteed for 10 years.

8.2 Customer Support

For technical assistance, spare parts, or service inquiries, please contact EVVO customer support. You can find detailed contact information by visiting the official EVVO store page:

[EVVO Official Store](#)