

[Manuals.plus](#) /

› [Korser](#) /

› Korser 89-inch 3-Seater Sofa Couch Instruction Manual

## Korser LSAL-5289GREY

# Korser 89-inch 3-Seater Sofa Couch Instruction Manual

Model: LSAL-5289GREY

## INTRODUCTION

Thank you for choosing the Korser 89-inch 3-Seater Sofa Couch. This manual provides essential information for the safe assembly, operation, and maintenance of your new sofa. Please read these instructions carefully before beginning assembly and retain them for future reference.

The Korser 3-seater sofa is designed for comfort and versatility, featuring deep seating, chenille fabric, and a modern aesthetic suitable for various living spaces.



Image: The Korser 89-inch 3-Seater Sofa Couch, showcasing its design and size in a living room environment.

## SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the sofa on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly, as this may damage the material.
- Keep small parts away from children during assembly to avoid choking hazards.

- Do not stand on the sofa or use it as a step stool.
- Distribute weight evenly across the sofa. The maximum weight limit is 900 pounds.
- Keep the sofa away from direct heat sources and prolonged sunlight to prevent fading or damage to the fabric.

## PACKAGE CONTENTS

Verify that all the following components are included in your package:

- Sofa Frame Components
- Seat Cushions (3)
- Back Cushions (3)
- Throw Pillows (2)
- Hardware Pack (screws, bolts, tools)
- Printed Instruction Manual

## SETUP AND ASSEMBLY

Assembly of your Korser sofa requires some time and care. Follow the printed instructions included in your package. For visual guidance, a step-by-step video guide is provided below.

After unpacking, allow the cushions 48–72 hours to fully expand. Gently patting and fluffing them will help restore their ideal shape and supportive feel.

# 89" Width Sofa couch



Image: Sofa dimensions (89" W x 35" D x 35" H) and key features like easy assembly and solid frame.

## Assembly Video Guide

Your browser does not support the video tag.

Video: A detailed installation guide demonstrating the assembly process for the Korser 3-seater sofa.

## OPERATING AND USAGE

The Korser sofa is designed for deep comfort and versatile use in various settings. Its expansive 24-inch seat depth allows for comfortable lounging, sitting, or lying down.

- **Deep Seating:** Enjoy the generous 24-inch seat depth for enhanced relaxation.
- **Ergonomic Comfort:** High-resilience foam cushions conform to your body for supportive comfort.
- **Smart Details:** Utilize the convenient side pockets for storing remotes or small items. The two included throw pillows offer customizable support.



Image: A person comfortably stretched out on the sofa, illustrating the 24-inch deep seating feature.



Image: Detail of the sofa's wide armrest with a side pocket for storage and an extra throw pillow.

## Product Overview Video

Your browser does not support the video tag.

Video: A general overview of the Korser 3-seater couch, demonstrating its features and suitability for various activities.

## MAINTENANCE

To ensure the longevity and appearance of your Korser sofa, follow these maintenance guidelines:

- **Cleaning Fabric:** The sofa is upholstered in premium, non-pilling chenille fabric. For general cleaning, vacuum regularly using a soft brush attachment to remove dust and debris.
- **Removable Covers:** The pillow covers are removable and machine washable. Always follow the care instructions on the label to prevent shrinkage or damage.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Avoid rubbing, which can spread the stain. For stubborn stains, use a mild fabric cleaner suitable for chenille, testing on an inconspicuous area first.

- **Cushion Care:** Periodically fluff and rotate cushions to maintain their shape and even out wear.

 


Image: Detail showing the removable cushion cover with a zipper, facilitating easy cleaning and maintenance.

## TROUBLESHOOTING

If you encounter any issues with your Korser sofa, consider the following common solutions:

- **Wobbly Frame:** Check all bolts and screws to ensure they are securely tightened. Avoid overtightening.
- **Cushions Not Fully Expanded:** Allow up to 72 hours for cushions to fully expand after unpacking. Fluffing and patting them can help accelerate this process.
- **Fabric Stains:** Refer to the "Maintenance" section for spot cleaning instructions.
- **Squeaking Noises:** Ensure all connections are tight. If the issue persists, disassemble and reassemble the affected section, ensuring proper alignment of all parts.

If these steps do not resolve the issue, please contact customer support for further assistance.

## SPECIFICATIONS

| Feature                        | Detail                                                    |
|--------------------------------|-----------------------------------------------------------|
| Brand                          | Korser                                                    |
| Model Number                   | LSAL-5289GREY                                             |
| Product Dimensions (D x W x H) | 35"D x 89"W x 35"H                                        |
| Seat Depth                     | 24 inches                                                 |
| Seat Height                    | 16.5 inches                                               |
| Weight Limit                   | 900 pounds                                                |
| Seating Capacity               | 3                                                         |
| Color                          | Grey                                                      |
| Upholstery Fabric Type         | Chenille (Non-Pilling)                                    |
| Frame Material Type            | Iron                                                      |
| Seat Fill Material             | High Density Foam                                         |
| Included Components            | Throw Pillow, Hardware, Instructions                      |
| Special Features               | Chenille Fabric, Deep Seat, Removable Cover, Wide Armrest |

## WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation provided at the time of purchase or contact your retailer.

If you have any questions during setup, operation, or require assistance with your Korser sofa, our customer support team is available to help. Please have your model number (LSAL-5289GREY) and purchase details ready when contacting

support.  
You can typically find contact information for customer support on the retailer's website or within your purchase confirmation emails.

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question