

YKYI GYSQ001

YKYI GYSQ001 Cordless Pressure Washer Instruction Manual

Model: GYSQ001

1. INTRODUCTION

Thank you for purchasing the YKYI GYSQ001 Cordless Pressure Washer. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read this manual thoroughly before using the product and retain it for future reference.

The YKYI GYSQ001 is a battery-powered, portable pressure washer designed for various cleaning tasks, including car washing, garden cleaning, and patio maintenance. It features a 6-in-1 nozzle and a 24FT high-elastic hose for versatile use.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Personal Safety:** Always wear appropriate personal protective equipment (PPE) such as safety glasses, gloves, and hearing protection when operating the pressure washer. Do not direct the water jet at people, pets, or electrical equipment.
- **Electrical Safety:** Ensure the battery pack is fully charged before use. Do not use the pressure washer in wet conditions or near flammable liquids or gases. Keep the charging port dry.
- **Product Use and Care:** Do not operate the pressure washer if any parts are damaged. Use only original YKYI accessories and replacement parts. Store the pressure washer in a dry, secure place, out of reach of children.
- **Water Source:** Ensure the water source is clean and free of debris to prevent damage to the pump. Do not use hot water.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact YKYI

customer support.

- YKYI GYSQ001 Cordless Pressure Washer Unit
- Rechargeable Battery Pack
- Battery Charger
- 6-in-1 Multi-Function Nozzle
- 24FT High-Elastic Hose with Filter
- Soap Bottle/Foam Cannon Attachment
- User Manual



Image: Contents of the YKYI GYSQ001 Cordless Pressure Washer package, including the main unit, battery, charger, nozzle, hose, and soap bottle.

4. ASSEMBLY

Follow these steps to assemble your YKYI GYSQ001 Cordless Pressure Washer:

1. **Attach the Hose:** Connect one end of the 24FT high-elastic hose to the water inlet port on the pressure washer unit. Ensure it is securely tightened to prevent leaks.
2. **Install the Nozzle:** Select the desired 6-in-1 multi-function nozzle setting and attach it to the spray wand. Push firmly until it clicks into place.
3. **Insert the Battery:** Slide the fully charged battery pack into the battery compartment on the pressure washer unit until it locks securely.
4. **Connect to Water Source:** Place the other end of the high-elastic hose, with the filter attached, into a clean water source (e.g., bucket, pool, or tap).



Image: Illustration showing the connection points for the hose, nozzle, and battery on the YKYI GYSQ001 pressure washer.

5. SETUP AND CHARGING

5.1 Battery Charging

Before first use, fully charge the battery pack. The charging time is approximately [Insert Charging Time, e.g., 3-5 hours].

1. Remove the battery pack from the pressure washer unit.
2. Connect the charger to a standard electrical outlet.
3. Connect the charger cable to the battery pack's charging port.
4. The indicator light on the charger will show charging status (e.g., red for charging, green for fully charged).
5. Once fully charged, disconnect the charger and reinsert the battery into the pressure washer.

5.2 Priming the Pump

To ensure proper operation, the pump needs to be primed before use:

1. Ensure the hose is connected to a water source and the nozzle is attached.
2. Point the nozzle away from yourself and others.
3. Press and hold the trigger for a few seconds until a steady stream of water emerges from the nozzle. This indicates the pump is primed.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

To turn on the pressure washer, press and hold the power button. Release the power button to turn it off. The LED display will show battery level and current pressure mode.

6.2 Adjusting Pressure Modes

The YKYI GYSQ001 features 30 speed levels. Use the mode selection button to cycle through the available pressure settings. Start with a lower pressure setting and increase as needed for the cleaning task.

6.3 Using the 6-in-1 Nozzle

Rotate the nozzle head to select different spray patterns:

- **0° Jet:** For concentrated cleaning of stubborn dirt. Use with caution.
- **15° Fan:** For intense cleaning of smaller areas.
- **25° Fan:** For general cleaning of larger surfaces.
- **40° Fan:** For gentle cleaning of delicate surfaces.
- **Soap Mode:** For applying detergent with the soap bottle attachment.
- **Shower Mode:** For rinsing or watering plants.

6.4 Applying Detergent (Optional)

Fill the soap bottle attachment with appropriate pressure washer detergent. Attach it to the pressure washer unit and select the "Soap Mode" on the 6-in-1 nozzle. Spray the detergent onto the surface, allow it to dwell, then rinse with a high-pressure setting.



Image: A user operating the YKYI GYSQ001 pressure washer, showing different spray patterns from the 6-in-1 nozzle.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

7.1 Cleaning the Nozzle

If the nozzle becomes clogged, use the included nozzle cleaning tool (if applicable) or a thin wire to clear any debris from the nozzle opening. Rinse thoroughly.

7.2 Cleaning the Water Filter

Periodically inspect and clean the water filter located at the end of the hose. Remove any accumulated debris to maintain proper water flow.

7.3 Storage

After each use, disconnect the hose and drain any remaining water from the unit. Remove the battery pack and store it

separately in a cool, dry place. Store the pressure washer unit and accessories in a clean, dry environment, protected from freezing temperatures.

8. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
No water flow or low pressure	Water source empty or restricted	Check water source and hose connections
	Hose kinked or clogged	Straighten hose, clear obstructions
	Nozzle clogged	Clean the nozzle
	Pump not primed	Prime the pump (see Section 5.2)
	Battery low	Recharge battery
Unit does not turn on	Battery not inserted correctly	Ensure battery is securely locked in place
	Battery discharged	Charge the battery fully
	Power button malfunction	Contact customer support
Water leaks from connections	Loose connections	Tighten all connections
	Damaged O-rings or seals	Inspect and replace damaged O-rings/seals

9. SPECIFICATIONS

Feature	Detail
Model Number	GYSQ001
Brand	YKYI
Power Source	Battery Powered (hand_powered)
Max Pressure	1200 PSI
Speed Levels	30
Hose Length	24 FT
Nozzle Type	6-in-1 Multi-Function
Product Dimensions	25L x 25W x 25H millimeters (2.54 x 2.54 x 2.54 cm)
Color	Sliver

10. WARRANTY AND SUPPORT

YKYI products are manufactured to high-quality standards. This product comes with a [Insert Warranty Period, e.g., 1-year limited warranty] from the date of purchase, covering defects in materials and workmanship. The warranty does not cover damage caused by misuse, neglect, unauthorized modification, or normal wear and tear. Please retain your proof of purchase for warranty claims. For technical support, warranty inquiries, or to order replacement parts, please contact YKYI customer service:

- **Website:** [Visit the YKYI Store on Amazon](#)
- **Email:** [Insert YKYI Support Email Address, if available]
- **Phone:** [Insert YKYI Support Phone Number, if available]

When contacting support, please provide your product model number (GYSQ001) and purchase date.

© 2025 YKYI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question