

B0FVMB2F8H

Generic Portable Bluetooth Speaker with Solar Charging (Model: B0FVMB2F8H) User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Generic Portable Bluetooth Speaker with Solar Charging, Model B0FVMB2F8H. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods when not in use, especially the solar panel.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for any repairs.
- Keep the speaker away from water and liquids, despite its waterproof design, to prevent damage to internal components.
- Use only the specified charging cables and power adapters.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the package for the following items:

- Portable Bluetooth Speaker (Model B0FVMB2F8H)
- USB Charging Cable
- Quick Start Guide

PRODUCT OVERVIEW

Familiarize yourself with the components of your speaker:



Image: Front view of the portable Bluetooth speaker, highlighting its solar panel, LED light display, and overall dimensions (approximately 170.5mm length, 95mm height, 60mm width).

1. **Solar Panel:** Located on the top surface for solar charging.
2. **LED Light Display:** Front-facing lights that synchronize with music.
3. **Control Buttons:** (Details not provided, assuming standard buttons for power, volume, mode, play/pause).
4. **USB Port:** For charging and USB drive playback.
5. **TF Card Slot:** For TF card playback.
6. **Charging Port:** For USB cable charging.
7. **Antenna:** Extendable for FM radio reception.
8. **Carrying Strap:** For portability.



Image: Rear view of the portable Bluetooth speaker, showing the battery compartment open with a rechargeable battery inserted. Also visible are the USB and charging ports.

SETUP

1. Charging the Speaker

Your speaker offers two charging methods:

- **Solar Charging:** Place the speaker with the solar panel facing direct sunlight. The charging indicator light will illuminate. Solar charging is ideal for maintaining battery life outdoors but may be slower than USB charging.
- **USB Charging:** Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging status. A full charge typically takes several hours.

Ensure the speaker is fully charged before first use for optimal battery performance.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually marked with or **ON/OFF**) for approximately 3 seconds until you hear an audible prompt or see the LED lights activate.
- **To Power Off:** Press and hold the Power button again for approximately 3 seconds until the speaker powers down.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

1. **Enter Bluetooth Mode:** Upon powering on, the speaker typically defaults to Bluetooth mode. If not, press the "M" (Mode) button until you hear the "Bluetooth Mode" prompt. The LED indicator will flash, indicating it's ready for pairing.
2. **Pairing:**
 - Enable Bluetooth on your device (smartphone, tablet, etc.).
 - Search for available Bluetooth devices. The speaker will appear as "B0FVMB2F8H" or a similar name.
 - Select the speaker from the list to connect. Once paired, you will hear a confirmation sound, and the LED indicator will stop flashing.
3. **Playback Control:**
 - **Play/Pause:** Press the Play/Pause button ().
 - **Next Track:** Press the "Next" button ().
 - **Previous Track:** Press the "Previous" button ().
 - **Volume Up:** Long press the "Next" button or use a dedicated Volume Up button.
 - **Volume Down:** Long press the "Previous" button or use a dedicated Volume Down button.

2. FM Radio Mode

1. **Enter FM Mode:** Press the "M" (Mode) button repeatedly until you hear the "FM Radio" prompt.
2. **Extend Antenna:** Fully extend the telescopic antenna for better reception.
3. **Auto Scan:** Press and hold the Play/Pause button () to automatically scan and save available FM stations. The speaker will cycle through frequencies and store them.
4. **Switch Stations:** Use the "Next" () and "Previous" () buttons to navigate through the saved stations.

3. USB / TF Card Playback

1. **Insert Media:** Insert a USB flash drive into the USB port or a TF (MicroSD) card into the TF card slot. The speaker will automatically detect the media and switch to the corresponding playback mode.
2. **Playback Control:** Use the Play/Pause, Next, and Previous buttons for controlling playback, similar to Bluetooth mode.

4. LED Light Display

The speaker features dynamic RGB LED lights that can synchronize with your music. Specific controls for the LED lights (e.g., changing patterns, turning off) are not detailed in the product information, but they typically activate automatically with audio playback. If there is a dedicated light button, press it to cycle through modes or turn off the lights.

5. Hands-Free Calling

When connected via Bluetooth to a smartphone, the speaker can be used for hands-free calls.

- **Answer Call:** Press the Play/Pause button () once to answer an incoming call.
- **End Call:** Press the Play/Pause button () once to end an ongoing call.
- **Reject Call:** Press and hold the Play/Pause button () to reject an incoming call.

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Solar Panel:** Keep the solar panel clean and free of dust or debris to ensure efficient charging.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place. It is recommended to fully charge the battery every 3 months to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the USB cable or place it in direct sunlight.
Cannot pair via Bluetooth.	Bluetooth not enabled on device; speaker not in pairing mode; too far from device.	Ensure Bluetooth is on and the speaker is in pairing mode. Move device closer to speaker (within 10 meters). Forget previous pairings on your device and try again.
No sound or low volume.	Volume too low on speaker or connected device; incorrect mode selected.	Increase volume on both the speaker and your connected device. Ensure the correct mode (Bluetooth, FM, USB, TF) is selected.
FM radio reception is poor.	Antenna not extended; weak signal.	Fully extend the telescopic antenna. Try repositioning the speaker for better signal reception.
USB/TF card not playing.	Incorrect file format; card/drive not inserted correctly; corrupted media.	Ensure audio files are in a compatible format (e.g., MP3). Reinsert the USB drive or TF card. Try a different USB drive or TF card.

SPECIFICATIONS

Model Number:	B0FVMB2F8H
Connectivity Technology:	Bluetooth
Power Source:	Solar, USB
Radio Bands Supported:	FM (87.5-108 MHz)
Special Features:	Solar charging, LED light display, Multi-playback options (Bluetooth, FM Radio, USB, TF card)
Compatible Devices:	Bluetooth devices, USB devices, TF cards, FM radio signals
Display Type:	LED
Color:	Black
Manufacturer:	China

WARRANTY AND SUPPORT

This product comes with a **15-day warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims or technical support, please refer to the contact information provided by your retailer or the seller "CLASSYSA" on Amazon. Please retain your proof of purchase for warranty validation.