

[manuals.plus](#) /

› [Auusda](#) /

› [Auusda 16-inch FHD Laptop T161N User Manual](#)

Auusda T161N

Auusda 16-inch FHD Laptop T161N User Manual

Model: T161N

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Auusda 16-inch FHD Laptop T161N. Please read this manual thoroughly before using your device to ensure proper function and longevity.



Image: The Auusda 16-inch FHD Laptop T161N, showcasing its sleek design and screen.

2. WHAT'S IN THE BOX

Upon opening your Auusda T161N laptop package, verify that all the following items are included:

- Auusda 16-inch FHD Laptop T161N
- Power Adapter/Charger
- Instruction Manual (this document)
- Keyboard Cover



Image: A visual representation of the items included in the Auusda T161N laptop packaging.

3. PRODUCT OVERVIEW

3.1 Key Features

- Display:** 16-inch Full HD (1920x1080) IPS screen with 180° viewing angle.
- Processor:** Intel Core i3-1000NG4 (up to 3.2GHz).
- Memory:** 16GB DDR4 RAM.
- Storage:** 1TB PCIe SSD.
- Connectivity:** Wi-Fi 6, Bluetooth 5.3.
- Security:** Fingerprint Reader.
- Input:** Backlit Keyboard.
- Operating System:** Windows 11 Pro.

3.2 Ports and Connectors

The Auusda T161N laptop is equipped with various ports for versatile connectivity:

- USB 3.0 Ports (x2)
- Full-Function Type-C Port (x1) - Supports data transfer, screen mirroring, and charging.
- USB 2.0 Port (x1)
- Mini HDMI Port (x1)
- 3.5mm Standard Headphone Jack (x1)
- Microphone Input (shared with headphone jack)
- Charging Port

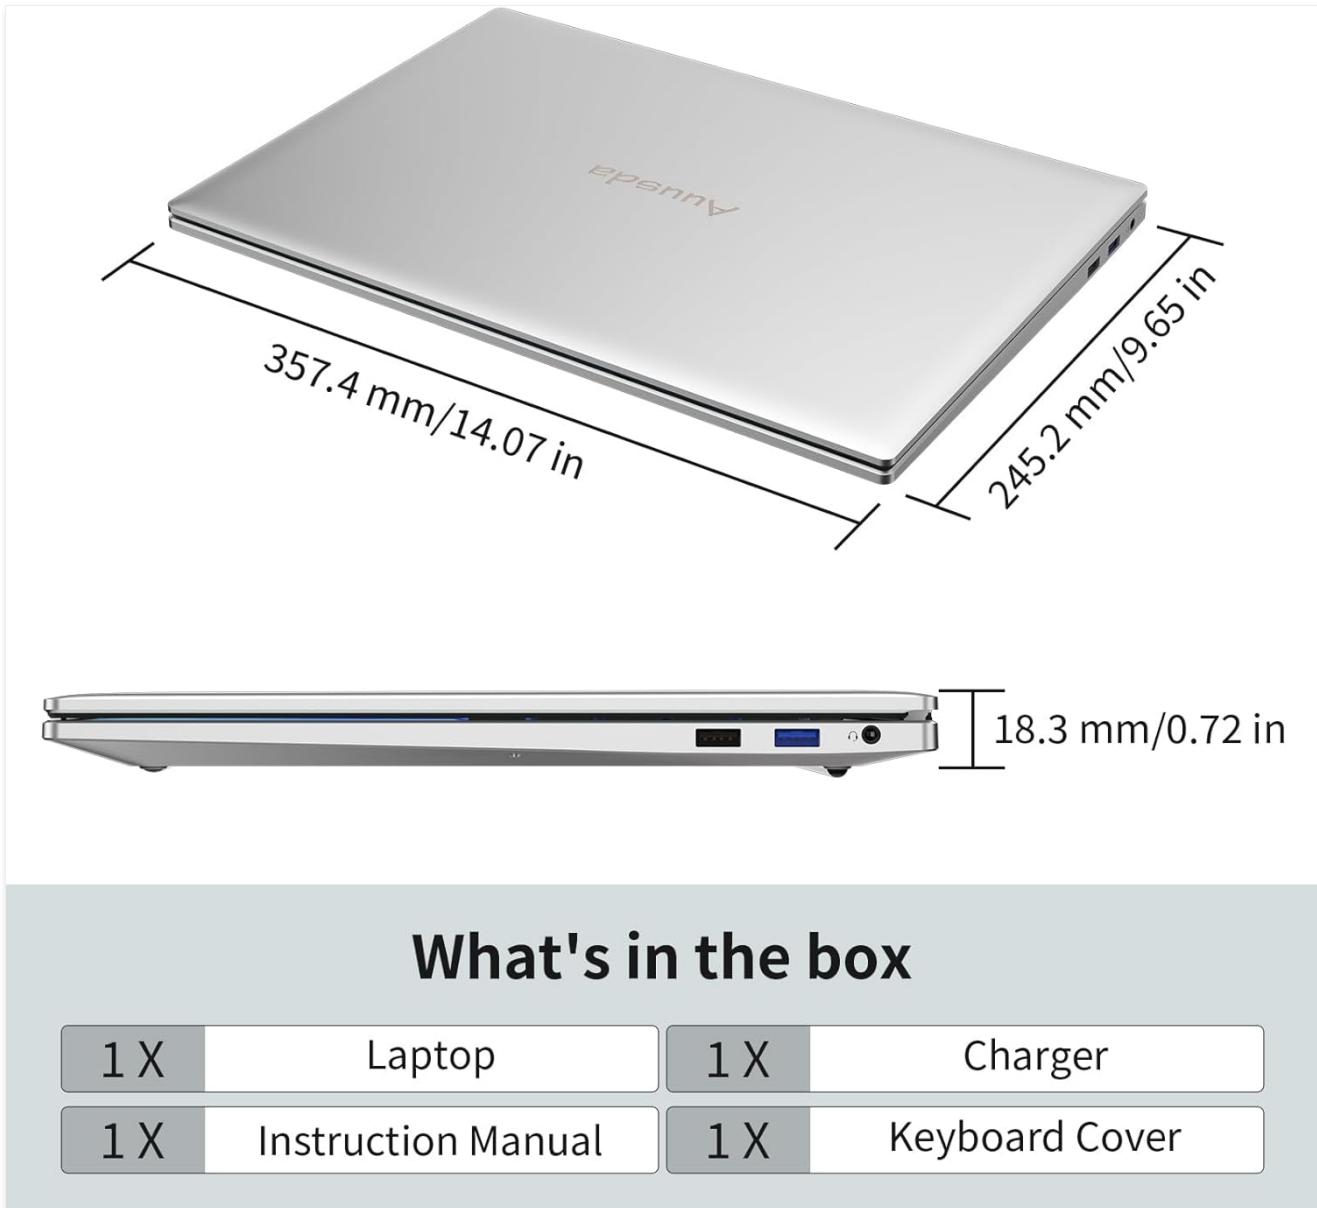


Image: A detailed diagram illustrating the location and type of ports on the Auusda T161N laptop.

3.3 Visual Overview

Your browser does not support the video tag.

Video: An overview of the Auusda 16-inch FHD Laptop T161N, demonstrating its design and key features.

4. SETUP

4.1 Initial Charging

1. Connect the power adapter to the charging port on the laptop.

2. Plug the power adapter into a wall outlet.
3. Allow the laptop to charge for at least 30 minutes before initial use, or until the battery indicator shows sufficient charge.

4.2 Powering On and Initial Windows Setup

1. Press the power button located on the keyboard to turn on the laptop.
2. Follow the on-screen instructions to complete the Windows 11 Pro setup process. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.
3. Ensure you have an active internet connection for Windows updates and driver installations during the setup.

5. OPERATING INSTRUCTIONS

5.1 Keyboard Functions (Fn + Function Keys)

The laptop features a full-size keyboard with dedicated function keys that can be accessed by pressing the **Fn** key in combination with the corresponding function key (F1-F12).

- **Backlit Keyboard:** Press **Fn + F9** to cycle through 2 brightness levels. Pressing it a third time turns the backlight off.
- **Num Lock:** Press **Fn + Num Lk** to toggle the numeric keypad on or off.
- **Volume Control:** Use **Fn + Speaker keys** (F1-F3) to mute, decrease, or increase volume.
- **Brightness Control:** Use **Fn + Sun keys** (F4-F5) to decrease or increase screen brightness.

How to Use the Keyboard Functions

Fn + function keys

- **Backlit Keyboard:** Long press Fn, then press F9 to cycle through 2 brightness levels. Pressing it the 3th time turns the lights off.
- **Num Lock:** Press Fn + Num Lk to turn the numeric keypad on or off.
- **Volume:** Fn + speaker keys
- **Brightness:** Fn + sun keys

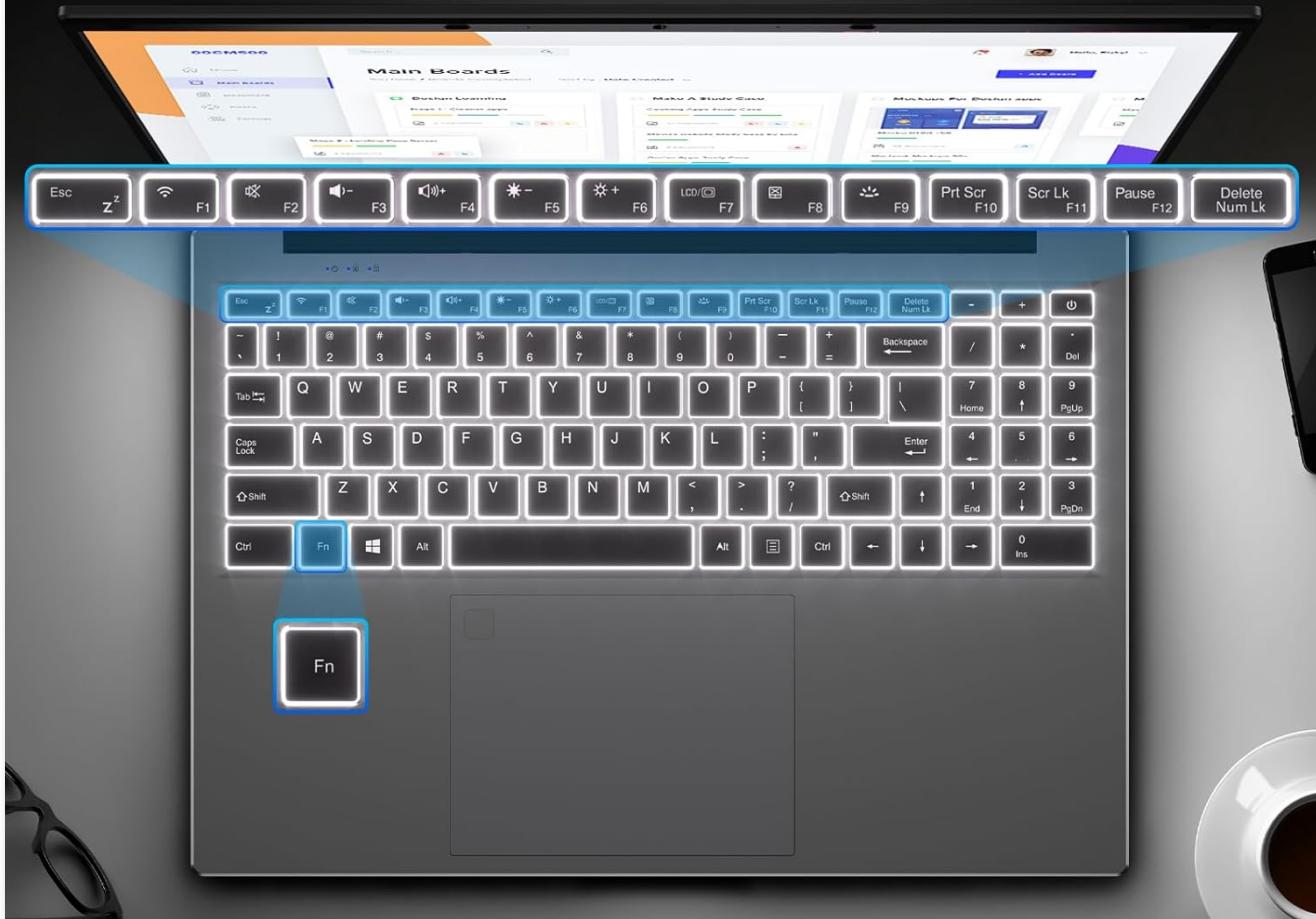


Image: A visual guide to using the Fn (Function) keys on the Auusda T161N keyboard for various controls.

Backlit Keyboard for The Dark

Full-size backlit keyboard with a numeric keypad on the right, offering excellent typing rebound for precise typing even at night.



Backlight



Numeric Keypad



Image: Close-up view of the backlit keyboard and numeric keypad, highlighting their functionality.

5.2 Fingerprint Reader

The integrated fingerprint reader provides a secure and fast way to unlock your laptop. To set up fingerprint recognition:

1. Navigate to Windows Settings > Accounts > Sign-in options.
2. Under 'Windows Hello Fingerprint', click 'Set up'.
3. Follow the on-screen prompts to register your fingerprint.

Multiple Ports for Greater Versatility



Image: A visual representation of the fingerprint reader location and its quick unlock capability.

5.3 Type-C Connectivity

The full-function Type-C port offers versatile connectivity options:

- **Data Transfer:** Connect compatible devices for high-speed data exchange.
- **Screen Mirroring:** Output video to an external display using a compatible Type-C to HDMI/DisplayPort adapter (sold separately).
- **Charging:** Charge the laptop using a compatible Type-C power delivery charger.

Type-C More Connectivity

From USB and HDMI to SD card slots, enjoyseamless connectivity for all your devicesStay versatile, stay connected.



Image: Illustrates the multi-functional capabilities of the Type-C port, including data transfer, screen mirroring, and charging.

5.4 Wi-Fi 6 and Bluetooth 5.3

The laptop supports Wi-Fi 6 for faster and more stable wireless internet connections and Bluetooth 5.3 for connecting wireless peripherals.

Faster & More Stable — Smooth Experience



• WiFi5+

2.4Gps

• WiFi6+

9.6Gps(Max)

- ⚡ • **FASTER & MORE STABLE CONNECTION** Experience ultra-fast dual-band 6G WiFi with smooth, reliable performance. Perfect for streaming and multitasking across multiple devices without lag or drops.
- ⌚ • **POWERFUL & ENERGY EFFICIENT** Delivers speeds over 80MB/s with strong coverage and low latency, while the smart power-saving design uses less than 1W on standby — fast, stable, and efficient all day long.

Image: Highlights the advanced wireless connectivity of the laptop, including Wi-Fi 6 and Dual Band 5G support.

6. SPECIFICATIONS

Below are the detailed technical specifications for the Auusda 16-inch FHD Laptop T161N:

Feature	Specification
Model Number	T161N
Screen Size	16 Inches
Screen Resolution	1920 x 1080 pixels (FHD)
Processor	Intel Core i3-1000NG4 (1.09 GHz, up to 3.2 GHz)
RAM	16 GB DDR4 SDRAM
Hard Drive	1 TB SSD (PCIe)

Feature	Specification
Graphics Coprocessor	Iris Plus Graphics G4 48EUs (Integrated)
Operating System	Windows 11 Pro
Wireless Type	802.11ax (Wi-Fi 6), Bluetooth 5.3
USB 3.0 Ports	2
USB 2.0 Ports	1
Item Weight	5.21 pounds
Product Dimensions	14.17 x 10.83 x 0.71 inches
Color	Silver
Batteries	1 12V battery (included)

7. MAINTENANCE

Regular maintenance helps ensure the optimal performance and longevity of your laptop.

7.1 Cleaning

- Use a soft, lint-free cloth to clean the screen and exterior surfaces. For stubborn marks, slightly dampen the cloth with water or a screen-safe cleaner.
- Avoid spraying liquids directly onto the laptop.
- Use compressed air to clear dust from keyboard keys and ventilation grilles.

7.2 Software Updates

- Regularly check for and install Windows updates to ensure system stability and security. Go to Settings > Windows Update.
- Keep your drivers updated. Windows Update typically handles this, but you may occasionally need to check the Auuusda support website for specific driver updates.

7.3 Battery Care

- Avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place if not used for extended periods.

8. TROUBLESHOOTING

This section addresses common issues you might encounter with your laptop.

8.1 Laptop Does Not Power On

- Ensure the power adapter is securely connected to both the laptop and a working power outlet.
- Verify the power outlet is functional by plugging in another device.
- If the battery is completely drained, allow it to charge for at least 15-30 minutes before attempting to power on again.

8.2 Wi-Fi Connectivity Issues

- Check if Wi-Fi is enabled in Windows settings (Settings > Network & internet > Wi-Fi).
- Restart your router and modem.
- Ensure you are within range of your Wi-Fi network.
- Update your Wi-Fi drivers if necessary.

8.3 Keyboard or Touchpad Not Responding

- Restart the laptop.
- Check for any physical obstructions or debris under the keys or on the touchpad.
- Ensure the touchpad has not been accidentally disabled (some laptops have a function key or a setting to toggle the touchpad).

For further assistance, refer to the support section below.

9. WARRANTY AND SUPPORT

Auusda provides customer support and warranty services for its products.

9.1 Warranty Information

Auusda laptops typically come with a two-year after-sales service period. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

If you encounter issues or require technical assistance, please contact Auusda customer support:

- **Email Support:** Send your order number and a video demonstrating the problem to Auusda.ltd@gmail.com.
- **Amazon Buyer Account:** Log in to your Amazon buyer account, find your order, and click "Get Help" or "Ask questions" for direct support.