

[Manuals.plus](#) /

› [Urban Deco](#) /

› Urban Deco Biometric Slider Bedside Handgun Safe User Manual (Model UDHS0058)

Urban Deco UDHS0058

Urban Deco Biometric Slider Bedside Handgun Safe User Manual

Model: UDHS0058

1. INTRODUCTION

Thank you for choosing the Urban Deco Biometric Slider Bedside Handgun Safe. This safe is designed to provide secure storage and quick access to your handgun using advanced biometric technology, a digital keypad, a mobile application, or traditional keys. Please read this manual thoroughly before installation and operation to ensure proper use and maximum security.

2. SAFETY INFORMATION

WARNING: Always follow local laws and regulations regarding firearm storage. Keep firearms unloaded when stored in the safe. Store ammunition separately. Never store loaded firearms in a manner accessible to unauthorized individuals, especially children.

- Ensure the safe is securely mounted to prevent unauthorized removal.
- Keep emergency keys in a secure location away from the safe and out of reach of children.
- Do not share your passcode or biometric data with unauthorized individuals.
- Regularly check the battery level to ensure continuous operation.

PROTECT YOUR KIDS FROM FIREARMS!

From Anxiety to Assurance



This image illustrates the importance of securing firearms to protect children. The top panel shows a safe mounted on a wall with a green checkmark, signifying safe storage. The bottom panel shows a child playing with a toy gun, accompanied by a red warning sign, emphasizing the danger of unsecured firearms.

3. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Urban Deco Biometric Slider Bedside Handgun Safe (Model UDHS0058)
- Emergency Keys (2)
- Mounting Hardware
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and dimensions of your Urban Deco handgun safe.



This diagram provides the physical dimensions of the safe: 10 inches (25.5 cm) deep, 3.1 inches (8 cm) wide, and 11.8 inches (30 cm) high. The sliding mechanism extends to 17.2 inches (43.8 cm). The mounting bracket dimensions are also shown: 10.6 inches (27 cm) by 8.4 inches (21.5 cm). Key features like biometric access, passcode, LCD display, smart app management, alarm system, LED light, emergency charging, and mute mode are highlighted.



This image labels the key components of the safe: LCD screen, Type-C (Emergency Power Port), Keyboard, Fingerprint Scanner, Battery Compartment, Emergency Keyhole, Single Pistol Rack, and Interior Light. It also notes the requirement for 4 AA alkaline batteries (not included).

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the safe.
2. Insert 4 AA alkaline batteries (not included), ensuring correct polarity.
3. Close the battery compartment cover securely.

5.2 Mounting the Safe

The safe can be mounted on a nightstand, under a desk, on a wall, or inside a dresser. Choose a secure location that is convenient for quick access but discreet.



This image provides a four-step guide for installation. Step 1 shows drilling holes for the mounting bracket. Step 2 shows attaching the safe to the mounted bracket. Step 3 shows the safe in its open position. Step 4 shows the safe in its closed position, indicating a successful installation.


1. Select a suitable mounting location.
2. Use the provided mounting bracket as a template to mark drilling points.
3. Drill pilot holes and secure the mounting bracket using the provided hardware.
4. Align the safe with the mounted bracket and slide it into place until it locks securely.

6. OPERATION

6.1 Unlocking Methods (4 Ways)

FLEXIBLE ACCESS, 4 WAYS

Choose from four quick and convenient unlocking methods

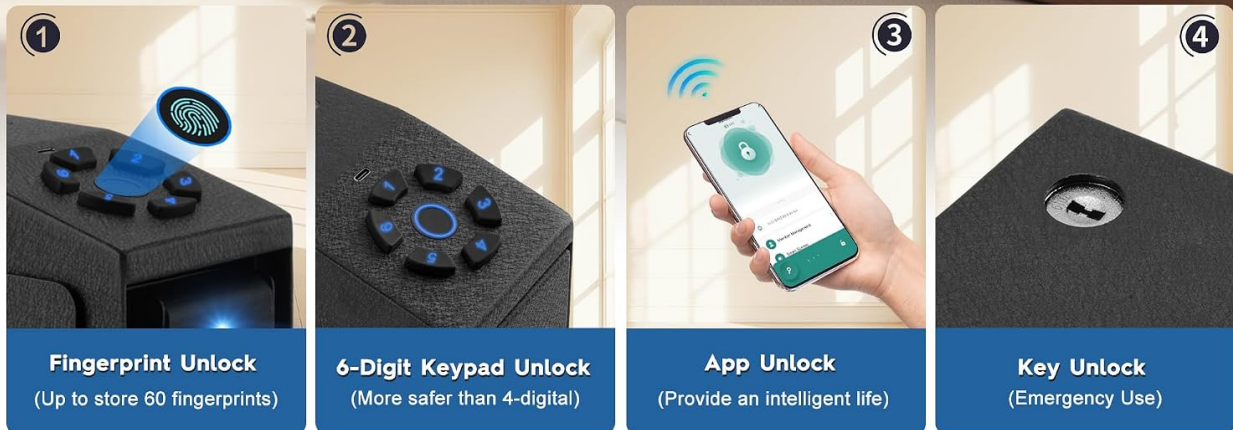

This image highlights the four unlocking methods: Fingerprint Unlock (up to 60 fingerprints), 6-Digit Keypad Unlock (more secure than 4-digit), App Unlock (via Bluetooth connection), and Key Unlock (for emergency use).

6.1.1 Biometric Fingerprint Unlock

The safe can store up to 60 fingerprints and unlocks in approximately 0.1 seconds with a 99% recognition rate.

1. To register a fingerprint: Follow the instructions in the mobile app or the safe's LCD display menu. Register your fingerprint from multiple angles for improved recognition.
2. To unlock: Place your registered finger firmly on the fingerprint scanner. The safe will open if the fingerprint is recognized.

BIOMETRIC QUICK ACCESS



This image emphasizes the biometric capabilities: storage for up to 60 fingerprints, biometric identification in less than 1 second, and a recognition rate exceeding 99%. A finger is shown on the scanner, indicating the quick access feature.

6.1.2 Passcode Unlock

The safe features a backlit keypad supporting 3-8 digit passcodes.

1. To set a passcode: Follow the instructions in the mobile app or the safe's LCD display menu.
2. To unlock: Enter your registered passcode on the keypad. The safe will open upon correct entry.

6.1.3 Mobile App Unlock

Connect the safe to your smartphone via Bluetooth for convenient app operation.

1. Download the Urban Deco app from your device's app store.
2. Enable Bluetooth on your smartphone and open the app.
3. Follow the in-app instructions to pair your safe.
4. Once connected, you can unlock the safe, add/delete fingerprints and passcodes, check battery life, and view unlock records directly from the app.



This image illustrates the Bluetooth connection process. Step 1 shows pressing the '1' button twice and then 'Settings' on the safe's panel to initiate Bluetooth pairing (blue light flashes). Step 2 shows adding the device within the mobile app.



This image highlights the smart app monitoring features, ensuring privacy through a secure Bluetooth connection. The app allows for Fingerprint & Password Setup, viewing Operation Logs, Access Sharing, Fingerprint Calibration, and activating Mute / Silent Mode.

6.1.4 Emergency Key Unlock

In case of battery failure or forgotten codes/fingerprints, use the emergency key.

1. Locate the emergency keyhole (refer to Product Overview).
2. Insert the emergency key and turn it to unlock the safe.

6.2 LCD Display Screen

The integrated LCD screen provides real-time information:

- Time
- Temperature
- Humidity
- Battery Level
- Locked State

SMART DISPLAY | EMERGENCY PORT



This image displays the LCD screen, which shows time, temperature, humidity, battery level, and locked status. It also points out the emergency USB-C port for power in case the internal batteries are depleted or keys are lost. The safe is shown mounted on a nightstand next to a bed.



REAL-TIME MONITORING

Charging Safe

LCD Display to Monitor Temp & Humid



Fahrenheit
Degree



Humidity



Lock/unlock
State



Clock



Battery



LCD Display Screen Settings

Long-press "1" - Enters time setting (digit blinks).
Short-press "1" - Adjusts the current digit.
Short-press "2" - Confirms and moves to next digit.

This image details the real-time monitoring features of the LCD display, including Fahrenheit/Celsius degree, humidity, lock/unlock state, clock, and battery level. It also provides instructions for LCD Display Screen Settings: long-press '1' to enter time setting, short-press '1' to adjust the current digit, and short-press '2' to confirm and move to the next digit.

6.3 Emergency Power Supply

The safe is equipped with a USB-C port for emergency power. If the internal batteries are depleted, connect a USB-C cable to an external power source to temporarily power the safe and gain access.



This image demonstrates the emergency USB-C power supply. A USB-C cable is shown connected to the safe and an external power adapter, allowing the safe to be powered externally if its internal batteries are dead.

6.4 Silent Mode

To activate or deactivate silent mode (mute keypad sounds and alarms), press and hold the designated button (usually '0' or a specific mute icon) for 2 seconds.



This image illustrates three features: the Internal LED light that turns on when unlocked, the Lock-Down System which disables access during an alarm (triggered by 3 wrong codes or 5 wrong fingerprints), and Silent Mode, activated by pressing and holding the '0' button for 2 seconds.

6.5 Lock-Down System

For enhanced security, the safe features a lock-down system. If 3 incorrect passcodes are entered or 5 incorrect fingerprints are scanned consecutively, the safe will enter a temporary lock-down state, disabling all access for a short period and potentially triggering an alarm.

6.6 Internal Light

When the safe is opened, the internal LED light automatically illuminates, providing visibility in low-light conditions.

6.7 Pistol Compatibility

The safe is designed to hold handguns up to 9.5 inches in length, plus a spare magazine.

SUITABLE FOR FIREARMS

Measuring Up To 9.5 Inches In Length



Full Size



Compact



Sub-Compact



Pocket

This image demonstrates that the safe is suitable for firearms measuring up to 9.5 inches in length, accommodating full-size, compact, sub-compact, and pocket pistols.

6.8 Official Product Video

Your browser does not support the video tag.

This video, titled "Biometric Gun Safe with LCD Screen Display" by Urban Deco Direct, provides a visual overview of the safe's features, including its biometric access, LCD screen functionality, and overall design. It demonstrates the product in use and highlights its key benefits.

7. MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace all 4 AA batteries when the low battery indicator appears on the LCD screen or in the mobile app.
- **Fingerprint Sensor:** Keep the fingerprint sensor clean and dry for optimal performance.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with fingerprint.	Finger not placed correctly; unregistered fingerprint; dirty sensor.	Ensure finger covers the sensor completely. Re-register fingerprint from multiple angles. Clean the sensor. Try another registered fingerprint or unlocking method.
Safe does not open with passcode.	Incorrect passcode entered; batteries low.	Verify the passcode. Replace batteries. Use emergency key.
LCD display is blank or dim.	Low batteries; batteries incorrectly installed.	Replace batteries. Check battery polarity. Use emergency USB-C power.
Safe is in lock-down mode.	Too many incorrect attempts.	Wait for the lock-down period to expire. Use emergency key if immediate access is required.
Bluetooth connection issues.	Bluetooth off on phone; app not updated; interference.	Ensure phone Bluetooth is on. Restart app and safe. Try pairing again.

9. SPECIFICATIONS

Feature	Detail
Brand	Urban Deco
Model Number	UDHS0058
Product Dimensions (D x W x H)	10" x 3.1" x 11.81" (25.5cm x 8cm x 30cm)
Material	Carbon Steel
Lock Type	App Unlock, Biometric, Electronic Combination Lock, Key
Capacity	Holds handguns up to 9.5 inches long + spare magazine
Special Features	Alarm System, Biometric Fingerprint, LCD Display, Smart App Management, Emergency USB-C Power, Internal LED Light
Mounting Type	Wall Mount (also suitable for nightstand, desk, dresser)
Item Weight	13.6 Pounds
Power Source	4 AA Alkaline Batteries (not included)

10. WARRANTY AND SUPPORT

The Urban Deco Biometric Slider Bedside Handgun Safe (Model UDHS0058) comes with a 1-year

manufacturer's warranty from the date of purchase, covering defects in materials and workmanship. For technical support, warranty claims, or any questions regarding your product, please contact Urban Deco customer service through the retailer's platform or the official Urban Deco website.