

POPCHOSE steamer cleaner

POPCHOSE Steam Cleaner with Detergent Dispenser

MODEL: STEAMER CLEANER

Brand: POPCHOSE

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this entire manual carefully before operating your POPCHOSE Steam Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the electrical outlet when not in use and before servicing.
- Do not leave the appliance unattended when plugged in.
- Do not use the appliance if the cord or plug is damaged.
- Keep the steam cleaner away from children and pets.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Do not immerse the appliance in water or other liquids.
- Always ensure the water tank is securely closed before operation.
- Use only tap water or distilled water. Do not add corrosive chemicals or aromatic oils directly into the water tank.



Image: Designed for safe use in family environments.

2. PRODUCT OVERVIEW

The POPCHOSE Steam Cleaner is a versatile handheld device designed for efficient cleaning across various surfaces. It features a unique detergent dispensing system and rapid heat-up capabilities.

Components:

- Main Steam Cleaner Unit
- Removable Water Tank (500ml capacity)
- Detergent Dispenser
- Accessory Nozzle
- 2 Scouring Pad Brushes
- 1 Steel Brush
- 2 Plastic Brushes
- 1 Grout Brush
- 1 Squeegee (can be separated)
- 1 Flat Scraping Tool
- 1 Extension Hose and Nozzle
- 2 Cleaning Clothes
- 1 Measuring Cup



Image: The POPCHOSE Steam Cleaner main unit.

LIGHTWEIGHT DETACHABLE TANK



POPCHOSE

2.6
LBS

TRADITIONAL

3.4
LBS

Image: Included accessories for diverse cleaning tasks.

3. SETUP

3.1 Attaching Accessories

1. Select the appropriate nozzle or brush for your cleaning task.
2. Align the arrow on the accessory with the arrow on the main unit's steam outlet.
3. Push the accessory fully in until it clicks into place, then turn to lock.

 
Your browser does not support the video tag.

Video: Demonstrates unboxing, attaching accessories, filling water, and adding detergent to the POPCHOSE Steam Cleaner.

3.2 Filling the Water Tank

1. Ensure the steam cleaner is unplugged.
2. Press the release buttons on each side of the water tank simultaneously to detach it from the main unit.
3. Open the water tank cap.
4. Fill the tank with up to 500ml of tap water or distilled water using the provided measuring cup. Do not overfill.
5. Close the water tank cap securely and reattach the tank to the main unit until it clicks into place.

DUAL MODES

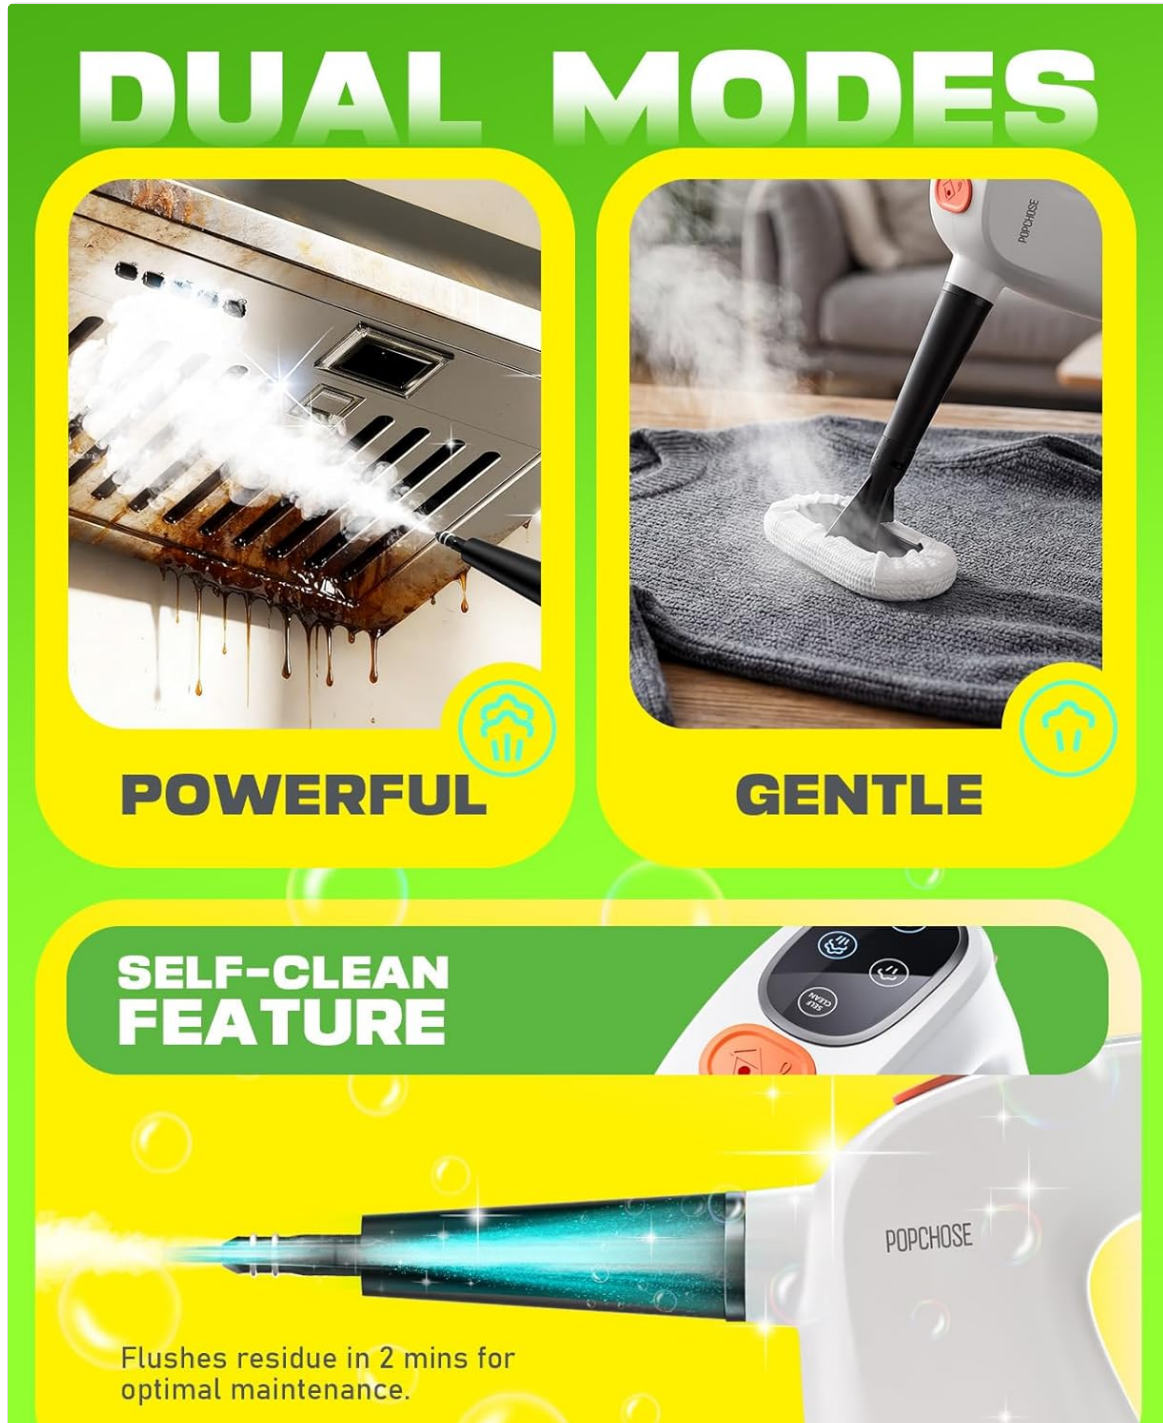

POWERFUL

GENTLE

SELF-CLEAN FEATURE

Flushes residue in 2 mins for optimal maintenance.

Image: Filling the removable water tank.

Your browser does not support the video tag.

Video: A short demonstration of detaching the water tank and adding water and detergent.

3.3 Adding Detergent (Optional)

1. Open the detergent dispenser cap located on the top of the unit.
2. Pour up to 25ml of your preferred detergent into the dispenser using the measuring cup.
3. Close the detergent dispenser cap securely.



Image: Adding detergent to the dispenser.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Heat-Up

1. Plug the power cord into a grounded electrical outlet.
2. Press the power button. The indicator light will illuminate.
3. The unit will heat up in approximately 15 seconds, indicated by a change in the indicator light or a ready signal.

Image: Rapid 15-second heat-up to 230°F.

Your browser does not support the video tag.

Video: Shows the 15-second heat-up process and initial steam output of the handheld steam cleaner.

4.2 Selecting Steam Mode

The steam cleaner offers two power levels:

- **Low Mode:** Ideal for delicate surfaces like upholstery (e.g., couch steam cleaning) or light stains.
- **High Mode:** Suitable for heavy-duty cleaning tasks such as shower grout, hard water buildup, and stubborn dirt.

Press the steam mode selection button to toggle between low and high steam output.

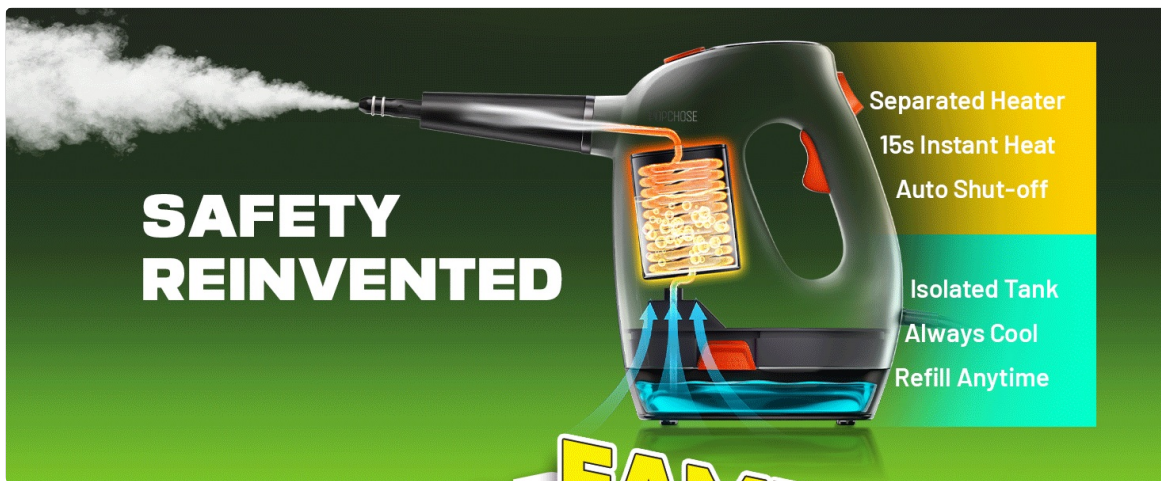 


Image: Dual steam modes for varied cleaning needs.

4.3 Using the Detergent Spray

If detergent has been added, press the Detergent Spray Button to mix steam with the cleaning solution for enhanced cleaning power, particularly effective on grease and stubborn residue.

4.4 Self-Clean Mode

After cleaning, activate Self-Clean Mode to flush any remaining residue from the internal pipes. This process takes approximately 1-2 minutes and helps maintain the appliance's performance and longevity.

5. USING ATTACHMENTS

The POPCHOSE Steam Cleaner comes with a variety of attachments to tackle different cleaning challenges:

- **Accessory Nozzle:** For general steam application.
- **Scouring Pad Brushes (2):** For scrubbing tough grime on surfaces like stoves and kitchen sinks.
- **Steel Brush (1):** For extremely stubborn, baked-on residue on durable surfaces.
- **Plastic Brushes (2):** For general scrubbing on various surfaces without scratching.
- **Grout Brush (1):** Specifically designed to clean narrow grout lines.
- **Squeegee (1):** For streak-free cleaning of windows, mirrors, and other smooth surfaces.
- **Flat Scraping Tool (1):** For removing stuck-on debris.
- **Extension Hose and Nozzle (1):** Provides extended reach for hard-to-access areas.
- **Cleaning Clothes (2):** For wiping surfaces after steaming or for use with the squeegee.

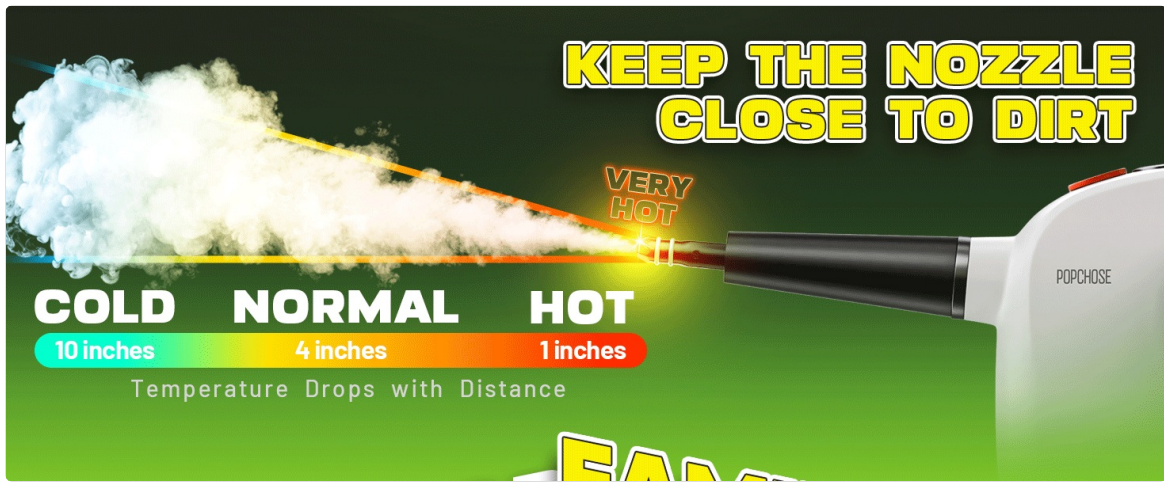 


Image: Multi-surface cleaning capabilities with various attachments.

6. MAINTENANCE AND CARE

6.1 After Each Use

- Unplug the steam cleaner and allow it to cool completely.
- Empty any remaining water from the tank.
- If detergent was used, run the Self-Clean Mode to clear the internal system.
- Clean any used attachments with water and mild soap, then allow them to air dry.
- Wipe the exterior of the main unit with a damp cloth.

6.2 Storage

Store the steam cleaner and its accessories in a cool, dry place, out of reach of children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Unit not heated sufficiently; Nozzle clogged.	Refill water tank; Allow 15 seconds for heat-up; Clean nozzle.
Detergent not dispensing	Detergent tank empty; Detergent spray button not pressed.	Refill detergent tank; Press the detergent spray button during operation.
Unit automatically shuts off	Water tank empty (overheat protection).	Refill water tank.

8. SPECIFICATIONS

Feature	Detail
Brand	POPCHOSE
Model Number	steamer cleaner
Wattage	1200 watts
Heat-Up Time	15 seconds
Max Steam Temperature	230°F
Water Tank Capacity	500 Milliliters (16.9 oz)
Power Source	Corded Electric
Cord Length	9.8 ft
Special Features	Detergent Dispenser, Removable Tank, Steam Control, Dry Burning Auto Turn-off

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the contact information provided on the product packaging or visit the official POPCHOSE website. Keep your purchase receipt as proof of purchase for warranty claims.