

Manuals.plus /

› Whirlpool /

› Whirlpool WAM 762WB IT 7kg Freestanding Washing Machine User Manual

Whirlpool WAM 762WB

Whirlpool WAM 762WB IT Washing Machine User Manual

MODEL: WAM 762WB

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Whirlpool WAM 762WB IT freestanding washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

The Whirlpool WAM 762WB IT is a 7 kg capacity, front-loading washing machine designed for household use. It features a 1200 rpm spin speed and an A-class energy rating, ensuring efficient and thorough cleaning. The exclusive 6th SENSE technology dynamically adapts settings to each load, providing optimal fabric care.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Ensure the appliance is properly grounded.
- Do not allow children to play with the appliance.
- Do not touch the appliance with wet hands or bare feet.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not open the detergent dispenser drawer during a wash cycle.
- Do not force the door open.

Setup and Installation

Unpacking

Remove all packaging materials. Ensure that all transit bolts, which secure the drum during transport, are removed before use. Failure to remove these bolts can cause significant damage to the appliance.

Positioning

Place the washing machine on a flat, stable floor. Adjust the feet to ensure the appliance is perfectly level. This prevents excessive vibration and noise during operation.

Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connections are tight to prevent leaks. Do not reuse old hoses.

Drain Connection

Securely attach the drain hose to a standpipe or directly to a sink drain, ensuring it is not kinked or obstructed. The drain hose should be positioned at a height between 65 cm and 100 cm from the floor.

Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance rating plate. Do not use extension cords or multiple adapters.

First Use

Before the first wash, run a short cycle without laundry and detergent to clean the drum and remove any manufacturing residues.

Operating Instructions



A white Whirlpool WAM 762WB IT freestanding washing machine with a black porthole door. The control panel is located on the top right, featuring a program selection knob, a digital display, and various touch buttons for cycle options. The detergent dispenser drawer is visible on the top left.

Control Panel Overview

The control panel consists of a program selection knob, a digital display, and various buttons for additional options and cycle start/pause. The detergent dispenser drawer is located on the upper left.

Loading Laundry

1. Open the washing machine door.

2. Load laundry into the drum, ensuring not to overload. Leave enough space for clothes to tumble freely.
3. Close the door firmly.

Adding Detergent and Additives

1. Pull out the detergent dispenser drawer.
2. Add the appropriate amount of detergent to the main wash compartment.
3. Add fabric softener or other additives to their respective compartments, if desired.
4. Push the dispenser drawer back in completely.

Selecting a Program

Turn the program selection knob to choose the desired wash cycle. The digital display will show the estimated cycle time and default settings. Available programs include:

- **Cotone:** For cotton garments.
- **Sintetici:** For synthetic fabrics.
- **Rapido 20':** A quick wash cycle for lightly soiled items.
- **Lana e Delicati:** For wool and delicate items.
- **Eco 40-60:** Energy-efficient program for cottons and mixed loads at 40-60°C.
- **20°C:** Low-temperature wash for various fabrics.
- **Centrifuga & Scarico:** Spin and drain cycle.
- **Pulizia Cestello:** Drum cleaning cycle.
- **Refresh Vapore:** Steam refresh cycle.
- **Lavaggio Intensivo:** Intensive wash for heavily soiled items.
- **Capi Scuri:** For dark garments.
- **Piumini:** For duvets and padded items.
- **Ciclo Da App:** Program controlled via the app.

Starting a Cycle

Press the Start/Pause button to begin the selected wash cycle. The indicator light will illuminate.

Canceling or Pausing a Cycle

To pause a running cycle, press the Start/Pause button. To cancel a cycle, press and hold the Start/Pause button for a few seconds until the machine resets.

End of Cycle

At the end of the cycle, the display will indicate 'End' or similar. The door can then be opened. Remove laundry promptly to prevent odors and wrinkles.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent detergent buildup and mold growth.

Cleaning the Filter

Locate the filter cover at the bottom right of the appliance (as seen in the product image). Open the cover, place a

shallow container underneath to catch any residual water, and carefully unscrew the filter. Clean it under running water and reinsert it securely.

Cleaning the Exterior

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Drum Cleaning Program

Use the 'Pulizia Cestello' program regularly (e.g., once a month) to clean the inside of the drum and remove any residue or odors. Run this cycle without laundry.

Winterization

If the appliance is to be stored in an unheated area, drain all water from the hoses and pump to prevent freezing and damage. Consult a qualified technician if unsure.

Troubleshooting

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; Start/Pause button not pressed.	Check power connection; ensure door is latched; press Start/Pause.
Water not filling	Water tap closed; inlet hose kinked or blocked.	Open water tap; straighten hose; check for blockages.
Water not draining	Drain hose kinked or blocked; filter clogged.	Straighten hose; clean filter.
Excessive vibration	Transit bolts not removed; machine not level; uneven load.	Remove transit bolts; adjust leveling feet; redistribute laundry.
Unpleasant odors	Detergent residue; mold buildup.	Run 'Pulizia Cestello' cycle; clean detergent dispenser.

Specifications

Feature	Specification
Model	WAM 762WB IT
Type	Freestanding Front-Load Washing Machine
Capacity	7 kg
Maximum Spin Speed	1200 rpm
Energy Class	A
Noise Level (Spin Cycle)	76 dB(A)
Dimensions (W x H x D)	600 mm x 845 mm x 496 mm
Weight	63 kg
Color	White
Control Type	Button

Warranty and Support

This Whirlpool appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty duration and coverage details. Keep your proof of purchase for warranty claims.

For technical assistance, spare parts, or to report a fault, please contact Whirlpool customer service. Contact information can typically be found on the Whirlpool website or in the documentation provided with your appliance. When contacting support, please have your appliance model number (WAM 762WB) and serial number ready.