

[Manuals.plus](#) /

› [Zostuic](#) /

› Zostuic Instant Print Kids Camera DC506 User Manual

Zostuic DC506

Zostuic Instant Print Kids Camera DC506 User Manual

Model: DC506

1. PRODUCT OVERVIEW

The Zostuic Instant Print Kids Camera DC506 is a multi-functional digital camera designed for children, featuring instant printing capabilities using Zero Ink Thermal Technology. It includes dual lenses for photos and selfies, 1080P HD video recording, and various creative features like frames and filters.



Image: Zostuic Instant Print Kids Camera DC506, showcasing its compact design and screen.

Package Contents:

- 1x Zostuic Instant Print Kids Camera
- 4 Rolls of Print Paper
- 1x 32GB Micro SD Card
- 1x Portable Lanyard
- 1x Type-C Charging Cable
- 1x User Manual

Printing Paper & Installation



Image: Visual representation of the camera and its included accessories: print paper, 32GB card, lanyard, and Type-C cable.

2. SETUP

2.1 Initial Charging

Before first use, charge the camera for at least 2 hours. The battery may enter "Deep Sleep" mode during long transit. Use a 5V/1A or 5V/2A adapter. Do not use fast chargers. If the camera is unresponsive, keep it charging and press and hold the Power button for 40 seconds continuously. Continue charging until full for normal power-on.

Your browser does not support the video tag.

Video: A demonstration of the camera's features, including charging and basic operation. This video is provided by Tami's Picks.

2.2 Inserting Print Paper

1. Push down the cover of the paper compartment.
2. Insert a roll of print paper into the compartment, ensuring the paper feeds correctly.
3. Close the camera cover securely.



Image: Step-by-step visual guide for loading print paper into the camera.

2.3 Inserting Micro SD Card

Locate the Micro SD card slot on the side of the camera. Gently insert the provided 32GB Micro SD card until it clicks into place. Ensure the camera is powered off before inserting or removing the card.

2.4 Powering On/Off

To power on the camera, press and hold the Power button for 3-5 seconds. To power off, press and hold the Power button again until the screen turns off.

3. OPERATING INSTRUCTIONS

3.1 Taking Photos

- **Front & Rear Dual-Lens:** Use the front lens for standard photos and the rear lens for selfies.
- **16X Digital Zoom:** Adjust zoom using the designated buttons to capture distant subjects.
- **Filters & Frames:** Navigate through the menu to select from over 25 frames and filters to add creative effects to your photos.
- **Self-Timer:** Activate the self-timer function for delayed photo capture.
- **Fill Light:** Use the built-in fill light for improved illumination in low-light conditions.

Dual Cameras, Double the Fun!

Make Selfies Easy for Kids



Image: The camera's dual-lens system, highlighting its capability for easy selfies.



Image: Demonstrates 16x digital zoom, fill light function, USB transfer, and self-timer feature.

3.2 Recording Videos

The camera supports 1080P HD video recording. Switch to video mode using the mode button and press the shutter button to start/stop recording.

Ultra HD 1080P Video



48MP Digital Photos (Color)



Instant Print (Black & White)



Image: Illustrates the camera's ability to record 1080P video and print black-and-white photos.

3.3 Instant Printing

The camera utilizes Zero Ink Thermal Technology to print black-and-white photos instantly. After taking a photo, press the print button to generate a physical copy. These prints can be used as coloring canvases for added creativity.

Color Your Imagination!

Print, Doodle, Decorate — Add Frames & Filters for Endless Fun



17 Unique Fun Stickers



Image: Shows a child coloring an instant print, demonstrating the creative aspect of the camera.

3.4 Playback

Access the playback mode to review captured photos and videos stored on the Micro SD card.

4. MAINTENANCE

4.1 Cleaning

Wipe the camera body with a soft, dry cloth. For the lens and screen, use a specialized lens cleaning cloth to avoid scratches. Do not use liquid cleaners directly on the camera.

4.2 Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

4.3 Replacing Print Paper

When the print paper runs out, follow the steps in Section 2.2 to replace the roll. Ensure you use compatible thermal print paper.

5. TROUBLESHOOTING

- **Camera not turning on/unresponsive:** Ensure the camera is fully charged. If unresponsive, keep it charging and press and hold the Power button for 40 seconds. Then, continue charging until full.
- **Poor print quality:** Check if the print paper is loaded correctly and is not damaged. Ensure the camera's battery is sufficiently charged.
- **"No card" message:** Ensure the Micro SD card is properly inserted into its slot. If the issue persists, try reinserting the card or using a different compatible Micro SD card.
- **Charging issues:** Use only a 5V/1A or 5V/2A adapter. Avoid fast chargers.

6. SPECIFICATIONS

Feature	Specification
Brand	Zostuic
Model Name	DC506
Special Feature	Built In Flash
Film Format Type	Instax (Thermal)
Included Components	Body & Accessories (Camera, 4 Rolls Print Paper, 32GB Card, Lanyard, Type-C Cable, User Manual)
Film Color	Black and White
Has Self-Timer	Yes
Video Capture Format	MP4
Video Capture Resolution	1080p
Effective Still Resolution	48 MP
Light Sensitivity (ISO Range)	100-800

Water Resistance Level	Not Water Resistant
File Format	JPEG
Battery Average Life	8 Hours
Viewfinder	LCD screen
Screen Size	2.4 Inches
Color	Pink

7. WARRANTY & SUPPORT

7.1 Warranty Information

This product comes with a 1-year manufacturer's warranty.

7.2 Customer Support

For any inquiries or assistance, please contact our 24-hour online customer support.
