

DC B0FVX4TTSJ

DC Wireless Keyboard and Mouse Combo

Model: B0FVX4TTSJ

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your DC Wireless Keyboard and Mouse Combo. This full-size ergonomic keyboard features a wrist rest and a silent 6-button mouse, designed for comfortable and efficient use with various devices.

PACKAGE CONTENTS

- Wireless Keyboard
- Wireless Mouse
- 2-in-1 USB Receiver (USB-A and USB-C compatible)
- User Manual (this document)

Note: AAA batteries for the keyboard (1x) and mouse (2x) are not included and must be purchased separately.

SETUP

1. Battery Installation

Install the required batteries into both the keyboard and mouse. Ensure correct polarity.

- **Keyboard:** Requires 1x AAA battery. Locate the battery compartment on the underside of the keyboard.
- **Mouse:** Requires 2x AAA batteries. Locate the battery compartment on the underside of the mouse.

After installing batteries, turn on the keyboard and mouse using their respective ON/OFF switches.



Image: Underside of the mouse, illustrating the battery compartment, the USB receiver storage slot, and the ON/OFF switch. The USB-C adapter is also visible.



Image: Diagram showing the battery requirements (1 AAA for keyboard, 2 AAA for mouse) and the auto-sleep feature for power saving.

2. Connecting the USB Receiver

The keyboard and mouse share a single USB receiver for connection. This receiver supports both USB-A and USB-C ports.

1. Locate the USB receiver, typically stored in the mouse's battery compartment.
2. Plug the USB receiver into an available USB-A or USB-C port on your computer or device. Use the included USB-C adapter if necessary.
3. The keyboard and mouse will automatically connect to your device. No additional software or drivers

are required.



Plug and Play

| Stable Connection |

**2 in 1**

**2.4G**

**33ft**

Notes: Both keyboard and mouse share a USB Receiver

Image: A close-up of the keyboard and mouse, showing the USB receiver plugged into a laptop, indicating a stable 2.4G wireless connection.

3. Adjusting Keyboard Tilt

For optimal typing comfort, the keyboard features foldable stands on the underside. Extend these stands to achieve an 8-degree tilt, which can help reduce wrist strain during prolonged use.

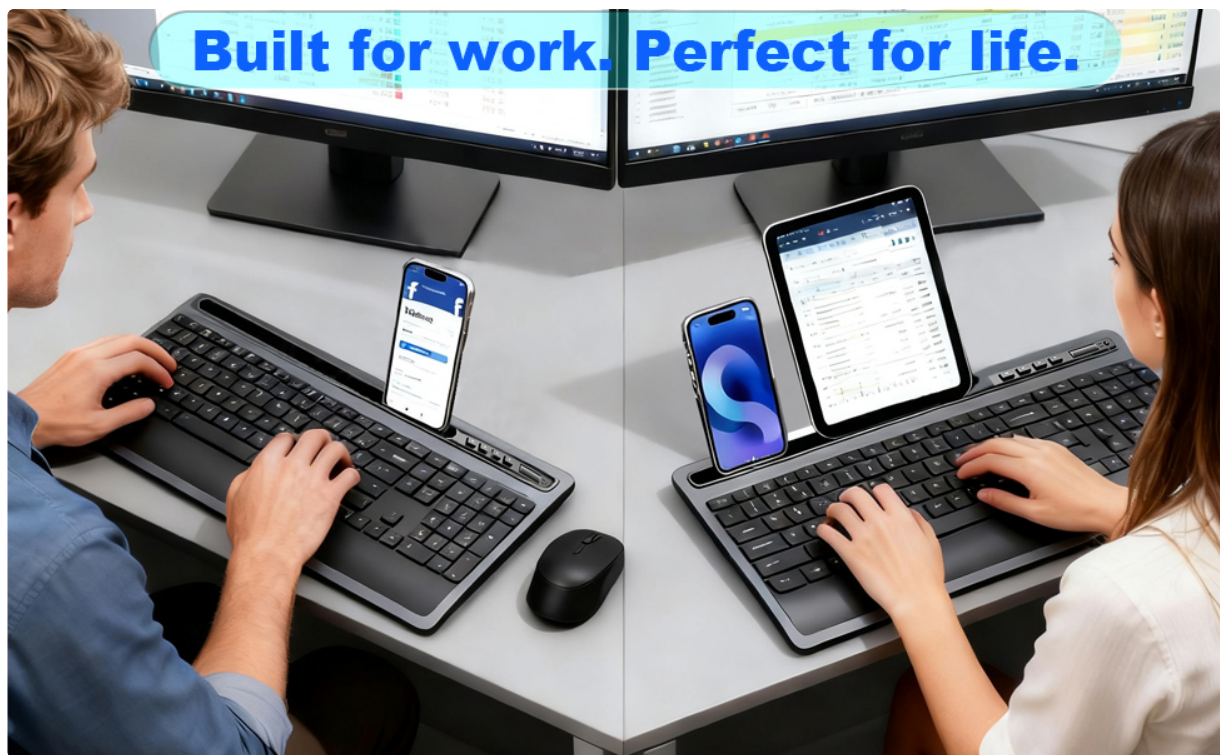


Image: A visual comparison demonstrating the ergonomic benefit of the integrated wrist rest, promoting a more natural hand position.



Image: The keyboard shown with its foldable stand extended, providing an 8-degree tilt for improved ergonomic comfort.

OPERATING INSTRUCTIONS

Keyboard Functions

The keyboard features a full-size layout with dedicated function keys and multimedia shortcuts.

- **Multimedia Keys:** Dedicated keys for Play/Pause, Stop, Previous Track, Next Track, Volume Up, Volume Down.
- **Function (Fn) Combinations:** Use the 'Fn' key in combination with F1-F12 for additional shortcuts such as Media Player, Volume control, Mute, Search, Refresh, Dormancy, My Computer, and Email.

- **Integrated Phone/Tablet Holder:** A slot above the function keys allows you to securely hold your smartphone or tablet for easy viewing and multitasking.

Simplify Your Workflow

Play/
Pause

Stop

Previous
Track

Next
Track

Volume +
Volume -

Calculator

My
Computer

Search

Refresh

Dormancy

Fn+F1
Media
Player

Fn+F2
Volume-
Volume+

Fn+F3
Volume-
Volume+

Fn+F4
Mute

Fn+F5
Previous
Track

Fn+F6
Next
Track

Fn+F7
Play/
Pause

Fn+F8
Stop

Fn+F9
Home
Page

Fn+F10
Email

Fn+F11
My
Computer

Fn+F12
Favorites

Fn+ 12
Combination
Shortcut Keys

6

Independent
Multimedia Keys

5

Unique
Function Keys

Image: A detailed view of the keyboard, illustrating the dedicated multimedia keys and the various functions accessible via the 'Fn' key combinations (F1-F12).

Ergonomic

Keyboard & Mouse Combo

| With Wrist Rest and Holder |



Image: A user operating the keyboard, with a smartphone and tablet placed in the integrated holder, demonstrating its utility for multitasking.

Wide Compatibility



Image: A close-up view of the integrated phone/tablet holder on the keyboard, showing a tablet securely placed within the slot.

Mouse Functions

The silent 6-button mouse offers precise control and quiet operation.

- **Buttons:** Left Click, Right Click, Scroll Wheel, DPI Adjustment, Forward, Back.
- **DPI Adjustment:** Cycle through DPI settings (800, 1200, 1600) to adjust cursor sensitivity.
- **Silent Clicks:** Designed for quiet operation, minimizing distractions.

Six Buttons Mouse



Image: An exploded view diagram of the mouse, labeling its six buttons (Left, Right, Scroll Wheel, DPI, Forward, Back) and indicating the adjustable DPI settings (800, 1200, 1600).

Compatibility

This combo is broadly compatible with various operating systems and devices:

- Windows
- macOS
- iOS
- Android
- Chrome OS

Compatible devices include desktops, laptops, tablets, Macbook, Personal Computer, Surface, and iMac.



Image: A graphic displaying the logos of Windows, Chrome OS, Mac OS, iOS, and Android, signifying the broad operating system compatibility of the keyboard and mouse combo.

Auto-Sleep Mode

To conserve battery life, both the keyboard and mouse feature an auto-sleep mode. If inactive for a period (e.g., 5 minutes), they will enter a low-power state. To wake them up, simply press any key on the keyboard or move/click the mouse.

MAINTENANCE

Cleaning

To clean your keyboard and mouse:

- Ensure both devices are turned off.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Avoid excessive moisture and do not spray cleaners directly onto the devices.
- For crevices, use compressed air or a soft brush.

Battery Replacement

When the devices become unresponsive or exhibit intermittent connectivity, it may be time to replace the batteries. Follow the battery installation steps in the Setup section.

TROUBLESHOOTING

- **No connection/Unresponsive:**
 - Ensure batteries are correctly installed and charged.
 - Verify both keyboard and mouse are switched ON.
 - Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port.
 - Move the devices closer to the receiver to rule out interference.
 - Restart your computer or device.

- **Lagging/Delayed response:**
 - Replace batteries if they are low.
 - Reduce distance between devices and receiver.
 - Avoid using the devices on metallic surfaces, which can interfere with the wireless signal.
- **Mouse cursor erratic:**
 - Clean the mouse sensor on the underside.
 - Use the mouse on a clean, non-reflective surface or a mouse pad.
 - Adjust DPI settings if the cursor is too fast or too slow.

SPECIFICATIONS

Product Dimensions	11.2 x 5.2 x 0.7 inches (Keyboard)
Item Weight	2.18 pounds
Connectivity Technology	2.4G Wireless (USB-A, USB-C)
Special Features	Ergonomic design, USB-C compatible, Volume Roller, Wrist Rest, Phone Holder
Compatible Devices	Macbook, Personal Computer, Surface, iMac, Windows, macOS, iOS, Android, Chrome OS
Mouse DPI Settings	800, 1200, 1600

115 Keys | Everything You Need |



Image: Technical drawing illustrating the precise dimensions of both the keyboard and the mouse.

WARRANTY INFORMATION

Please refer to the product packaging or the seller's information for specific warranty details. Typically, products come with a limited warranty covering manufacturing defects from the date of purchase.

SUPPORT

For further assistance or technical support, please contact the seller directly through your purchase platform or refer to the contact information provided on the product packaging.