



Manuals.plus /

- › Klwenas Maec /
- › Klwenas Maec 13QT Air Fryer Toaster Oven Combo (Model DFGDSG) User Manual

Klwenas Maec DFGDSG

Klwenas Maec 13QT Air Fryer Toaster Oven Combo User Manual

Model: DFGDSG

1. INTRODUCTION

Thank you for purchasing the Klwenas Maec 13QT Air Fryer Toaster Oven Combo. This appliance is designed to provide versatile cooking options, combining the functions of an air fryer, toaster, and convection oven. Please read this manual thoroughly before first use to ensure safe operation and optimal performance. Keep this manual for future reference.



Figure 1: The Kluwenas Maec 13QT Air Fryer Toaster Oven Combo in silver, with the door open revealing a basket of golden fries and a tray of croissants cooking inside. The control knobs for temperature, function, and timer are visible on the top panel.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.

- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

3.1 Components

- Main Unit (Air Fryer Toaster Oven)
- Frying Basket
- Baking Tray
- Mesh Rack
- Retrieval Clip (Tongs)
- Removable Crumb Tray (integrated at the bottom)

3.2 Specifications

- **Brand:** Klwenas Maec
- **Model Name:** Air Fryer Toaster
- **Model Number:** DFGDSG
- **Color:** Silver
- **Capacity:** 13 Quarts
- **Product Dimensions:** 12.6"D x 11.81"W x 12.6"H
- **Item Weight:** 9.9 pounds
- **Special Features:** Stain Resistant, Temperature Control, Timer, 360° Hot Air Circulation
- **Temperature Range:** 150°F to 450°F
- **Timer:** Up to 60 minutes
- **UPC:** 737985974551



Figure 2: The Klwenas Maec Air Fryer Toaster Oven with key dimensions indicated: 315mm width, 317mm height, 296mm depth. Internal dimensions are also shown: 200mm height, 240mm depth, 250mm width.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove all packaging materials from the oven and its accessories.
2. Check that all listed components are present and undamaged.
3. Remove any stickers or labels from the appliance.

4.2 Placement

1. Place the oven on a stable, heat-resistant, and level surface.
2. Ensure there is adequate space (at least 4 inches) on all sides of the oven for proper ventilation. Do not place it against a wall or under cabinets.
3. Keep the appliance away from flammable materials and heat sources.

4.3 Before First Use

1. Wipe the exterior of the oven with a damp cloth.
2. Wash all removable accessories (frying basket, baking tray, mesh rack, tongs) with warm, soapy water. Rinse thoroughly and dry completely.
3. Insert the crumb tray at the bottom of the oven.

4. Plug the power cord into a grounded electrical outlet.
5. To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at 400°F (200°C) on the 'Bake' function. A slight odor or smoke may be present, which is normal. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

The Klwenas Maec Air Fryer Toaster Oven offers 7-in-1 functionality for diverse cooking needs.

5.1 Control Panel Overview

The oven features three rotary knobs for precise control:

- **Temperature Knob:** Adjusts temperature from 150°F to 450°F.
- **Function Knob:** Selects cooking mode (Air Fry, Bake, Broil, Roast, Toast, Reheat, Convection Bake, Defrost).
- **Timer Knob:** Sets cooking time up to 60 minutes. Includes an 'OFF' position.
- **Power Indicator Light:** Illuminates when the oven is operating.

5.2 General Operation Steps

1. Place food on the appropriate accessory (frying basket, baking tray, or mesh rack).
2. Slide the accessory into the desired rack position inside the oven.
3. Close the oven door securely.
4. Rotate the **Function Knob** to select the desired cooking mode (e.g., 'AIR FRYER' for air frying, 'BAKE' for baking).
5. Rotate the **Temperature Knob** to set the desired cooking temperature.
6. Rotate the **Timer Knob** to set the desired cooking time. The power indicator light will illuminate.
7. The oven will begin cooking. A bell will sound when the timer reaches zero, and the oven will turn off automatically.
8. Carefully remove cooked food using the retrieval clip or oven mitts.

13 QT 4 Slice

Perfect Size for Family of 4



Figure 3: The Klwenas Maec 13QT Air Fryer Toaster Oven shown cooking a whole chicken. Surrounding the oven are examples of food it can prepare, including french fries (0.7 lb), a 7-inch pizza, 1.1 lb chicken, 1.1 lb fish, and 4 slices of toast, illustrating its versatile capacity.

5.3 Cooking Functions

- **Air Fry:** Utilizes 360° hot air circulation for crispy results with minimal oil. Ideal for fries, chicken wings, and other fried foods.
- **Bake:** For traditional baking of cakes, cookies, and casseroles.
- **Broil:** For grilling and browning the top of dishes.
- **Roast:** Perfect for roasting meats and vegetables.
- **Toast:** For perfectly browned toast and bagels.
- **Reheat:** Gently warms up leftovers.
- **Convection Bake:** Combines baking with convection for faster, more even cooking.
- **Defrost:** Thaws frozen foods.

Your browser does not support the video tag.

Video 1: This video demonstrates the operation of the Klwenas Maec Air Fryer Toaster Oven, showing how to set the temperature,

function, and timer knobs. It also illustrates various foods being cooked, such as chicken, pizza, fish, and french fries, highlighting the appliance's versatility and ease of use.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your appliance.

6.1 Cleaning Steps

1. **Cool Down:** Always unplug the oven and allow it to cool completely to room temperature before cleaning.
2. **Remove Accessories:** Take out the frying basket, baking tray, mesh rack, and crumb tray.
3. **Wash Accessories:** Wash all removable accessories in warm, soapy water. For stubborn food residue, soak them before cleaning. Rinse thoroughly and dry completely. These accessories are generally not dishwasher safe unless specified.
4. **Clean Interior:** Wipe the interior walls with a damp cloth and mild detergent. For baked-on grease, a non-abrasive cleaner can be used. Avoid harsh chemicals or abrasive sponges that could damage the non-stick coating or stainless steel finish.
5. **Clean Exterior:** Wipe the exterior of the oven with a damp cloth. The stainless steel finish is designed to be anti-fingerprint.
6. **Crumb Tray:** The removable crumb tray makes cleanup quick and simple. Empty and clean it after every use to prevent grease buildup and potential fire hazards.
7. **Reassemble:** Once all parts are clean and dry, reassemble them into the oven.



Figure 4: An image illustrating the benefit of air frying, showing a comparison between deep-fried food (left) and air-fried food (middle), emphasizing 'Less Oil More Crisp'. The Klwenas Maec Air Fryer Toaster Oven is visible on the right, with various cooked dishes in the foreground.

6.2 Storage

Ensure the oven is clean and dry before storing. Store it in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Klwenas Maec Air Fryer Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check if the timer knob is set to a cooking duration (not 'OFF').
Food is not cooking evenly.	Overcrowding the basket/tray; incorrect temperature/time; food not flipped/shaken.	Avoid overcrowding; cook in smaller batches if necessary. Adjust temperature and time according to recipe. For air frying, shake or flip food halfway through cooking.
White smoke coming from the oven.	Grease or food residue on heating elements or interior; cooking fatty foods.	Unplug and allow to cool. Clean the interior and heating elements thoroughly. For fatty foods, ensure the crumb tray is clean and consider using parchment paper on the baking tray below the air fry basket to catch drips.
Food is not crispy.	Too much oil; overcrowding; incorrect temperature/time.	Use minimal oil (a light spray is often sufficient). Do not overcrowd the basket. Ensure correct air fry temperature and time are used.

8. WARRANTY AND SUPPORT

Klwenas Maec is committed to providing high-quality products. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Klwenas Maec customer service through the retailer where the product was purchased or visit the official Klwenas Maec store online.

Online Store: Klwenas Maec Store