

Korser 0667GREY

Korser 0667GREY Power Recliner Chair User Manual

Model: 0667GREY

1. INTRODUCTION

Welcome to your new Korser Power Recliner Chair. This manual provides essential information for the safe and efficient use of your electric recliner. Please read it thoroughly before assembly and operation to ensure proper functionality and longevity of your product.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in injury or product damage.

- **Weight Limit:** Do not exceed the maximum weight recommendation of 350 pounds (158 kg).
- **Assembly:** Follow all assembly instructions carefully. Incorrect assembly can lead to instability and potential injury.
- **Children and Pets:** Keep children and pets away from the chair's moving parts, especially during operation, to prevent entrapment or injury.
- **Power Cord:** Ensure the power cord is not pinched, tangled, or placed under the chair where it could be damaged. Keep it away from heat sources and sharp edges.
- **Clearance:** Ensure adequate space around the chair for full reclining without obstruction.
- **Liquid Spills:** Avoid spilling liquids on the chair, especially near electrical components.
- **Unplug When Not in Use:** Unplug the chair from the power outlet when not in use or before cleaning and maintenance.

3. PACKAGE CONTENTS

The Korser Power Recliner Chair is typically shipped in two boxes. Please verify all components are present before beginning assembly. If any parts are missing or damaged, contact customer support immediately.

- Backrest
- Seat Base with Footrest Mechanism
- Armrests (2)
- Power Adapter
- Remote Control
- Instruction Manual

Product Dimension



Image: Overview of the Korser Power Recliner Chair components and key dimensions, indicating a 350 lbs capacity and 30-minute installation time.

4. SETUP AND ASSEMBLY

The Korser Power Recliner Chair is designed for tool-free assembly, typically taking around 30 minutes. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the seat base. Slide the backrest down firmly until it clicks into place.
3. **Install Armrests:** Slide each armrest onto the side rails of the seat base, ensuring they are securely attached.
4. **Connect Power:** Locate the power cable extending from the chair. Connect it to the power adapter, then plug the adapter into a standard wall outlet.
5. **Remote Connection:** Plug the remote control cable into the designated port on the side of the chair.
6. **Position Chair:** Place the chair in its desired location, ensuring there is sufficient space behind and in front of it for full reclining.

Your browser does not support the video tag.

Video: This video demonstrates the assembly process and initial setup of the Korser Power Recliner Chair, showing how to connect the main components and power.

5. OPERATING INSTRUCTIONS

Your Korser Power Recliner Chair features an easy-to-use electric control for seamless adjustment.

5.1. Remote Control Functions

The remote control allows you to adjust the chair's position effortlessly. It typically features buttons for:

- **Recline/Lie-Flat:** Press and hold the appropriate button to smoothly recline the backrest and extend the footrest to a lie-flat position (up to 170°).
- **Upright/Sitting:** Press and hold the appropriate button to return the chair to an upright sitting position (105°) and retract the footrest.
- **Adjust Tilt Angle:** Use the up/down arrows to fine-tune the recline angle to your preferred comfort level.

Convenient Electric Recliner



Image: Close-up of the remote control for the Korser Power Recliner Chair, showing the buttons for adjusting the chair's position.

5.2. Reclining Positions

The chair offers a range of reclining positions to suit various activities:

- **Upright (approx. 105°):** Ideal for reading, working, or engaging in conversation.
- **Partial Recline (approx. 120°):** Comfortable for watching TV or light relaxation.
- **Lie-Flat (approx. 170°):** Perfect for napping or deep relaxation.

LAY FLAT POWER RECLINER

Reduce spinal pressure and enhance relaxation



Image: The Korser Power Recliner Chair demonstrating different reclining angles for reading, watching, and napping.

6. MAINTENANCE

Regular maintenance will help keep your Korser Power Recliner Chair in excellent condition.

6.1. Fabric Care

The high-quality chenille fabric is designed for durability and easy cleaning.

- **Spot Cleaning:** For localized stains, gently blot with a clean, damp cloth and a mild, pH-neutral detergent. Avoid rubbing vigorously, which can spread the stain or damage the fabric.
- **Vacuuming:** Regularly vacuum the chair using a soft brush attachment to remove dust, crumbs, and pet hair.
- **Avoid Harsh Chemicals:** Do not use bleach, abrasive cleaners, or solvents, as these can damage the fabric and color.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading.



Image: A close-up view of the skin-friendly chenille fabric, highlighting its soft, cozy, and durable qualities.

6.2. Mechanical and Electrical Care

- **Check Connections:** Periodically inspect all electrical connections (power adapter, remote control cable) to ensure they are secure and undamaged.
- **Moving Parts:** The reclining mechanism is designed to be maintenance-free. Do not attempt to lubricate or disassemble any moving parts.
- **Power Off:** Always unplug the chair from the power outlet before performing any cleaning or maintenance.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair does not recline or move.	No power, loose connection, or power adapter issue.	Ensure the power adapter is securely plugged into both the chair and a working wall outlet. Check for any kinks or damage to the power cord. Try a different outlet.
Footrest does not extend/retract smoothly.	Obstruction or mechanism issue.	Check for any objects obstructing the footrest mechanism. Ensure the chair is on a level surface.
Unusual noises during operation.	Loose components or mechanism issue.	Verify all assembled parts are secure. If noises persist, discontinue use and contact customer support.
Remote control is unresponsive.	Loose connection or remote malfunction.	Ensure the remote control cable is firmly plugged into the chair. If the issue continues, contact customer support for a replacement.

If these solutions do not resolve the issue, please contact Korser customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Korser
Model Number	0667GREY
Color	Grey
Product Dimensions (D x W x H)	38.9" x 37.4" x 43.3"
Seat Depth	22 inches
Maximum Weight Recommendation	350 Pounds (158 kg)
Material	Chenille Fabric, Foam Fill
Reclining Positions	3 (Adjustable from 105° to 170°)
Assembly Required	Yes, tool-free
Item Weight	74 pounds (33.5 kg)



Image: Detailed product dimensions of the Korser Power Recliner Chair, including width, depth, and height measurements in both upright and reclined positions.

9. WARRANTY AND CUSTOMER SUPPORT

Korser is committed to providing high-quality products and excellent customer service.

- **Customer Support:** If you have any questions, concerns, or require assistance with your recliner, our customer support team is available to help. Please refer to your purchase documentation for specific contact information (phone, email, or website).
- **Protection Plans:** Optional extended protection plans (e.g., 2-Year or 3-Year plans) may be available for purchase separately to provide additional coverage beyond the standard warranty. Check with your retailer for details.

