

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Brondi](#) /
- › [Brondi MAXY Flipper Dual SIM Phone User Manual](#)

## Brondi Flipper

# Brondi MAXY Flipper Dual SIM Phone User Manual

Model: Flipper

## 1. INTRODUCTION

This user manual provides comprehensive instructions for the Brondi MAXY Flipper Dual SIM mobile phone. Please read this manual carefully before using your device to ensure proper operation and to maximize its features. Keep this manual for future reference.



Image 1.1: Brondi MAXY Flipper Dual SIM Phone. This image shows the front view of the Brondi MAXY Flipper phone, highlighting its compact design and physical keypad.

## 2. PACKAGE CONTENTS

Ensure all items are present in the package:

- Brondi MAXY Flipper Mobile Phone
- Type-C Charger
- Battery
- User Manual

## 3. SETUP

---

### 3.1. Installing the Battery

1. Remove the back cover of the phone by gently prying it open from the notch.
2. Align the battery contacts with the terminals inside the phone.
3. Press the battery down until it is securely in place.
4. Replace the back cover, ensuring it clicks into position.

### 3.2. Inserting SIM Cards

The Brondi MAXY Flipper supports Dual SIM functionality.

1. With the battery removed, locate the SIM card slots.
2. Insert your SIM cards into the designated slots, ensuring the gold contacts face downwards and the cut corner aligns correctly.
3. Reinstall the battery and back cover.

### 3.3. Charging the Battery

1. Connect the Type-C charger to the charging port at the bottom of the phone.
2. Plug the charger into a power outlet.
3. The charging indicator will appear on the screen. Allow the phone to charge fully before first use.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Power On/Off

- To power on: Press and hold the **Power/End Call** button until the screen lights up.
- To power off: Press and hold the **Power/End Call** button, then select "Power off" from the options.

### 4.2. Making Calls

1. Enter the phone number using the keypad.
2. Press the **Call** button (usually green) to initiate the call.
3. To end a call, press the **End Call** button (usually red).

### 4.3. Answering Calls

When an incoming call rings, press the **Call** button to answer. To reject a call, press the **End Call** button.

### 4.4. Speed Dial

The phone supports direct memories for speed dial from 2 to 9.

1. Go to *Menu > Contacts > Speed Dial*

2. Select a number (2-9) and assign a contact from your phonebook.
3. To use, press and hold the assigned number key on the keypad.

## 4.5. Messaging

To send and receive SMS messages:

1. Go to *Menu > Messages > Write Message*
2. Enter your message using the keypad.
3. Enter the recipient's number or select from contacts.
4. Select "Send".

## 4.6. Camera

The phone features a 1.3 MP camera with flash.

- To access the camera, go to *Menu > Camera*.
- Use the navigation keys to adjust settings.
- Press the **Center/OK** button to take a photo.

## 4.7. Bluetooth

To connect to other Bluetooth devices:

1. Go to *Menu > Settings > Connectivity > Bluetooth*
2. Turn Bluetooth **On**.
3. Select "Search for devices" to find available devices.
4. Select the desired device and pair using the provided passkey if required.

# 5. MAINTENANCE

---

## 5.1. Cleaning the Device

Use a soft, dry cloth to clean the phone's screen and body. Avoid using liquid cleaners or abrasive materials.

## 5.2. Battery Care

- Do not expose the battery to extreme temperatures.
- Use only the original Brondi charger.
- If the phone will not be used for an extended period, charge the battery to about 50% and store it in a cool, dry place.

## 5.3. Software Updates

Check for available software updates periodically through the phone's settings menu to ensure optimal performance and security. (Note: Software updates are not guaranteed for this model.)

# 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Phone does not power on	Low battery; Battery not installed correctly	Charge the battery; Reinstall the battery correctly
Cannot make or receive calls	No SIM card; SIM card not inserted correctly; No network signal	Insert SIM card; Reinsert SIM card; Move to an area with better signal
Poor call quality	Weak network signal; Obstructions	Move to an open area; Avoid using in enclosed spaces
Battery drains quickly	Many applications running; High screen brightness; Old battery	Close unused applications; Reduce screen brightness; Consider replacing battery
Bluetooth not connecting	Bluetooth off; Device out of range; Pairing issue	Ensure Bluetooth is on; Move devices closer; Re-pair the devices

## 7. SPECIFICATIONS

Feature	Detail
Brand	Brondi
Model Name	Flipper
Item Weight	200 grams
Battery	1 Non-standard battery (included)
Memory Capacity	1 GB
Installed Flash Memory Size	8 GB
Digital Storage Capacity	8 GB
Operating System	Proprietary
Additional Features	Dual SIM, Backlit Keys, Speakerphone, Vibration
Included Components	Flipper Mobile Phone, Type-C Charger, Battery, User Manual
Number of Items	1
Display	LCD
Optical Sensor Resolution	1.3 MP
Batteries Included?	Yes
Battery Power Rating	800 Milliamper-hours (mAh)
Cellular Technology	2G
Connector Type	Bluetooth
Human Interface Input	Alphanumeric Keypad
Form Factor	Slider

Feature	Detail
Wireless Provider	All carriers
Wireless Network Technology	GSM
Number of SIM Card Slots	Dual SIM

## 8. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included in your product package or visit the official Brondi website. Keep your proof of purchase for warranty claims.

**Note:** The product was available on Amazon.it starting October 13, 2025. Software updates are not guaranteed for this model.