

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bhagdaoe](#) /

› [Bhagdaoe 4K Digital Camera C66 User Manual](#)

Bhagdaoe C66

Bhagdaoe 4K Digital Camera C66 User Manual

Model: C66 | Brand: Bhagdaoe

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Bhagdaoe 4K Digital Camera C66. Please read it thoroughly before using the product to ensure optimal performance and longevity. This camera is designed for ease of use, making it suitable for beginners and enthusiasts in photography and vlogging.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x 4K Camera Body
- 2x High-Capacity Battery
- 1x 32GB TF Card
- 1x USB Cable
- 1x User Manual
- 1x Camera Lanyard
- 1x Camera Bag



Image: The camera and its complete set of accessories, including batteries, SD card, and cables.

PRODUCT OVERVIEW

The Bhagdaoe C66 is a versatile 4K digital camera designed for capturing high-quality photos and videos. It features a 64MP CMOS sensor, 16X digital zoom, and a 2.88-inch 180° flip screen, making it ideal for various photography and vlogging needs.



Image: Front view of the camera with its flip screen and included accessories.

Key Features

- **4K Digital Camera with Autofocus:** Captures vibrant 64MP photos and records 1080p video at 30fps. Features a built-in fill light for low-light conditions.
- **2.88" 180° Flip Screen:** Rotatable screen for easy selfies, group photos, and video recording from various angles.
- **Multi-Function Photography:** Mode dial for quick function switching, including date stamp, exposure compensation, video pause/playback, time-lapse, slow-motion, 16x digital zoom, image stabilization, burst shooting, smile detection, self-timer, and artistic filters.
- **Portable Design:** Lightweight and compact, perfect for travel and on-the-go use.



Image: Visual summary of the camera's main features.

SETUP

1. Battery and SD Card Installation

1. Slide the battery cover to the right to open the compartment.
2. Insert the TF card (32GB included) into the designated slot until it clicks into place. Ensure correct orientation.
3. Place the high-capacity battery correctly into the battery compartment.
4. Close the battery cover securely.

Note: Ensure the battery is inserted in the correct direction. If installed incorrectly, the camera will not charge or power on.

Steps for Installing the Battery



Slide the battery cover right to open

Insert the TF card until it clicks

Place the battery correctly

Close the battery cover

Note: Please ensure that the battery is inserted in the correct direction. If the battery is installed in the opposite direction, it will not be able to charge.

Image: Step-by-step guide for battery and SD card installation.

2. Charging the Battery

Connect the camera to a power source using the provided USB cable. The camera can be charged directly or by using an external battery charger (if included or purchased separately). Ensure the battery is fully charged before first use.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the Power button (usually located on the top or side) to turn the camera on or off. The flip screen will display a welcome message upon startup.

2. Mode Selection

Rotate the mode dial on the top of the camera to select your desired shooting mode. Available modes include:

- **Auto:** General purpose shooting.
- **Beauty:** Enhances facial features.
- **Continuous Shot:** Captures multiple images in quick succession.
- **Portrait:** Optimizes for human subjects.
- **Beach:** Adjusts settings for bright, outdoor scenes.
- **Retro:** Applies a vintage filter.
- **Night Scene:** Improves low-light performance.
- **Negative Film:** Applies a negative film effect.
- **Video:** For recording video footage.
- **Slow Motion:** Records video at a higher frame rate for slow-motion playback.
- **Time-Lapse:** Captures a series of images over time to create a time-lapse video.

Image: The camera's mode dial with various shooting options.

3. Taking Photos

Once a photo mode is selected, frame your shot using the flip screen. Gently press the shutter button halfway down to activate autofocus, then press it fully to capture the image.

4. Recording Videos

Switch the mode dial to 'Video'. Press the shutter button to start recording. Press it again to stop. Some modes allow for pausing and resuming video recording.

5. Using the Flip Screen

The 2.88-inch screen can be rotated 180° to face forward, allowing for easy self-portraits and vlogging. Adjust the screen to your preferred viewing angle.



Image: The camera's flip screen in action for selfies.

6. Digital Zoom

Use the zoom controls (often marked 'W' for wide and 'T' for telephoto) to adjust the 16X digital zoom. This allows you to capture distant subjects with clarity.

USB charging & Files Transfer

- Easy charging and image transfer, with video calls, live streaming, vlogging, and more.
- An Ideal Gift for Kids, Adults and Everyone



Image: Demonstration of the camera's 16X digital zoom.

7. Special Features

- **Built-in Fill Light:** Activates automatically or can be manually controlled to enhance visibility in low-light conditions.
- **Anti-Shake:** Helps stabilize images and videos, reducing blur from camera movement.
- **Self-Timer:** Set a delay (e.g., 2s, 5s, 10s) before a photo is taken, useful for group shots or self-portraits.
- **Smile Detection:** Automatically captures a photo when a smile is detected.
- **Artistic Filters:** Apply various filters to your photos for creative effects.

An ideal present for beginners

Ideal gift for teenagers and beginner photographers



Image: Overview of various camera functions like self-timer, flash, and anti-shake.

CONNECTIVITY

1. USB File Transfer

Connect the camera to your computer using the provided USB cable. The camera will appear as a removable disk, allowing you to transfer photos and videos directly to your computer.

Webcam & USB Transfer

This high-quality camera is perfect for videos and vlogging, with easy USB-C file sharing.

Image: Camera connected to a laptop for file transfer and webcam use.

2. Webcam Functionality

When connected to a computer via USB, select the 'PC Camera' mode on the camera. This allows you to use the camera for video calls, live streaming, and online teaching.

MAINTENANCE

- Keep the camera clean using a soft, dry cloth. For the lens, use a specialized lens cleaning cloth.
- Avoid exposing the camera to extreme temperatures, humidity, or direct sunlight for extended periods.
- Store the camera in its protective bag when not in use.
- Ensure batteries are fully charged before storage if not used for a long time.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on	Low battery; incorrectly inserted battery	Charge battery; reinsert battery correctly
Cannot take photos/videos	SD card full; SD card not inserted; incorrect mode	Delete files or replace SD card; insert SD card; select correct mode
Poor image quality	Low light; dirty lens; incorrect settings	Use fill light; clean lens; adjust exposure/ISO settings
Cannot connect to computer	Faulty USB cable; incorrect camera mode	Try another USB cable; ensure 'PC Camera' mode is selected

SPECIFICATIONS

Feature	Detail
Model Name	C66

Feature	Detail
Photo Sensor Resolution	64 MP
Video Resolution	3840p (4K) at 30 fps
Optical Zoom	16x
Screen Size	2.88 Inches
Display Type	LCD, 180° Flip
Memory Storage Capacity	32 GB (TF Card included)
Auto Focus Technology	Hybrid
Image Stabilization	Optical
Battery Type	Lithium Ion AA batteries (2 included)
Connectivity Technology	USB
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

Your Bhagdaoe 4K Digital Camera C66 comes with a 1-year replacement and refund warranty. For any questions, technical assistance, or warranty claims, please contact our customer support team. Refer to the contact information provided in the packaging or on the official Bhagdaoe website.