

Leeshyah B0FW4LM98L

Leeshyah Wooden Grocery Store Playset

Instruction Manual - Model: B0FW4LM98L

INTRODUCTION

Welcome to your new Leeshyah Wooden Grocery Store Playset. This manual provides important information for assembly, operation, maintenance, and safety. Please read it thoroughly before use to ensure a safe and enjoyable play experience for your child.

SAFETY INFORMATION

This product meets ASTM and CPC safety standards.

- **Age Recommendation:** Suitable for children aged 36 months (3 years) and older.
- **Adult Supervision:** Adult supervision is recommended during play.
- **Small Parts:** This playset may contain small parts. Ensure all components are securely assembled before allowing children to play.
- **Choking Hazard:** Keep small accessories away from children under 3 years of age.
- **Material:** Crafted from solid wood with rounded edges and non-toxic finish.
- **Stability:** Ensure the playset is placed on a flat, stable surface to prevent tipping.

SETUP AND ASSEMBLY

The playset requires assembly. Follow these general steps. Refer to the included separate assembly guide for detailed, step-by-step instructions and diagrams.

1. Unpack all components from the packaging. Verify all parts are present against the parts list in the separate assembly guide.
2. Assemble the main wooden structure of the grocery store playset according to the provided diagrams.
3. Attach the checkout counter, shelves, and other structural elements.
4. Install the manual conveyor belt mechanism.
5. Place the pretend scanner, cash register, and other accessories in their designated areas.

6. Ensure all screws and fasteners are tightened securely before use.

Note: Assembly may take several hours. It is recommended to have two adults for easier assembly.

Visual Guide: Assembled Playset



Image: A fully assembled wooden grocery store playset, showing a child and an adult interacting with the checkout counter and shelves. The playset features a green and natural wood finish.

Sized for Real Play Corners

Clear L 29.5in × W23.2in × H35.8in shown for easy room planning.



Image: An overhead view of the assembled playset with dimensions labeled: Length 29.5 inches (75cm), Width 23.2 inches (59cm), Height 35.8 inches (91cm).

OPERATING INSTRUCTIONS

Manual Conveyor Belt

The playset features a manual conveyor belt for realistic play. To operate:

1. Place toy items (sold separately) onto the conveyor belt surface.
2. Turn the handle located on the side of the checkout counter.
3. The belt will move, transporting items towards the scanner area.

Conveyor Belt 🥬

The grocer can crank the conveyor belt to easily deliver goods to the scanner.



Image: A hand turning the gray handle of the manual conveyor belt, with toy food items on the belt. The sign "Next Customer" is visible.


Pretend Scanner and Cash Register

Engage in realistic checkout scenarios:

1. Use the wooden pretend scanner to "scan" items as they arrive from the conveyor belt.
2. Utilize the toy cash register for transactions. It includes a receipt roll, play money, and coins.
3. Swipe the pretend credit card through the card swiper for card payments.

Mini POS, Major Learning

Scan items, total the bill, make change—early math made fun.

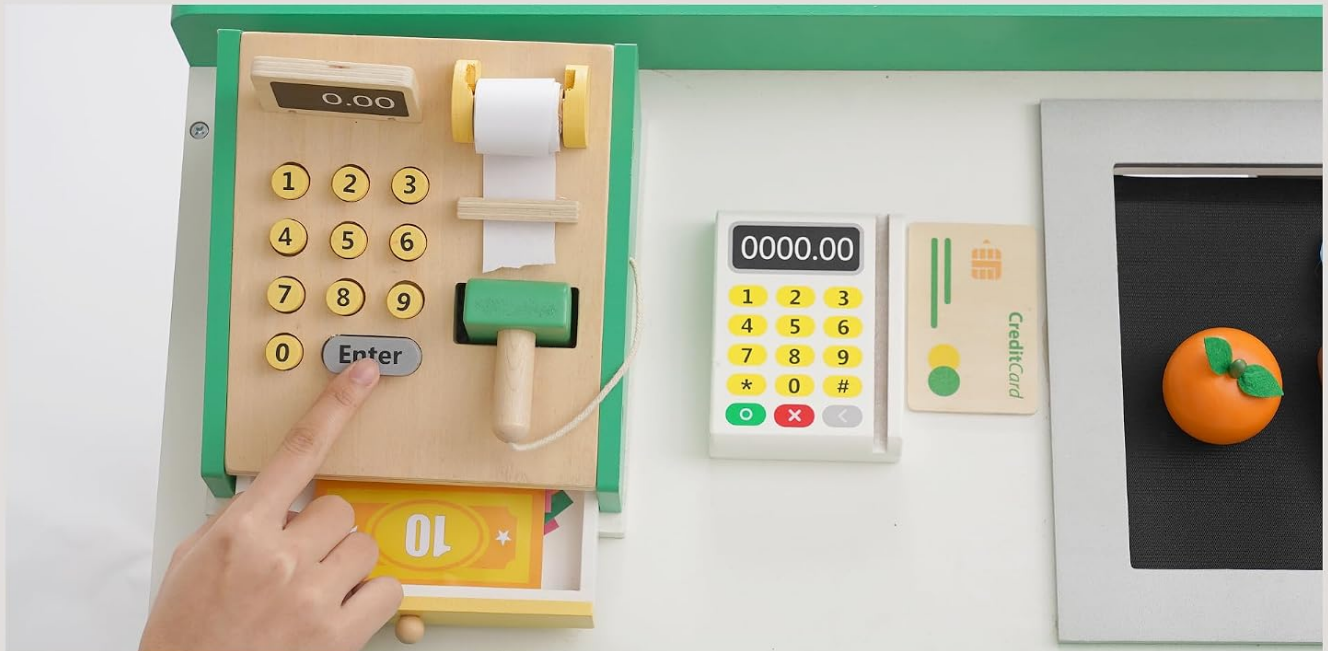

Pretend Scanner



Shopping Receipt



Card Swipe



Money & Coins

Image: A detailed view of the playset's checkout area, showing the wooden cash register with buttons and a paper roll, a pretend scanner, and a card swiper with a toy credit card.

Display Sections

Organize and display toy food items (sold separately) in the various sections:

- **Spice & Condiment Station:** Top shelf for small items.
- **Bean Section:** Compartments for bulk items.
- **Refrigerated Food:** Clear door section for pretend cold goods.
- **Fruit & Vegetable Section:** Baskets and shelves for produce.
- **Chalkboard:** Use chalk (not included) to write "Today's Specials" or other messages.



Your Mini Market Map

Labelled zones make role-play clear and fun.

Image: A diagram of the playset with numbered labels pointing to different sections: Spice & Condiment Station, Bean Section, Refrigerated Food, Card Swipe, Open/Closed Placard, Fruit & Vegetable Section, and Chalkboard.

Official Product Video

Your browser does not support the video tag.

Video: An official product video from Leeshyah US demonstrating the features and play possibilities of the Wooden Grocery Store Playset for Kids. It shows children and adults interacting with the various components, including the conveyor belt and cash register.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, to preserve the wood.
- **Wood Care:** As a wooden product, avoid prolonged exposure to moisture.

TROUBLESHOOTING

Conveyor Belt Not Moving Smoothly:

Possible Cause: Debris caught in the mechanism or loose components.

Solution: Inspect the belt and its track for any obstructions. Ensure the handle and belt mechanism are securely attached and not overtightened during assembly. If the issue persists, refer to the assembly guide for re-checking the belt installation steps.

Playset Feels Unstable:

Possible Cause: Loose fasteners or uneven placement.

Solution: Check all screws and bolts, tightening any that are loose. Ensure the playset is on a flat, level surface. If the floor is uneven, consider placing shims under the base for stability.

Missing or Damaged Parts:

Solution: If you discover missing or damaged parts upon unboxing, please contact Leeshyah customer support immediately for assistance. Do not attempt to assemble with damaged parts.

SPECIFICATIONS

Feature	Detail
Brand	Leeshyah
Model Number	B0FW4LM98L
Material	Wood
Dimensions (L x W x H)	29.5" x 23.2" x 35.8" (75cm x 59cm x 91cm)
Recommended Age	36 Months and Up
Included Components	Playset components, User Manual (toy food sold separately)

WARRANTY AND SUPPORT

For warranty information, replacement parts, or customer support, please contact Leeshyah directly through their official website or the retailer where the product was purchased. Please have your model number (B0FW4LM98L) and purchase date available when contacting support.

Manufacturer: HangzhouSaipoguojimaoyiyouxiangonsi

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question